

Installation, Operation, Maintenance Manual



NBS[®]90 SP & NBS[®]90 PolySort Narrow Belt Sorter (NBS)

P/N: 1193974

Revision Date: 10/27/2020



NBS90 SP (Small Parcels)



NBS90 PolySort

Table of Contents

CHAPTER 1: IOM INTRODUCTION	5
CHAPTER 2: MHS Conveyor POLICIES	6
2.1: MHS Conveyor RECOMMENDS PROPER LABELS FOR CONVEYOR TYPES	8
2.2: WARNINGS AND SAFETY INSTRUCTIONS	9
2.2.1: <i>Warnings and Safety Instructions</i>	10
2.3: MHS Conveyor CONTROLS SAFETY GUIDELINES	12
CHAPTER 3: NBS®90 POLYSORT INTRODUCTION	14
3.1: NBS90 POLYSORT APPLICATION OPTIONS	14
CHAPTER 4: NBS®90 SP (SMALL PARCELS) INTRODUCTION	18
4.1: NBS90 SP APPLICATION OPTIONS	18
CHAPTER 5: DEFINITION OF TERMS	21
5.1: PRODUCT DESCRIPTION EXAMPLES	23
CHAPTER 6: NBS RECEIVING & SITE PREPARATION	24
6.1: NBS PARTS INVENTORY & IDENTIFICATION	25
CHAPTER 7: NBS PARTS INVENTORY & IDENTIFICATION	26
CHAPTER 8: NBS INSTALLATION DETAILS	27
8.1: NBS GENERAL ELECTRICAL REQUIREMENTS	28
8.2: NBS90 POLYSORT MHS Conveyor-ERMANCO CONTROLS GUIDELINES	30
8.2.1: <i>NBS90 PolySort Sorter with Ethernet/IP comes pre-mounted from the factory</i>	33
8.2.2: <i>NBS90 PolySort Programmable Wheeled Encoder</i>	38
8.3: NBS90 SP ELECTRICAL CONTROL ENCLOSURE	39
8.4: NBS GEAR MOTOR ACTIVATION	40
8.5: NBS ELEVATIONS	42
8.6: NBS SUPPORTING ARRANGEMENT	42
8.7: NBS SUPPORTS & CONNECTIONS	43
8.8: NBS90 POLYSORT BED CONNECTION KIT	44
8.9: NBS90 POLYSORT COMPONENT ORIENTATION	45
8.10: NBS90 POLYSORT TRANSFER GENERAL LAYOUT	46
8.11: NBS90 POLYSORT SENSING SWITCHES	47
8.12: NBS90 SP SORTER TRANSFER GENERAL LAYOUT	48
8.13: NBS90 POLYSORT CEILING SUPPORTED	49
8.14: NBS ALUMINUM EXTRUSION T-NUT CONNECTORS	51
8.15: NBS BELT INSTALLATION	52
8.16: NBS BELT SPECIFICATIONS AND LACING	54
8.16.1: <i>NBS-90 PolySort Belt Replacement</i>	54

8.16.2: NBS-90 SP Belt Replacement.....	54
CHAPTER 9: NBS PNEUMATIC GENERAL GUIDELINES	55
9.1: NBS90 POLYSORT PNEUMATIC	56
9.2: NBS90 POLYSORT AIR SUPPLY REQUIREMENTS	57
9.3: NBS90 SP AIR SUPPLY REQUIREMENTS	58
9.4: NBS90 SP & POLYSORT AIR LINE CONNECTIONS	59
9.5: NBS90 SP SOLENOIDS.....	60
9.6: NBS AIR REGULATOR LOCK OUT VALVE ON AND OFF POSITION.....	61
9.7: NBS COMMISSIONING OF EQUIPMENT.....	62
9.7.1: General.....	62
9.7.2: Mechanical Static Checkout.....	62
9.7.3: Mechanical Dynamic Checkout.....	63
CHAPTER 10: NBS MAINTENANCE & TROUBLESHOOTING	64
10.1: GENERAL	64
10.2: GEARMOTOR	64
10.3: ROLLERS.....	65
10.4: AIR SYSTEM	65
10.5: MOTOR CONTROLS	66
10.6: NBS MAINTENANCE CHECKLIST	67
10.7: MAINTENANCE SCHEDULE	68
10.8: NBS TROUBLESHOOTING GUIDE.....	70
10.9: NBS REPAIR PROCEDURES.....	72
CHAPTER 11: PARTS IDENTIFICATION	73
11.1: REPLACEMENT PARTS IDENTIFICATION.....	73
11.2: SPARE PARTS PRIORITY LEVEL EXPLANATIONS	73
11.3: NBS90 POLYSORT INTERMEDIATE BED AR W/AIR TAKE-UP 4'0".....	74
11.3.1: Replacement Parts – NBS90 PolySort Intermediate Bed AR W/Air Take-up 4'0".....	75
11.4: NBS90 POLYSORT STANDARD END DRIVE AR	76
11.4.1: Replacement Parts – NBS PolySort Standard End Drive-AR.....	77
11.5: NBS90 POLYSORT BELT TAKE-UP	78
11.5.1: Replacement Parts – NBS90 PolySort Belt Take-up	78
11.6: NBS90 POLYSORT TRANSFER ASSEMBLY	79
11.6.1: Replacement Parts - NBS90 PolySort Transfer Assembly	79
11.7: NBS90 POLYSORT END PULLEY AR 1'6"	80
11.7.1: Replacement Parts – NBS90 PolySort End Pulley AR 1'6"	80
11.8: NBS90 POLYSORT ENCODER ASSEMBLY	81
11.8.1: Replacement Parts – NBS90 PolySort Encoder Assembly.....	81

11.9: NBS90-SP INTERMEDIATE BED W/AIR TAKE-UP 5'0"	82
11.9.1: Replacement Parts – NBS90-SP Intermediate Bed AR W/Air Take-up 5'0".....	83
11.10: NBS90-SP STANDARD END DRIVE AR-RIGHT HAND ONLY	84
11.10.1: Replacement Parts – NBS-SP Standard End Drive AR-Right Hand Only	85
11.11: NBS90- SP BELT TAKE-UP	86
11.11.1: Replacement Parts – NBS90-SP Belt Take-up.....	86
11.12: NBS90 SP TRANSFER ASSEMBLY DIAGRAM	87
11.12.1: Replacement Parts NBS90 SP Transfer Assembly	87
11.13: NBS90 SP END PULLEY ASSEMBLY	88
11.13.1: Replacement Parts – NBS90 SP & PolySort End Pulley Assembly	89
11.14: NBS90 SP ENCODER ASSEMBLY	90
11.14.1: Replacement Parts – NBS90 SP Encoder Assembly	90
MHS Conveyor GENERAL INFORMATION.....	
MHS Conveyor INFORMATION.....	92

Chapter 1: IOM INTRODUCTION

IOM Purpose

It is the intent of MHS Conveyor, through this manual, to provide information that acts as a guide in the installation, operation, and maintenance of MHS Conveyor conveyors.

This manual describes basic installation practices, assembly arrangements, preventive maintenance, and assists in replacement parts identification.


This service manual is intended for use by personnel who are knowledgeable of installation and safe working practices on conveyor systems.

Not all applications and conditions can be covered; therefore, this manual is to be used **ONLY** as a guide.

If additional copies of this manual are needed or if you have any question concerning the conveyor please contact your MHS Conveyor Distributor or MHS Conveyor Lifetime Services at 231-798-4547 or visit MHS Conveyor at mhs-conveyor.com for maintenance videos and other application information.

Manual Structure

You should receive a separate documentation for each product line of MHS Conveyor implemented in your installation. You can identify the respective product line on the back of the folder or on the cover sheet of the IOM (Installation Operation Maintenance Manual)

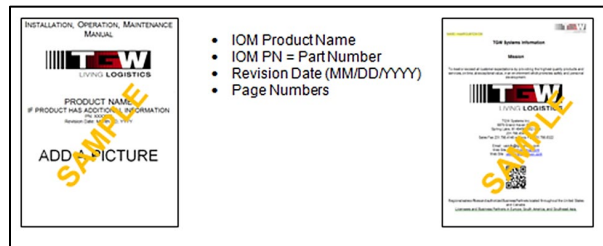

- IOM ProductName
- IOM PN = Part Number
- Revision Date (MM/DD/YYYY)
- Page Numbers



WARNING



Pay attention to the safety instructions! Prior to working at or in the immediate vicinity of the system it is recommended that you make yourself familiar with the safety instructions included in the present document!

Chapter 2: MHS Conveyor POLICIES

MHS Conveyor Equipment Warranty

MHS Conveyor warrants that the material and workmanship entering into its equipment is merchantable and will be furnished in accordance with the specifications stated.

MHS Conveyor agrees to furnish the purchaser without charge any part proved defective within 2 years from date of shipment provided the purchaser gives MHS Conveyor immediate notice in writing and examination proves the claim that such materials or parts were defective when furnished. For drive components specific to XenoROL® (i.e. Xeno belts, slave Xeno belts, drive spools, standard and speed-up, and spacers), this warranty shall be extended to five years of running use, provided the conveyors are applied, installed and maintained in accordance with MHS Conveyor published standards. Other than the above, there are no warranties which extend beyond the description on the face hereof. Consequential damages of any sort are wholly excluded.

The liability of MHS Conveyor will be limited to the replacement cost of any defective part. All freight and installation costs relative to any warranted part will be at the expense of the purchaser. Any liability of MHS Conveyor under the warranties specified above is conditioned upon the equipment being installed, handled, operated, and maintained in accordance with the written instructions provided or approved in writing by MHS Conveyor.

The warranties specified above do not cover, and MHS Conveyor makes no warranties which extend to, damage to the equipment due to deterioration or wear occasioned by chemicals, abrasion, corrosion or erosion; Purchaser's misapplication, abuse, alteration, operation or maintenance; abnormal conditions of temperature or dirt; or operation of the equipment above rated capacities or in an otherwise improper manner.

THERE ARE NO WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, EXTENDING BEYOND THOSE SET FORTH IN THIS STATEMENT OF WARRANTY.

Rev 03/01/2019



MHS Conveyor Environment Standards

MHS Conveyor equipment is designed to be installed in a clean, dry warehouse environment. Exposure to extreme humidity, direct sunlight, blowing dirt or rain can permanently damage some components of MHS Conveyor. In particular, the curing agents in concrete are known to attack and degrade the urethane conveyor components.

When installing conveyor on a new construction site, be sure that the concrete is properly cured before setting conveyor on it. In addition, if conveyors are stored in the proximity of curing concrete, proper ventilation must be used to direct the curing agent fumes away from the conveyor.




Failure to comply with these guidelines will void the MHS Conveyor warranty on any failed components that result from these environment issues.

03/01/2019

 WARNING	
	Safety: Always lock out power source and follow recommended safety procedures.

2.1: MHS Conveyor RECOMMENDS PROPER LABELS FOR CONVEYOR TYPES

Shown below are some samples of labels applicable to conveyor standards.

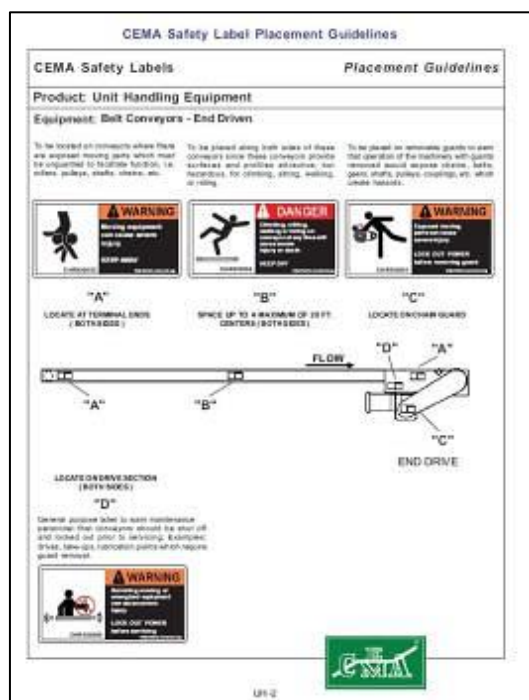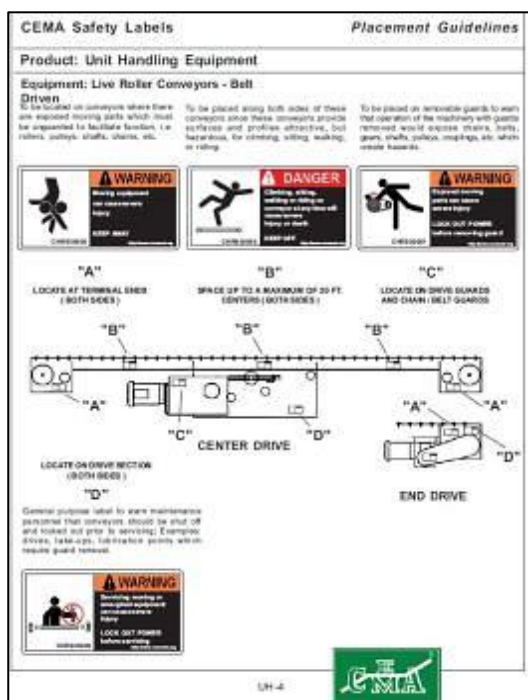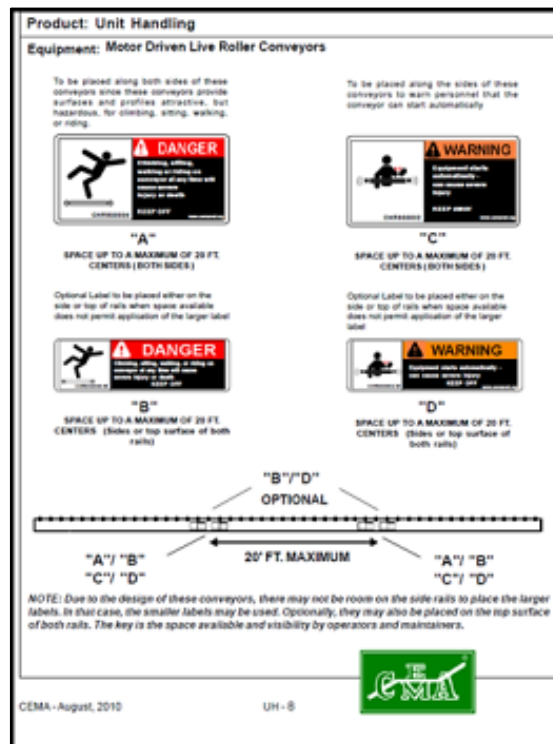

2.2: WARNINGS AND SAFETY INSTRUCTIONS

Failure to follow the instructions and cautions throughout this manual and warning label on the conveyor may result in injury to personnel or damage to the equipment.

Your MHS Conveyor is powered by a motor and can be stopped only by turning off electrical power to the motor. As with all powered machinery, the drive-related components – including sprockets, chains, shafts, universal joints, and pneumatic devices – can be dangerous. We have installed or provided guards to prevent accidental contact with these parts, along with warning labels to identify the hazards.

Special attention must be paid to the following areas of this manual:



DANGER



- Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury. This signal word is to be limited to the most extreme situations.



WARNING





- Indicates potentially hazardous situation which, if not avoided, could result in minor or moderate injury. It may also be used to alert against unsafe practices.

CAUTION

- Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

2.2.1: Warnings and Safety Instructions

 WARNING	
	<p>After maintenance, REPLACE guards immediately.</p> <p>Keep ALL warning labels clean and clear of any obstructions.</p> <p>Never remove, deface, or paint over WARNING or CAUTION labels. Any damaged label will be replaced by MHS Conveyor at no cost by contacting Lifetime Services.</p> <p>It is very important to instruct personnel in proper conveyor use including the location and function of all controls.</p> <p>Special emphasis must be given to emergency stop procedures.</p> <p>It is important to establish work procedures and access areas, which do not require any part of a person to be under the conveyor.</p> <p>It should be required that long hair is covered by caps or hairnets.</p> <p>Loose clothing, long hair, and jewelry must be kept away from moving equipment.</p> <p>Maintain enough clearance on each side of all conveyor units for safe adjustment and maintenance of all components.</p> <p>Provide crossovers or gates at sufficient intervals where needed to eliminate the temptation for personnel to climb over or under any conveyor.</p> <p>Walking or riding on a moving conveyor must be prohibited.</p> <p>Before performing maintenance on the conveyor, make sure the start-up controls are locked out and cannot be turned on by any person other than the one performing the maintenance.</p> <p>If more than, one crewmember is working on the conveyor, EACH CREW MEMBER MUST HAVE A LOCK ON THE POWER LOCKOUT.</p> <p>All pneumatic devices must be de-energized and air removed to prevent accidental cycling of the device while performing general maintenance.</p> <p>Make sure all personnel are clear of all conveyor equipment before restarting the system.</p> <p>Before restarting a conveyor which has been stopped because of an emergency, an inspection of the conveyor must be made and the cause of the stoppage determined. The starting device must be locked out before any attempt is made to correct the cause of stoppage.</p>

 WARNING	
	<p>Before servicing or performing any work in the motor control panel, disconnect and lock out air and the main incoming service. If only the panel disconnect is off, the incoming side will still be hot.</p> 

2.3: MHS Conveyor CONTROLS SAFETY GUIDELINES

The following basic conveyor control safety guidelines are recommended by MHS Conveyor even though Business Partner may or may not purchase conveyor controls from MHS Conveyor. The items listed deal with applications of controls equipment. The actual installation of the equipment must always follow the National Electric Code and all other local codes.

Start-up Warning Horn

Ideally, all conveyors should be within sight of the conveyor start pushbutton. This allows the operator to verify that no one is touching the conveyor or would be in danger if the conveyor were to start up.

If it is not possible to see the entire conveyor being started from the start pushbutton location, then some form of audible warning device is required. It could be a horn, buzzer, bell, or anything unique to that conveyor for that location. It should be loud enough to be heard at any point on the conveyor system. It should sound for approximately five seconds after the start pushbutton is pushed, prior to the actual running of conveyor. Any auxiliary equipment such as vertical lifts, turntables, etc., should also be included in the warning circuitry.

Conveyors that stop and restart under automatic control could also require a horn warning prior to restarting. If it is not easy to distinguish the difference between a fully stopped conveyor system and a momentarily stopped conveyor section, then it is advisable to add a warning horn. All conveyor sections that stop and restart automatically should be marked with appropriate signs or labels.

Start Pushbuttons

Start pushbuttons should be the flush type or guarded such that inadvertently leaning against them will not actuate the conveyor. They should be provided with a legend plate clearly defining which conveyors will be started.

Stop Pushbuttons

Stop pushbuttons should be the extended type such that any contact with it is sufficient to stop the conveyor. They would also be provided with a legend plate clearly defining which conveyors will be stopped.

Operator Controls

Additional operator controls should be designed into the system with the same guidelines that go into start and stop pushbuttons, depending upon their function. Devices which are repeated on multiple control stations, such as emergency stops, should be located at the same relative location on each station (such as lower right corner).

Emergency Stops

All locations where an operator must work directly at the conveyor should be protected by an emergency stop. An operator should not have to move from where he is to actuate the emergency stop.

Conveyors in areas of high pedestrian traffic should also be protected by emergency stop devices.

For all other instances, emergency stops should be located throughout a system such that it is possible to shut down the system without having to walk too far. In these instances the emergency stop is used more to protect the equipment from damage than to protect personnel.

Emergency stops can be of the pushbutton or cable operated switch type. The pushbutton type should be a red, mushroom head maintained pushbutton which requires resetting after it is actuated. Cable operated switches should trip by pulling the cable, and require resetting at the switch.

Actuating an emergency stop must drop-out the start circuit, requiring restarting the system using the start pushbuttons provided.

An emergency stop should normally stop all conveyors in the system. Very large systems may involve dividing a system into zones of control based on proximity of personnel, safety hazards, walls obstacles, etc.

Controls Logic

Solid state controls logic devices, such as programmable controllers are used extensively for conveyor control. They are very reliable, but a hardware failure or software bug would cause an output to function erratically. For this reason, start circuits, warning horn circuits, and emergency stops should usually be configured using conventional relay logic.

Safety Switches

All conveyor control cabinets and motors should be provided with safety (or disconnect) switches. These switches must have provisions for padlocking. As required for maintenance, equipment should be locked in the off position.

Special Devices

Special devices and equipment such as vertical lifts, turntables, high speed conveyors, etc., all have unique design and safety requirements. These should be looked at in each case to determine what the requirements might be.

Rev 03/01/2019

Chapter 3: NBS®90 POLYSORT INTRODUCTION

NBS90 PolySort Selection

Due to the high degree of polybag variance and physical characteristics of typical contents (e.g. pliable, irregular, light, loose, etc...) it is vital for the Systems Integrator to fully understand the physical parameters of all conveying products and how well it should perform for the full product range expected to convey. It remains the responsibility of the Systems Integrator to ensure that the equipment proposed is capable of handling the products in the manner desired.



3.1: NBS90 POLYSORT APPLICATION OPTIONS

The PolySort unit is designed specifically with polybag handling in mind, as shown by the following features:

- Transfer Tubs have extra high lift and drop above/below the conveying surface by 1/2" to allow for loosely packed polybags.
- Belts and Divert Rollers are on tighter 2-1/2" centers to help support pliable or irregular products
- High friction Divert Rollers stop and convey polybags quickly "on the fly"
 - **Note for Carton Handling:**
 - The high friction surface can cause higher center of gravity products to tip at high speeds and rates. Generally, products convey well if the center of gravity is no more than 25% of product width or height. **Consult with Applications Engineering for your specific application.**
- Transfer Tubs use high performance SEW Movimot drive motors for quick response and high efficiency
- Bed Rail connections and infeed points are rounded and scalloped to reduce product snagging
- Divert Tubs are fitted with infeed ramps between each lane to minimize snagging and maximize rate
- Small Array Photo Eyes are used to sense products 5mm thick

Given the above design features, the nature of conveying products with irregular or loose conveying surfaces are not guaranteed. MHS Conveyor has tested a wide range of products contained in polybags with successful convey with the vast majority of "normal" industry packaged polybags from companies in the Apparel, Postal/Parcel, and Distribution markets.

Consult with MHS Conveyor Applications Engineering for your specific needs or to arrange product testing.

 WARNING	
	Post sort orientation may not be maintained. Typical divert is onto a chute, bin, tub or similar. Consult with MHS Conveyor Applications Engineering for specific details or to arrange product testing.

Use NBS90 PolySort when:

- Tighter belt centers than our standard NBS is required
- Product may be same size and weight, or mixed
- Product weight: less than 2oz. – 40 lbs. Max, 1,000 lbs. total live load
- Products typically convey onto chute or dump into tote, Gaylord, or similar
- Ambient temperature is +35° to 100°F

NBS90 PolySort Application Notes:

- Matching conveyor rates before and after NBS sortation are vital to proper application decisions.
- If orientation integrity is required post transfer, products would need to be tested.
- The transfer exit lanes from NBS90 PolySort can be gravity roller (used as a deceleration area), chutes or powered conveyor run at a speed which allows the lane to receive products as fast as they are transferred.
- The maximum divert rate for a NBS90 PolySort single-direction is 50 CPM. The bidirectional rate is 50 CPM. (Contact the Customer Support group for application consideration above these rates)
- Induction to NBS90 PolySort sortation must be able to singulate individual products. Minimum induction gap varies with line speed and determine product pitch.
 - $\text{Speed} / \text{Pitch} = \text{Rate}$. Reference chart example below.

PolySort Rate w/Max Polybag				
Speed (FPM)	Min Gap (ins)	Max Prod Length	Pitch (ins)	Max Rate (CPM)
300	44	28	72	50

High rates are possible given ideal product size and type, edge aligned and induction control upstream of PolySort, and programming optimization. **Consult with MHS Conveyor Applications Engineering for specific details or to arrange product testing.**

- To increase rate justify all products along the exit lane side of the NBS90 PolySort sortation for single direction transfer.
- When NBS90 PolySort over-all-length is over 50' and up to 100' in length, an addition auxiliary air take-up is required.
- The maximum length of a NBS90 PolySort sortation conveyor, including two air take-up units, is 100'.

CAUTION

The use of a VFD (Variable Frequency Drive) or at least a "soft start" motor drive is recommended for NBS90 PolySort drive motor control. **Ignoring this point may void the motor warranty.**

The use of a VFD (Variable Frequency Drive) **is required** for NBS drive motor control. **Ignoring this point will void the belt motor manufacturer's warranty.**

NBS90 PolySort Elevation Top of Belt

The minimum elevation at the discharge end of an NBS90 PolySort sortation line is 19". The end drive unit is located at the discharge end and requires a space of 60" or 33" long.

Extra room alongside the drive should be provided to allow maintenance personnel access to either side of the drive assembly. In order to remove air take-up from bottom side of conveyor, add 6" of clearance and 7" for transfers.

NBS90 PolySort Transfer Locations


- The leading edge of the first transfer module must be a minimum of 11 1/8" from the charge end of the sorter.
- The trailing edge of the last divert module must be at least 11 1/8" from the discharge end.
- The center line of a transfer exit lane is centered on the center line of the transfer rollers in an NBS90 PolySort.
- Standard available coated transfer rollers widths are: 25 1/2"
- One NBS90 PolySort transfer can transfer to up to four separate lanes of 1/2 the width of the roller length.
- Single direction transfer to two lanes is called a "Dual Transfer"
- Bi-directional transfer to two lanes each side is called a "Quad Transfer"

NBS90 PolySort Standard Available Selections

- Horse Power (HP)
 - 2HP, 3HP, 5HP
- Feet Per Minute (FPM)
 - 120, 210, 240, 270, 300

NBS90 PolySort Sorter Nominal Widths & Number of Belts

- 26.5 NBS90 PolySort with 9 Belts on 2-1/2" Centers

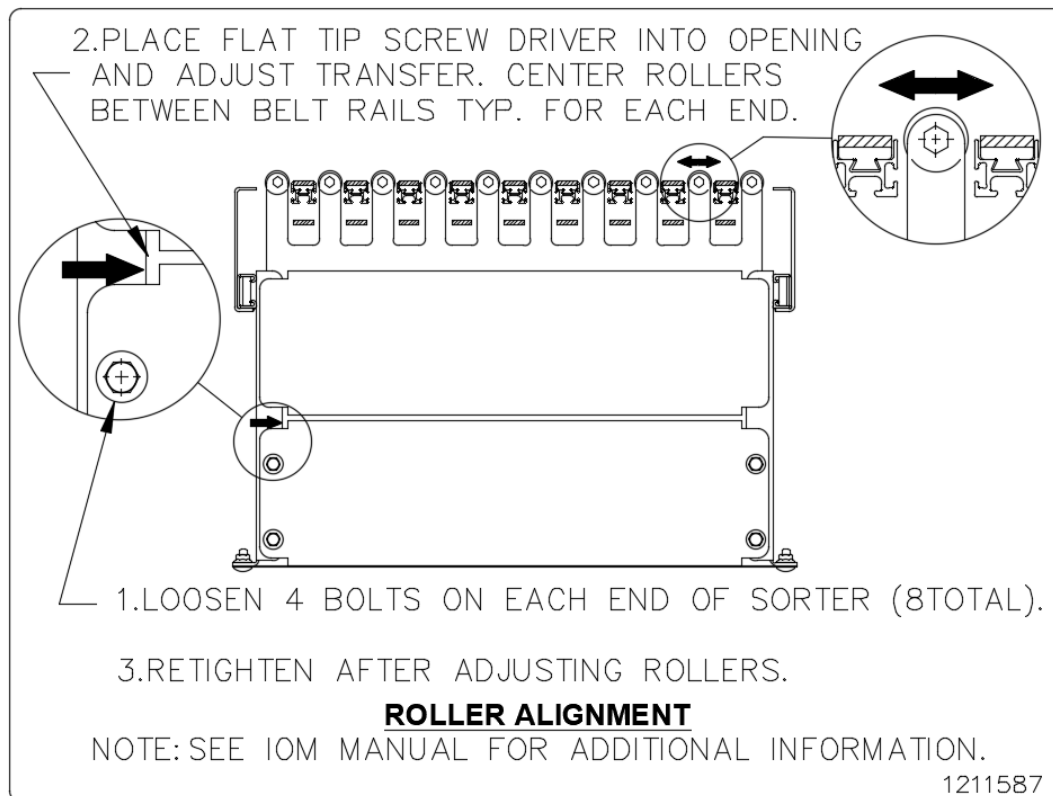NBS90 SP & NBS90 PolySort transfer roller adjustment guide.


1. Loosen the 4 lower bolts on each end of transfer (8 total).
2. Place flat tip screw driver into opening and adjust transfer.
3. Center rollers between belt rails. For each end.
4. Adjust rollers until rollers no longer rub aluminum rails. Retighten bolts after adjusting.

Features and benefits

FEATURES:	BENEFITS:
Tighter belt centers vs standard NBS90	Prevents polybags from sagging between belts
Extra high/low transfer lift	Keeps polybags from dragging or snagging
High friction natural rubber transfer rollers	Maximum grab on a slippery polybag
High powered SEW transfer motor	Powerful acceleration for polybag transferring
Direct drive 97% efficient gearmotor on sorter drive	Eliminates all chain or drive belt maintenance
Individual belt take-ups	Even belt tension for unequal stretch or length
Use with extreme range of mixed product from 2oz. to 40lbs.	Adaptable to a wide range of customer needs

Chapter 4: NBS®90 SP (SMALL PARCELS) INTRODUCTION

Use NBS®90 SP When:

- Higher speed sortation than NBS is required
- Product may be same size and weight, or mixed
- Product weight: 1-20 lbs, 1000 lbs. total load
- Product size: 4" X 4" Min. -- 13" X 24" Max.
- Ambient temperature is +35° to 100°F

4.1: NBS90 SP APPLICATION OPTIONS

Matching conveyor rates before and after NBS sortation are vital to proper application decisions.

- The transfer exit lanes from NBS SP can be gravity roller (used as a deceleration area), chutes or powered conveyor run at a speed which allows the lane to receive products as fast as they are transferred.
- The maximum divert rate for a NBS SP single-direction is 120 CPM. The bidirectional rate is 120 CPM. (Contact the Customer Support group for application consideration above these rates)
- Induction to NBS-SP sortation must be able to singulate individual products. Minimum gap of 6"+ conveyor width at 250 FPM 10"+ conveyor width at 300 FPM.
- Justify all products along the exit lane side of the NBS SP sortation for single direction transfers.
- When NBS-SP over-all-length is over 50' and up to 100' in length, an additional auxiliary air take-up is required.
- The maximum length of a NBS SP sortation conveyor, including two air take-up units, is 100'.
- All units require 1/2" gap before and after the unit for maintenance access to the end covers.

CAUTION

The use of a VFD (Variable Frequency Drive) or at least a "soft start" motor drive is recommended for NBS90 SP drive motor control. **Ignoring this point may void the motor warranty.**

The use of a VFD (Variable Frequency Drive) is required for NBS drive motor control. Ignoring this point will void the belt motor manufacturer's warranty.

NBS SP Elevation Top of Belt (TOB)

The minimum elevation at the discharge end of an NBS SP sortation line is 23". The end drive unit is located at the discharge end and requires a space 23" high by 33" long.

Extra room alongside the drive should be provided to allow maintenance personnel access to either side of the drive assembly. In order to remove air take-up from bottom side of conveyor, add 6" of clearance and 7" for transfers.

NBS90 SP Transfer Locations


- The leading edge of the first transfer module must be a minimum of 28" from the charge end of the sorter.
- The trailing edge of the last divert module must be at least 42" from the discharge end.
- The center line of a transfer exit lane is centered on the center line of the transfer rollers in an NBS SP.
- Standard available coated transfer rollers widths are: 9", 12", 15", 18", & 21"
- One NBS SP transfer can transfer to up to four separate lanes of 1/2 the width of the roller length.
- Single direction transfer to two lanes is called a "Dual Transfer"
- Bi-directional transfer to two lanes each side is called a "Quad Transfer"

NBS SP Standard Drive Selections

- Horse Power (HP)
 - 5, .75, 1, 1.5 HP @ the following speeds
- Feet Per Minute (FPM)
 - 120, 150, 180, 200, 220, 250, 300 FPM
 - Additionally: 2 HP @ 200, 220, 250, 300 FPM

NBS SP Sorter Nominal Widths & Number of Belts

- 11.5NBS-SP with 3 Belts on 2-1/2" Centers
- 14 NBS-SP with 4 Belts on 2-1/2" Centers

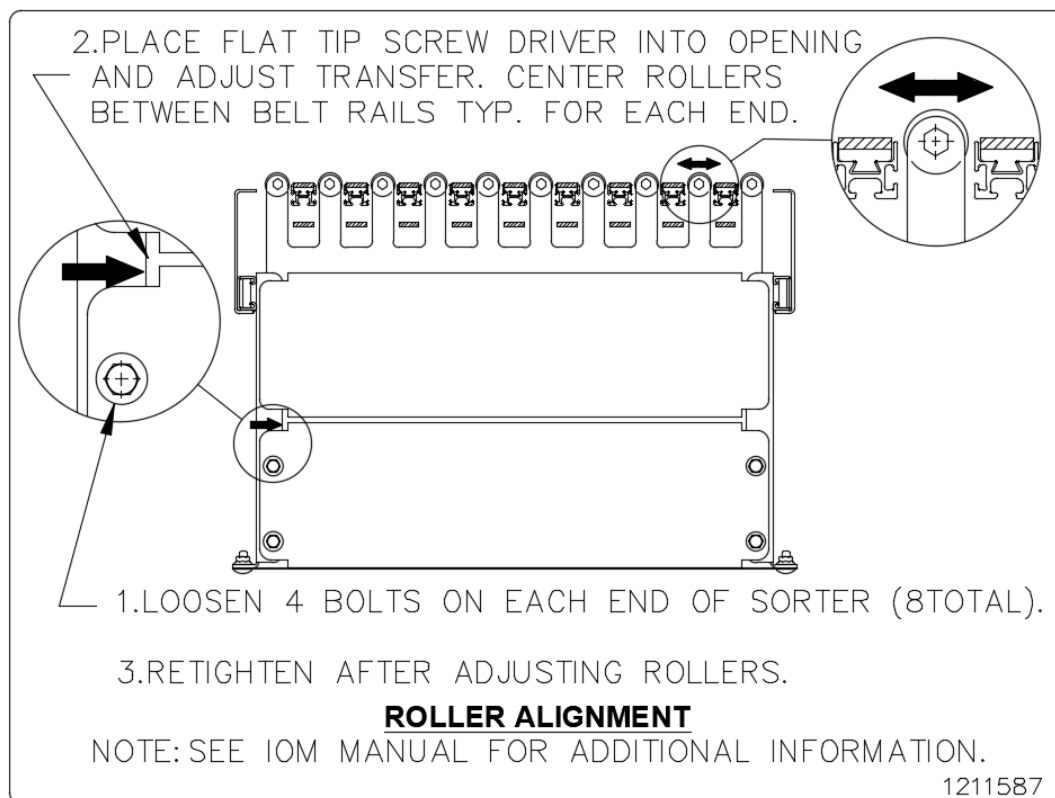NBS90 SP & NBS90 PolySort transfer roller adjustment guide.


1. Loosen the 4 lower bolts on each end of transfer (8 total).
2. Place flat tip screw driver into opening and adjust transfer.
3. Center rollers between belt rails. For each end.
4. Adjust rollers until rollers no longer rub aluminum rails. Retighten bolts after adjusting.

FEATURES:	BENEFITS:
High speed sortation of small product	Maximize throughput
Reversible diverter drive	Divert right and left, saving space
High friction transfer rollers	Positive acceleration and maximum divert rate
Pick up product "on-the-fly"	Maximize sort rate
Product is conveyed on belts until sorted	Increased accuracy of control tracking
Compact design of divert module	Close center of divert points
Individual belt take-ups	Long belt life and reduced maintenance

Chapter 5: DEFINITION OF TERMS

Definition of Terms		
KEY WORD	ABBREVIATION	DESCRIPTION
ALUMINUM RAIL	AR	Original NBS UHMW belt guide holders
AIRBAG		Inflatable lifting device used in NBS30, NBS90, & NBS90 PolySort
BEARING	BRG	Low friction rotating or sliding device
BEAR RAIL	BR	NBS-BR belt guides composed of small ball bearings between steel side rails
BELT	BLT	Flexible load carrying surface or O-ring
BETWEEN-FRAME	BF	The distance between conveyor side frames
BRACKET	BRKT	Attachment between a main and another part
CHANNEL	CH	Structural side member of conveyor equipment
CONNECTOR	CONN	Holds two parts together (Mechanical or Electrical)
CONSTRUCTION ORDER	CO _ _ _ _ _	Item number of modified standard
CROSSMEMBER	XM	Holds channels apart
DIVERTER		NBS30, NBS90, or NBS90 PolySort. Module
DRIVE	DR	Power unit at the discharge end of NBS sorter
ELEVATION	EL	Top-of belt height above base surface
ENCODER		Electrical distance counter used to track package location along the sorter length
END PULLEY	E-PULL	4" or 5" diameter roller at charge end of NBS sorter
EXTRUSION		Aluminum base that holds UHMW belt strips (See ALUMINUM RAIL)
FEET PER MINUTE	FPM	Speed sorter belts are traveling
FILTER / REGULATOR		Combination air pressure air filter / regulator
FLOOR STAND	FS	Name for conveyor bed support
FLOW CONTROL		Needle valve used to control airflow
GEARMOTOR	GEARMTR	One piece gear-reducer motor assembly
GUARD RAIL	GR	Angle or channel used to keep product on NBS
GUARD	GRD	Any part used to protect area for safety reasons
IDLER	IDL	Un-driven pulley used as a tensioning device
ITEM NUMBER	IT #	MHS Conveyor part identification number
KEY		Square locking device used on rotating shafts
KIT		Group of several parts with a single item number
LACED	LCD	The condition of a correctly installed lacing
LACING		Type or method of joining belts together (splice)
LIFT FRAME		The lifting structure of a NBS90 transfer
LIFT TABLE		Assembly that guides the NBS30 wheels upward
LOCKNUT		Self-locking fastener that resists vibration

Definition of Terms		
KEY WORD	ABBREVIATION	DESCRIPTION
LOCTITE		A thread-locking adhesive that resists vibration
LOOSE PARTS	LP	Individual parts that must be installed in the field
MODULE	MOD	A self-contained mechanical assembly
MOUNT	MNT	Part used to hold another, similar to a bracket
MOUNTING	MTG	Location and fasteners to attach a mount
MOTOR	MTR	Rotational power source usually using electricity
MUFFLER		Device used to reduce the noise of exhausted air
NATIONAL PIPE THREAD	NPT	Standard identifier for USA tapered pipe sizes
ORDER NUMBER	11 _ _ _ _ _	Original factory order / tracking number
O-RING		Polyurethane cord belts of differing lengths
PHOTOEYE	PE	Optical sensing device used for product control
PLATE	PL	Flat piece of metal usually bolted on for strength
PROGRAMMABLE LOGIC CONTROLLER	PLC	Self-contained programmable control unit that can control several input and output devices
PULLEY		Roller described by diameter and body length
REFLECTOR	RF	Target used to reflect a light back to a photo eye
REGULATOR	REG	Air device that reduces pressure to usable level
ROLLER		Described by axle size and BF dimension
SCANNER		A device that recognizes products by bar codes
SCHEMATIC		Line drawing of a electrical or pneumatic circuit
SEAL		Sealing device on a rotating shaft or cylinder rod
SHAFT		Round steel rod described by diameter and length
SHEAVE		A grooved disc that guides a V-belt or O-ring
SHIM		Thin piece of metal, used to fill up a space
SKATEWHEEL	SKW	2" diameter X 5/8" wide X 1/4" axle hole roller
SOCKET	SOC	Hex shaped hole in an Allen screw
SOLENOID	SOL	An electrically operated multi-position air valve
SPACER		Thick washer or tube that a fastener passes thru
SPLICE		Area where similar materials are joined together
SPRING	SPR	Coiled wire device used for un-powered return
SPROCKET	SPKT	Wheel with shaped teeth that engage roller chain
SPUR		Transition bed between a diverter and exit lane
STANDHEAD		Pivoting bracket that attaches support to the bed
STARTER		Electrical relay that energizes the drive motor
TAG		Number that identifies unit in system lay-out
TAKE-UP		Assembly used to remove slack from a belt / belts
TEE		A part with three connections locations
TENSIONER		A pneumatic, spring, or static take-up device
TRANSFER	TRNS	NBS90 and NBS-SP module

Definition of Terms		
KEY WORD	ABBREVIATION	DESCRIPTION
ULTRA HIGH MOLECULAR WEIGHT	UHMW	Industry standard term for the hard milky white Polyethylene used in wear strip applications
VALVE		An air shut-off or switching device
VENT		Small hole in gearbox to allow air expansion
WEARSTRIP		Low-friction material used to reduce rubbing wear
WELDMENT	WLDMT	Any part that requires welding in its manufacture
VFD	VFD	Variable Frequency Drive for motor speed control

5.1: PRODUCT DESCRIPTION EXAMPLES

For the most current list of “**Product Description**” and “**Terms and Abbreviations**” Log into <https://mhs-conveyor.com/> and select Support/Engineering Support Documents.

Chapter 6: NBS RECEIVING & SITE PREPARATION



General

MHS Conveyor NBS Narrow Belt Sorters are shipped in subassemblies. These subassemblies are packaged to guard against damage in shipment, when handled properly.

Examination immediately following unloading will show if any damage was caused during shipment. If damage is evident, claims for recovery of expenses to repair damage or replace components must be made against the carrier immediately. While unloading, a check must be made against the Bill of Lading, or other packing lists provided, to confirm full receipt of listed items.

CAUTION

- **TAKE CARE DURING THE REMOVAL OF EQUIPMENT FROM THE CARRIER.** Remove small items and boxes first. Pull and lift only on the skid, not on the frame, crossmember or any part of the equipment. Be sure the skid is free of other materials which may be on top of or against the side of the skid to be removed.

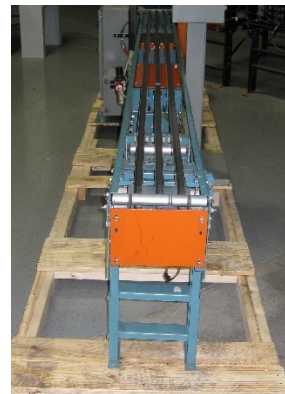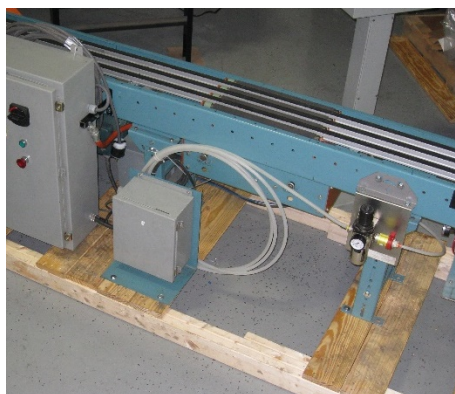

Preparation of Site

After the conveyor is received, move it to the installation site or designated dry storage area as soon as possible. Clean up all packing material immediately before parts get lost in it. Loose parts should remain in the shipping boxes until needed.

Prior to starting assembly of the conveyor, carefully check the installation path to be sure there are no obstructions that will cause interference. Check for access along the path needed to bring in bed sections and components closest to the point where they are needed. It is often necessary to give the area along the system path a general cleanup to improve installation efficiency, access and accuracy.

6.1: NBS PARTS INVENTORY & IDENTIFICATION

Each subassembly is shipped completely assembled except the bed joint splice plate/nuts which are shipped with other loose parts. Identify and separate the sorter subassemblies by type or tag number, for inventory and ease of locating during installation.

An identification label is attached to the inside of one side channel or on a crossmember, close to one end of each conveyor bed. This label contains job number, part number, order number, tag number (if specified), assembler's initials and date of manufacture. On supports, the tag is located on the bottom side of the foot. On special devices, it is located on a convenient flat surface that is not offensive to the appearance of the equipment but is still accessible for viewing. These numbers can be cross-referenced against the packing list. The illustrations in this manual and the part number stickers will assist you with your inventory.

CAUTION


- Do not remove finishing nails from rail ends. They keep the UHMW guides from sliding down to the discharge end.

Chapter 7: NBS PARTS INVENTORY & IDENTIFICATION

The following procedures are to be used as guidelines only. Specific installation methods will vary somewhat depending on available equipment on site and each installer's preferences based on past experience.

Each subassembly is shipped completely assembled except the bed joint splice plate/nuts which are shipped with other loose parts. Identify and separate the sorter subassemblies by type or tag number, for inventory and ease of locating during installation.

An identification label is attached to the inside of one side channel or on a crossmember, close to one end of each conveyor bed.

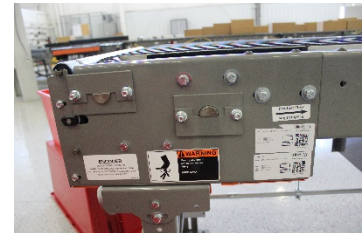

This label contains:

- Item number
- Description
- Job Number
- Mfg. Number
- Date of manufacture
- Tag number (if specified)
- Assembler's clock number
- QR (Quick Response) Label
 - Scan Code For IOM Manual



Scan the QR code to retrieve the IOM Manual, if nothing happens; check your scanner settings and make sure the QR Label setting is enabled.

On the supports, the tag is located on the bottom side of the foot. On special devices, it is located on a convenient flat surface that is not offensive to the appearance of the equipment but is still accessible for viewing. These numbers can be cross-referenced against the packing list. Loose parts are boxed and shipped separately.

You should have all conveyor sections and supports for a particular conveyor prior to installation. It is cost-effective to identify and procure any missing parts before they are needed for assembly. Small items like nuts and bolts are weigh-counted and packaged by size and type.

Chapter 8: NBS INSTALLATION DETAILS

General Procedures

The following procedures are to be used as guidelines only. Specific installation methods will vary somewhat depending on available equipment on site and each installer's preferences based on experience.



Dimensional Reference Points

The path of each conveyor in the system is determined by establishing a reference point at each end. The centerline of the conveyor is established and a chalk line is snapped between these points.



Conveyors should be installed with the centerline of the bed matching the centerline of the conveyor path within 1/16" of true center. Locate and mark the center of the crossmembers at each end of the conveyor. Use a plumb line or other applicable device to ensure accuracy to the chalk line.

Always carry out a thorough check for any obstructions such as building columns, manholes, etc. It may be necessary to reroute the conveyor to avoid the obstruction. In this case it would be advisable to begin installation at this point, using the obstruction as a reference point (Datum), and install the sections in either direction as required.



All conveyor sections must be checked for squareness prior to installation as "racking" or being knocked out of square may have occurred during shipping and handling.

 WARNING	
	<p>The Installation Supervisor must be experienced with conveyor, qualified in the mechanics of the equipment, and enforce safe working procedures for the protection of the crew, customer, and customer's property.</p> <p>Before restarting a conveyor which has been stopped because of an emergency, an inspection of the conveyor must be made and the cause of the stoppage determined. The starting device must be locked out before any attempt is made to correct the cause of stoppage.</p>

8.1: NBS GENERAL ELECTRICAL REQUIREMENTS

 WARNING	
	<p>All electrical controls must be installed, wired, and connected by a licensed electrician only.</p> <p>All motor controls and wiring must conform to the National Electrical Code as published by the National Fire Protection Association and approved by the American National Standards Institute, Inc. In addition, since specific electrical codes vary from one area to another, be sure to check with the proper authorities before starting the electrical wiring.</p>

The electrical voltage of the motor will be stamped on the metal nameplate. This voltage should be checked to see that it matches your available voltage. Many motors, both single phase and three phase, are dual voltage. Consult the wiring diagram on the motor for the proper connections. If a three-phase motor on a single direction conveyor runs the wrong direction, two of the three leads must be switched to reverse rotation.



 WARNING	
	<p>Do not connect the motor to any other voltage than stamped on its metal nameplate.</p>

Consult the wiring diagram on the inside cover of the starter and push-button station for the proper electrical connections.

Three-phase drives require transformers to reduce the push-button and control circuit to 115 volts. If primary voltage is changed, the transformer must be changed according to the wiring diagram found on the transformer.

Note:

All control equipment is covered by the original manufacturer's equipment warranty.

 WARNING	
	<p>All safety devices, including wiring of electrical safety devices, shall be arranged to operate in a “fail safe” manner. That is, if power failure or failure of the device itself would occur, a hazardous condition must not result.</p> <p>Do not connect the motor to any other voltage than stamped on its metal nameplate.</p>

NEMA type enclosure ratings are as follows:

NEMA 1 - Indoor use; Provides protection against contact with internal components. Suitable for use in warehouse and distribution environments.

Gasketed:

NEMA 1 - Same use as NEMA 1, but with additional protection against dust and dirt.

NEMA 3 - Outdoor use, designed to keep out rain and dust.

NEMA 4 - Indoor and outdoor use, designed to keep out rain and dust.

NEMA 12 - Indoor use: Provides protection against dust, dirt and oil, and drippings of noncorrosive liquids suitable for use in industrial environments.

NEMA 13 - Indoor use: Provides protection against dust, dirt, sprayed oil and noncorrosive liquids.

8.2: NBS90 POLYSORT MHS Conveyor-ERMANCO CONTROLS GUIDELINES

ECG 7.1

Rev. 1.6.03

(SEW Euro Drive, 2018) MOVIMOT® circuit information high speed reversing (and non-reversing) applications, such as the transfer drive for the PolySort. The MOVIMOT® as provided by MHS Conveyor would typically consist of the following:

- Three phase induction motor with an integrated variable frequency drive
- Speed control potentiometer, built into drive housing.
- Dynamic braking resistor, preinstalled in the drive.

Additional hardware required for control of the MOVIMOT® would include:


- Lockable, fused disconnect switch for each drive.
- Motor contactor for each system.
- 24V Control Power Supply
- 24VDC PLC output (PNP sourcing) for run command (two for reversing).

High Voltage Connections

- Verify that the motor nameplate rating matches the system voltage and frequency.
- Size fuses as for a conventional induction motor.
- Terminals for 3 phase power are located inside the connection box on the motor.
- Group motor installations are not permitted.
- A contactor before the fused disconnect switches must be used. This should be energized with the Master Control Relay (MCR) for the system and not used for normal motor stopping.
- Connect conductors to the L1, L2, L3 and ground terminals. See figure 1 below.

Controls Connections

- Connect dry contacts between the 24VDC and R↻ and/or L↻ terminals. These signals will start and stop the motor in the clockwise or counter-clockwise directions. See figure 1.
- Connect the external power to the 24V and ⊥ terminals. Connect PLC outputs to the R↻ and/or L↻ terminals (PNP sourcing outputs).

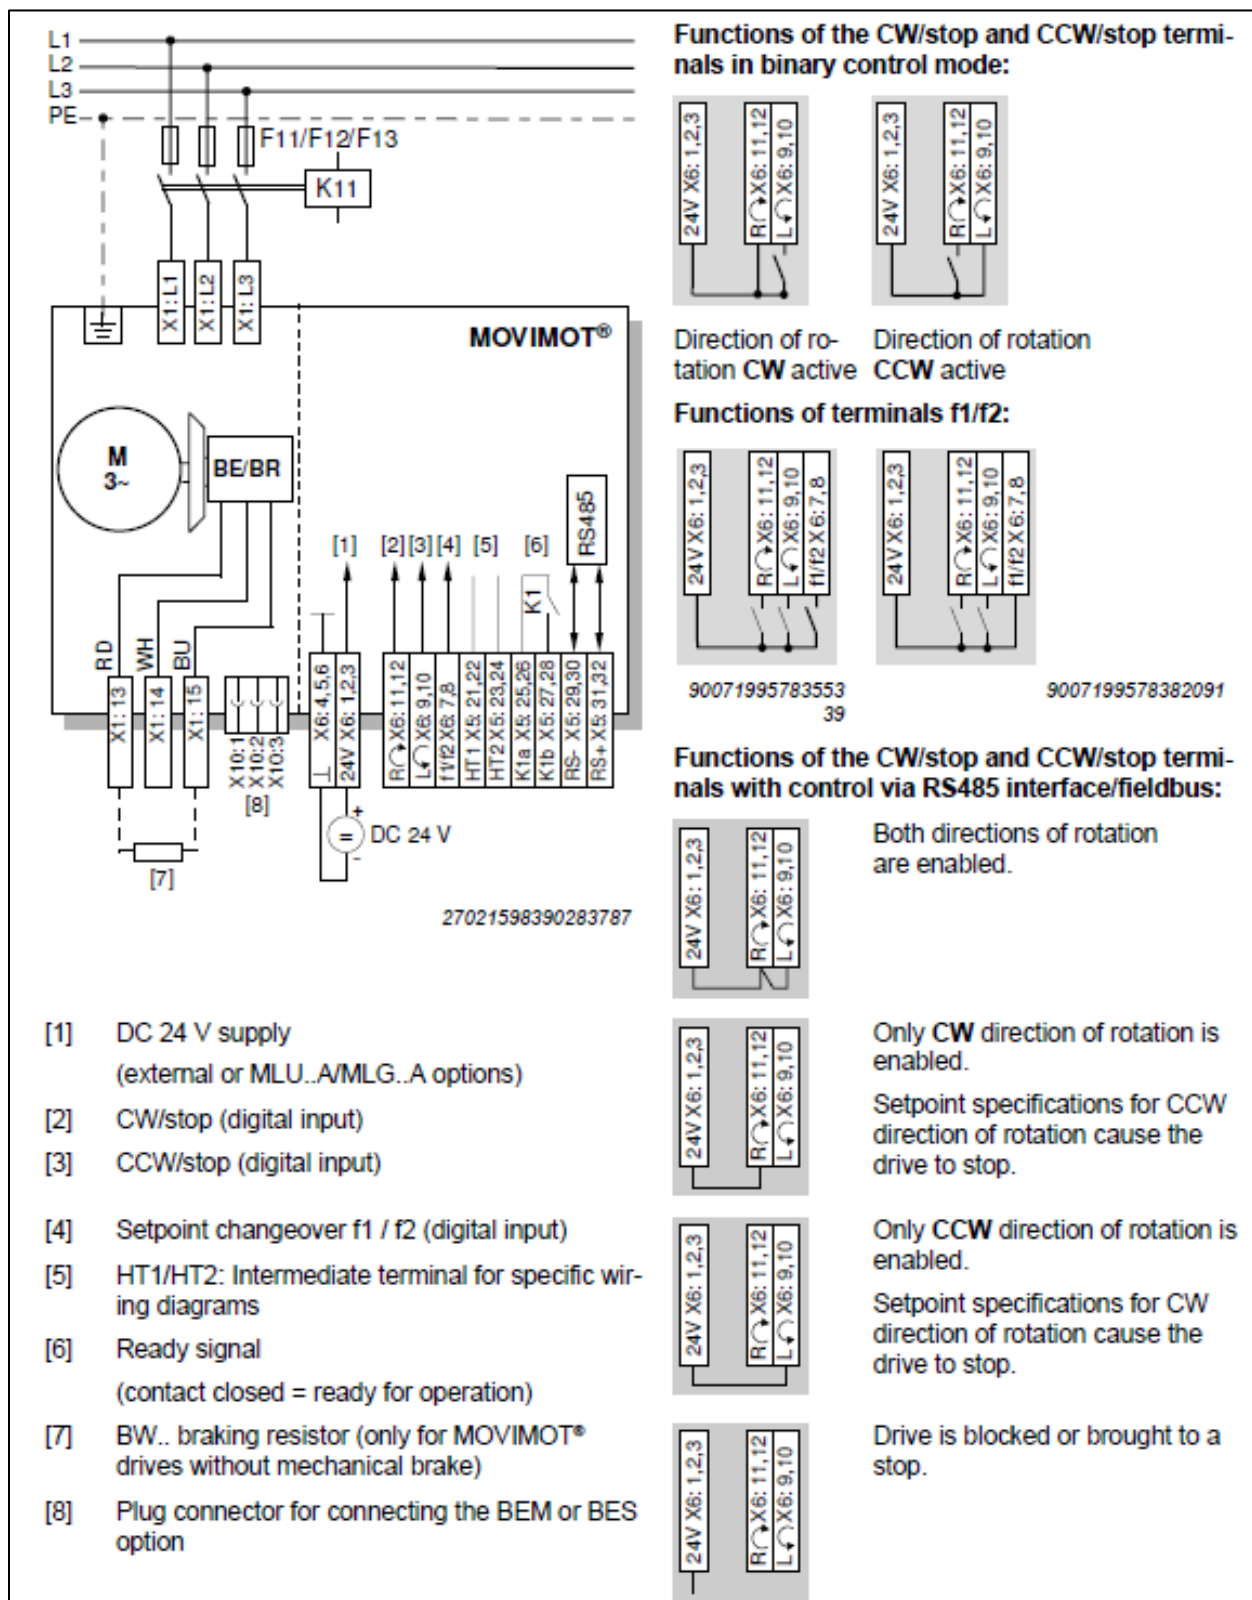

Speed, Ramp, and DIP Switch Settings

- The speed of the drive can be adjusted by turning the setpoint potentiometer, f1, accessible through a screw plug on the connection box cover.
- The ramp time is set with switch t1. Set this to detent position '0' for maximum acceleration.
- DIP switch S1 should have all switches in the off position. (factory default) See figure 2.
- Setpoint switch f2 is not used and can be left at the factory setting.

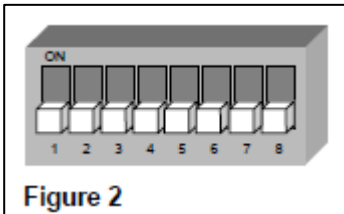


Figure 2

Status LED


A three-color status LED is visible on the outside of the connection box cover. The table below describes the function:

LED Color	LED Status	Operational Status	Description
-	Off	Not Ready	No 24V or System power
Yellow	Steady Flashing	Not Ready	Self-test phase active or 24V present but System power not OK
Yellow	Steady Light	Ready but unit inhibited	24V and System power OK, but no enable signal
Green	Steady Light	Unit enabled	Motor operating
Green	Steady, fast flashing	Current limit active	Drive has reached the current limit
Red	Steady Light	Not Ready	Check the 24V supply Make sure that there is a smoothing DC voltage with a low ripple (max 13%)
Red	2 x flash, pause	Fault 07	DC link voltage too high
Red	3 x flash, pause	Fault 11	Excessive temperature in output stage
Red	4 x flash, pause	Fault 84	Excessive temperature in motor Assignment of motor to frequency inverter incorrect
Red	5 x flash, pause	Fault 89	Excessive temperature in brake Assignment of motor to frequency inverter incorrect
Red	6 x flash, pause	Fault 06	Mains phase fault

8.2.1: NBS90 PolySort Sorter with Ethernet/IP comes pre-mounted from the factory.


MFE62 fieldbus interface

The following figure shows the MFE62A fieldbus interface:

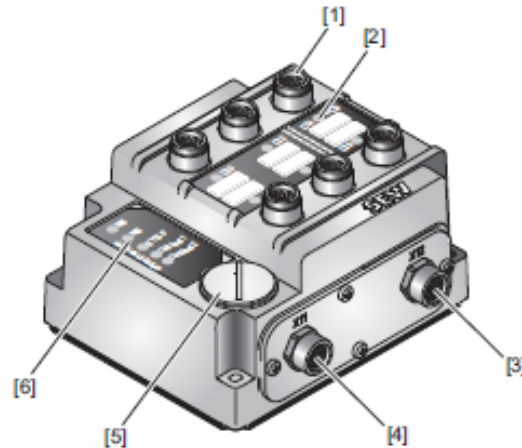


14491191179


- [1] M12 connection sockets for digital inputs/outputs
- [2] Status LEDs of digital inputs/outputs
- [3] X12 connection EtherNet/IP™ port 2
- [4] X11 connection EtherNet/IP™ port 1
- [5] Diagnostic interface (below screw fitting)
- [6] Status LEDs

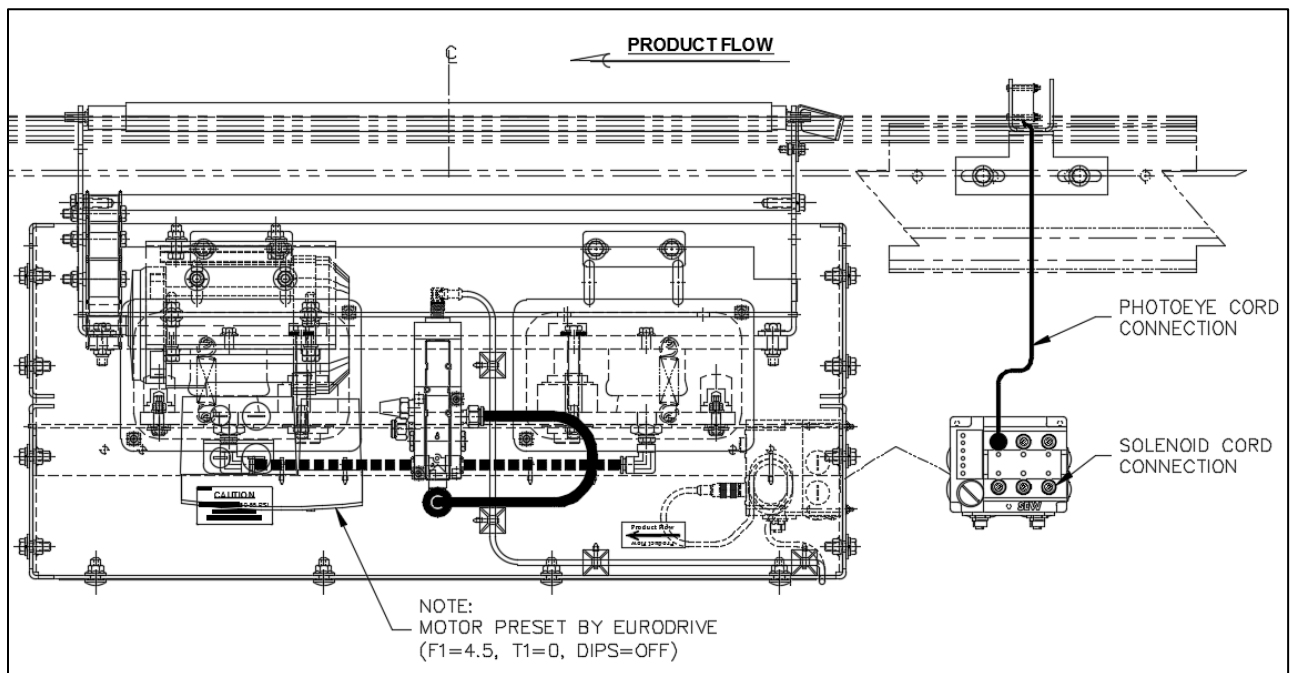



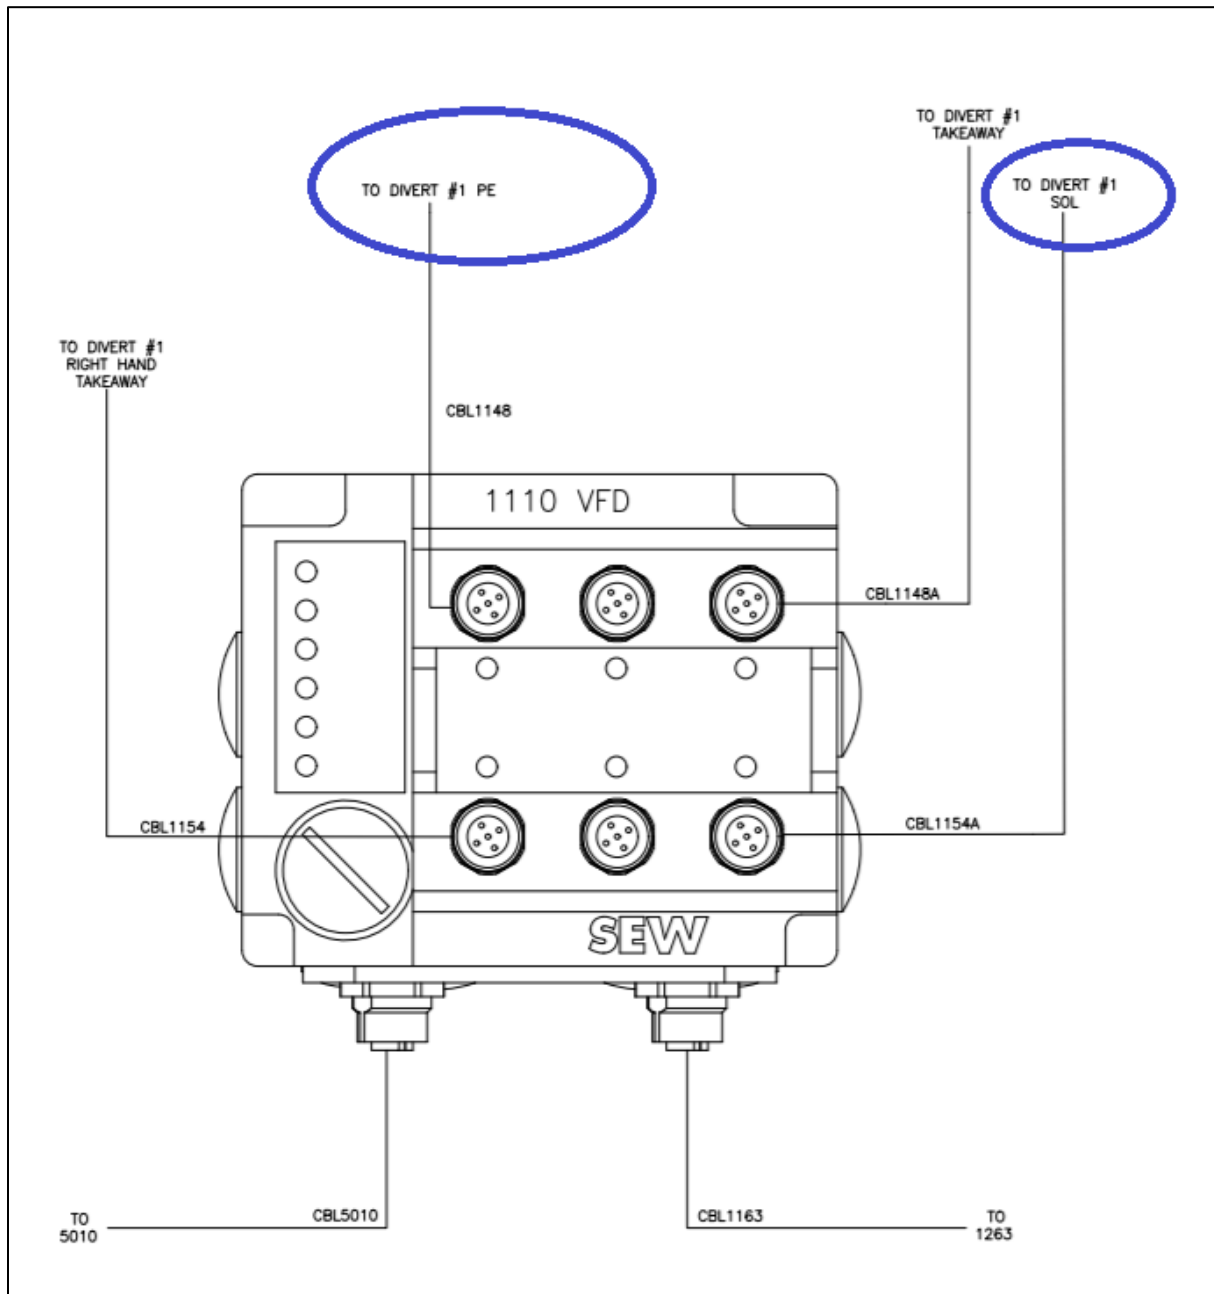

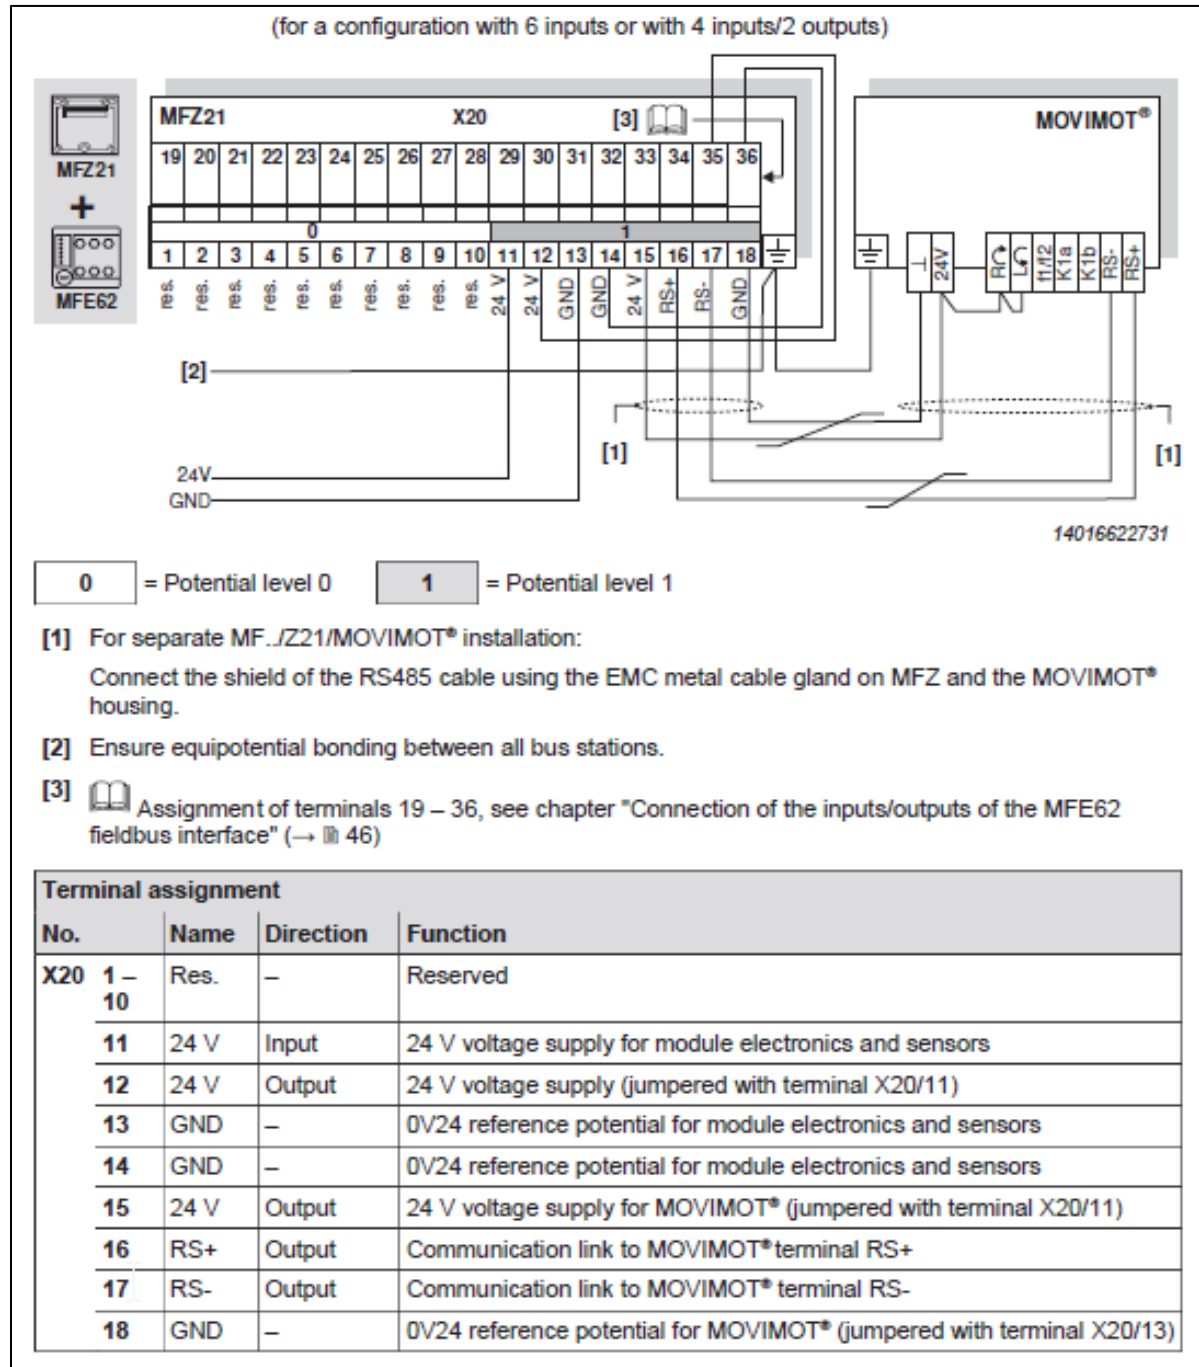

Connection of MFZ21 connection module with MFE62 to MOVIMOT®



(Tri-Tronics, 2016)

MFZ21 connection module with MFE62 EtherNet/IP™ interface MOVIMOT®**Note:****Communication cable between Movimot and MFZ21 is customer provided.****(Ref. Belden 88770 or similar.)**

Divert #1 PE

LED Indication: Run Mode		
Power Indicator	Power present	
	No power	
Output Indicator	Not Blocked	
	Flash: Marginal	
	Blocked	
Light Bar	CTA Feedback (Continuous Threshold Adjustment Status)	





CTA Feedback

The space between the Blue LED's indicates the sensor can automatically make the amount of threshold adjustment. Illuminate when the sensor and reflector are in optimum working condition, the top and bottom LED with. As the sensor or reflector become dirty, the LED will get closer and closer together until the bottom two LED are illuminated. At this point, it is crucial that the sensor and/or reflector should be cleaned.

 
After cleaning, the LED will ill adjust back to the optimum working illumination indication.

Adjustment

1. Turn Output Indicator Pot Clockwise till it begins to flash 
2. Adjust sensor to the reflector. Maximizing the light bar will indicate proper alignment
3. Turn Output Indicator Pot Counterclockwise till it stops flashing and is on Solid 




Connection Type



M8 Snap

- Pin 1 : +(L+)
- Pin 2 : Not Connected
- Pin 3 : -(M)
- Pin 4 : PNP LO

Divert #1 Sol

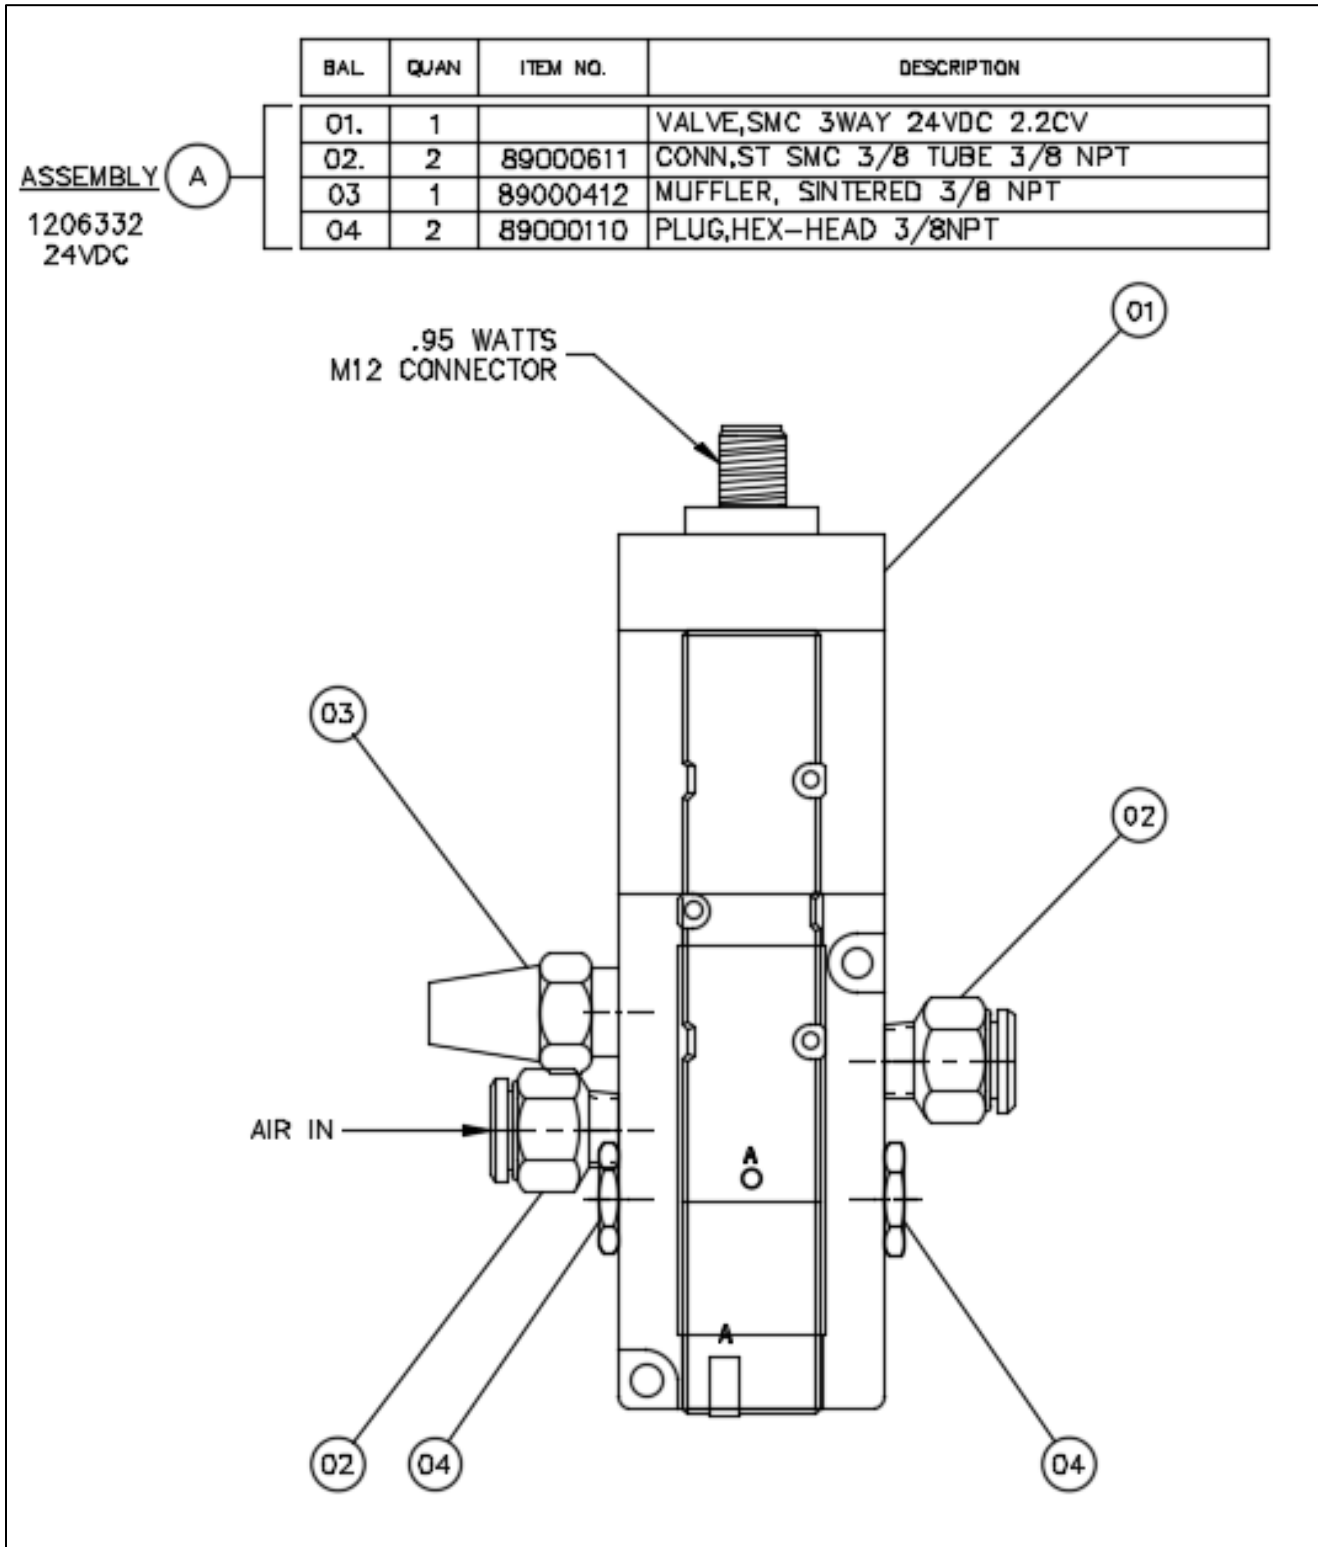

8.2.2: NBS90 PolySort Programmable Wheeled Encoder



RH-P144AJ**Programmable Wheeled Encoder****DESCRIPTION**

The RH-P encoder, also known as a Pulse Position Indicator (PPI) or Tach, is typically used to measure linear movement on a conveyor system. The number of pulses per revolution is determined by setting configuration switches. It is typically fitted with a pair of 12" circumference measuring wheels, model MW-1-B, or 30cm circumference wheels, model MW-30-B, that allow it to ride directly on the conveyor belt, tracking the conveyor independent of conveyor roller diameters. The RH-P also includes the Anti-jitter feature that eliminates extraneous pulses generated if the conveyor stops on a pulse edge.

FEATURES

- Programmable Pulses/Revolution
- ESD / Short Circuit / Reverse Voltage Protected
- Exclusive "Anti-jitter" Circuit for Conveyor Applications
- See the model R22 for a smaller wheeled encoder

* CE marking requires Photocraft cable, and surge protection option if cable exceeds 100' (30m) or leaves the building.

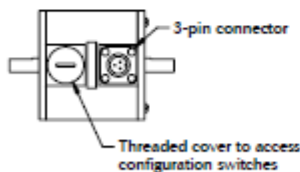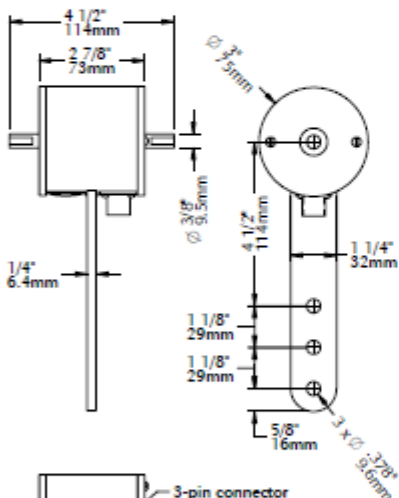**DIMENSIONS**

PO Box 25135 813-886-4000
Tampa FL 33622-5135, USA 800-237-0946
ttco.com • photocraftencoders.com

SPECIFICATIONS**Mechanical**

Weight: 1.3 lbs (600 gm)
Shaft Loading: Radial: 25 lb. (11.3 kg.) max
Axial: 10 lbs. (4.8 kg.) max
Bearing Life: 70 x 1,000,000/rpm = hours
Materials:
— Case: Aluminum, anodized
— Shaft: 303 Stainless steel
— Switch cover: Plastic
Maximum Operating Speed: 3,000 rpm

Electrical Connections

MS 3-pin	4-pin M12		Wire
Pin No.	Pin No.	Function	Color
A	1	Supply Voltage	Red
B	4	Output A	White
C	3	Common	Black
-	2	not used	-

Configuration Switches

Output Circuit Selection

6 7 8

☐ ☐ ☐ Current sourcing (PNP)

☐ ☐ ☐ Current sinking (NPN)


☐ ☐ ☐ NPN open collector

☐ ☐ ☐ Push-Pull Output

Pulses per Revolution Selection

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100 101 102 103 104 105 106 107 108 109 110 111 112 113 114 115 116 117 118 119 120 121 122 123 124 125 126 127 128 129 130 131 132 133 134 135 136 137 138 139 140 141 142 143 144 145 146 147 148 149 150 151 152 153 154 155 156 157 158 159 160 161 162 163 164 165 166 167 168 169 170 171 172 173 174 175 176 177 178 179 180 181 182 183 184 185 186 187 188 189 190 191 192 193 194 195 196 197 198 199 200 201 202 203 204 205 206 207 208 209 210 211 212 213 214 215 216 217 218 219 220 221 222 223 224 225 226 227 228 229 230 231 232 233 234 235 236 237 238 239 240 241 242 243 244 245 246 247 248 249 250 251 252 253 254 255 256 257 258 259 260 261 262 263 264 265 266 267 268 269 270 271 272 273 274 275 276 277 278 279 280 281 282 283 284 285 286 287 288 289 290 291 292 293 294 295 296 297 298 299 300 301 302 303 304 305 306 307 308 309 310 311 312 313 314 315 316 317 318 319 320 321 322 323 324 325 326 327 328 329 330 331 332 333 334 335 336 337 338 339 340 341 342 343 344 345 346 347 348 349 350 351 352 353 354 355 356 357 358 359 360 361 362 363 364 365 366 367 368 369 370 371 372 373 374 375 376 377 378 379 380 381 382 383 384 385 386 387 388 389 390 391 392 393 394 395 396 397 398 399 400 401 402 403 404 405 406 407 408 409 410 411 412 413 414 415 416 417 418 419 420 421 422 423 424 425 426 427 428 429 430 431 432 433 434 435 436 437 438 439 440 441 442 443 444 445 446 447 448 449 450 451 452 453 454 455 456 457 458 459 460 461 462 463 464 465 466 467 468 469 470 471 472 473 474 475 476 477 478 479 480 481 482 483 484 485 486 487 488 489 490 491 492 493 494 495 496 497 498 499 500 501 502 503 504 505 506 507 508 509 510 511 512 513 514 515 516 517 518 519 520 521 522 523 524 525 526 527 528 529 530 531 532 533 534 535 536 537 538 539 540 541 542 543 544 545 546 547 548 549 550 551 552 553 554 555 556 557 558 559 560 561 562 563 564 565 566 567 568 569 570 571 572 573 574 575 576 577 578 579 580 581 582 583 584 585 586 587 588 589 590 591 592 593 594 595 596 597 598 599 600 601 602 603 604 605 606 607 608 609 610 611 612 613 614 615 616 617 618 619 620 621 622 623 624 625 626 627 628 629 630 631 632 633 634 635 636 637 638 639 640 641 642 643 644 645 646 647 648 649 650 651 652 653 654 655 656 657 658 659 660 661 662 663 664 665 666 667 668 669 670 671 672 673 674 675 676 677 678 679 680 681 682 683 684 685 686 687 688 689 690 691 692 693 694 695 696 697 698 699 700 701 702 703 704 705 706 707 708 709 710 711 712 713 714 715 716 717 718 719 720 721 722 723 724 725 726 727 728 729 730 731 732 733 734 735 736 737 738 739 740 741 742 743 744 745 746 747 748 749 750 751 752 753 754 755 756 757 758 759 760 761 762 763 764 765 766 767 768 769 770 771 772 773 774 775 776 777 778 779 780 781 782 783 784 785 786 787 788 789 790 791 792 793 794 795 796 797 798 799 800 801 802 803 804 805 806 807 808 809 810 811 812 813 814 815 816 817 818 819 820 821 822 823 824 825 826 827 828 829 830 831 832 833 834 835 836 837 838 839 840 841 842 843 844 845 846 847 848 849 850 851 852 853 854 855 856 857 858 859 860 861 862 863 864 865 866 867 868 869 870 871 872 873 874 875 876 877 878 879 880 881 882 883 884 885 886 887 888 889 890 891 892 893 894 895 896 897 898 899 900 901 902 903 904 905 906 907 908 909 910 911 912 913 914 915 916 917 918 919 920 921 922 923 924 925 926 927 928 929 930 931 932 933 934 935 936 937 938 939 940 941 942 943 944 945 946 947 948 949 950 951 952 953 954 955 956 957 958 959 960 961 962 963 964 965 966 967 968 969 970 971 972 973 974 975 976 977 978 979 980 981 982 983 984 985 986 987 988 989 990 991 992 993 994 995 996 997 998 999 1000 1001 1002 1003 1004 1005 1006 1007 1008 1009 1010 1011 1012 1013 1014 1015 1016 1017 1018 1019 1020 1021 1022 1023 1024 1025 1026 1027 1028 1029 1030 1031 1032 1033 1034 1035 1036 1037 1038 1039 1040 1041 1042 1043 1044 1045 1046 1047 1048 1049 1050 1051 1052 1053 1054 1055 1056 1057 1058 1059 1060 1061 1062 1063 1064 1065 1066 1067 1068 1069 1070 1071 1072 1073 1074 1075 1076 1077 1078 1079 1080 1081 1082 1083 1084 1085 1086 1087 1088 1089 1090 1091 1092 1093 1094 1095 1096 1097 1098 1099 1100 1101 1102 1103 1104 1105 1106 1107 1108 1109 1110 1111 1112 1113 1114 1115 1116 1117 1118 1119 1120 1121 1122 1123 1124 1125 1126 1127 1128 1129 1130 1131 1132 1133 1134 1135 1136 1137 1138 1139 1140 1141 1142 1143 1144 1145 1146 1147 1148 1149 1150 1151 1152 1153 1154 1155 1156 1157 1158 1159 1160 1161 1162 1163 1164 1165 1166 1167 1168 1169 1170 1171 1172 1173 1174 1175 1176 1177 1178 1179 1180 1181 1182 1183 1184 1185 1186 1187 1188 1189 1190 1191 1192 1193 1194 1195 1196 1197 1198 1199 1200 1201 1202 1203 1204 1205 1206 1207 1208 1209 1210 1211 1212 1213 1214 1215 1216 1217 1218 1219 1220 1221 1222 1223 1224 1225 1226 1227 1228 1229 1230 1231 1232 1233 1234 1235 1236 1237 1238 1239 1240 1241 1242 1243 1244 1245 1246 1247 1248 1249 1250 1251 1252 1253 1254 1255 1256 1257 1258 1259 1260 1261 1262 1263 1264 1265 1266 1267 1268 1269 1270 1271 1272 1273 1274 1275 1276 1277 1278 1279 1280 1281 1282 1283 1284 1285 1286 1287 1288 1289 1290 1291 1292 1293 1294 1295 1296 1297 1298 1299 1300 1301 1302 1303 1304 1305 1306 1307 1308 1309 1310 1311 1312 1313 1314 1315 1316 1317 1318 1319 1320 1321 1322 1323 1324 1325 1326 1327 1328 1329 1330 1331 1332 1333 1334 1335 1336 1337 1338 1339 1340 1341 1342 1343 1344 1345 1346 1347 1348 1349 1350 1351 1352 1353 1354 1355 1356 1357 1358 1359 1360 1361 1362 1363 1364 1365 1366 1367 1368 1369 1370 1371 1372 1373 1374 1375 1376 1377 1378 1379 1380 1381 1382 1383 1384 1385 1386 1387 1388 1389 1390 1391 1392 1393 1394 1395 1396 1397 1398 1399 1400 1401 1402 1403 1404 1405 1406 1407 1408 1409 1410 1411 1412 1413 1414 1415 1416 1417 1418 1419 1420 1421 1422 1423 1424 1425 1426 1427 1428 1429 1430 1431 1432 1433 1434 1435 1436 1437 1438 1439 1440 1441 1442 1443 1444 1445 1446 1447 1448 1449 1450 1451 1452 1453 1454 1455 1456 1457 1458 1459 1460 1461 1462 1463 1464 1465 1466 1467 1468 1469 1470 1471 1472 1473 1474 1475 1476 1477 1478 1479 1480 1481 1482 1483 1484 1485 1486 1487 1488 1489 1490 1491 1492 1493 1494 1495 1496 1497 1498 1499 1500 1501 1502 1503 1504 1505 1506 1507 1508 1509 1510 1511 1512 1513 1514 1515 1516 1517 1518 1519 1520 1521 1522 1523 1524 1525 1526 1527 1528 1529 1530 1531 1532 1533 1534 1535 1536 1537 1538 1539 1540 1541 1542 1543 1544 1545 1546 1547 1548 1549 1550 1551 1552 1553 1554 1555 1556 1557 1558 1559 1560 1561 1562 1563 1564 1565 1566 1567 1568 1569 1570 1571 1572 1573 1574 1575 1576 1577 1578 1579 1580 1581 1582 1583 1584 1585 1586 1587 1588 1589 1590 1591 1592 1593 1594 1595 1596 1597 1598 1599 1600 1601 1602 1603 1604 1605 1606 1607 1608 1609 1610 1611 1612 1613 1614 1615 1616 1617 1618 1619 1620 1621 1622 1623 1624 1625 1626 1627 1628 1629 1630 1631 1632 1633 1634 1635 1636 1637 1638 1639 1640 1641 1642 1643 1644 1645 1646 1647 1648 1649 1650 1651 1652 1653 1654 1655 1656 1657 1658 1659 1660 1661 1662 1663 1664 1665 1666 1667 1668 1669 1670 1671 1672 1673 1674 1675 1676 1677 1678 1679 1680 1681 1682 1683 1684 1685 1686 1687 1688 1689 1690 1691 1692 1693 1694 1695 1696 1697 1698 1699 1700 1701 1702 1703 1704 1705 1706 1707 1708 1709 1710 1711 1712 1713 1714 1715 1716 1717 1718 1719 1720 1721 1722 1723 1724 1725 1726 1727 1728 1729 1730 1731 1732 1733 1734 1735 1736 1737 1738 1739 1740 1741 1742 1743 1744 1745 1746 1747 1748 1749 1750 1751 1752 1753 1754 1755 1756 1757 1758 1759 1760 1761 1762 1763 1764 1765 1766 1767 1768 1769 1770 1771 1772 1773 1774 1775 1776 1777 1778 1779 1780 1781 1782 1783 1784 1785 1786 1787 1788 1789 1790 1791 1792 1793 1794 1795 1796 1797 1798 1799 1800 1801 1802 1803 1804 1805 1806 1807 1808 1809 1810 1811 1812 1813 1814 1815 1816 1817 1818 1819 1820 1821 1822 1823 1824 1825 1826 1827 1828 1829 1830 1831 1832 1833 1834 1835 1836 1837 1838 1839 1840 1841 1842 1843 1844 1845 1846 1847 1848 1849 1850 1851 1852 1853 1854 1855 1856 1857 1858 1859 1860 1861 1862 1863 1864 1865 1866 1867 1868 1869 1870 1871 1872 1873 1874 1875 1876 1877 1878 1879 1880 1881 1882 1883 1884 1885 1886 1887 1888 1889 1890 1891 1892 1893 1894 1895 1896 1897 1898 1899 1900 1901 1902 1903 1904 1905 1906 1907 1908 1909 1910 1911 1912 1913 1914 1915 1916 1917 1918 1919 1920 1921 1922 1923 1924 1925 1926 1927 1928 1929 1930 1931 1932 1933 1934 1935 1936 1937 1938 1939 1940 1941 1942 1943 1944 1945 1946 1947 1948 1949 1950 1951 1952 1953 1954 1955 1956 1957 1958 1959 1960 1961 1962 1963 1964 1965 1966 1967 1968 1969 1970 1971 1972 1973 1974 1975 1976 1977 1978 1979 1980 1981 1982 1983 1984 1985 1986 1987 1988 1989 1990 1991 1992 1993 1994 1995 1996 1997 1998 1999 2000 2001 2002 2003 2004 2005 2006 2007 2008 2009 2010 2011 2012 2013 2014 2015 2016 2017 2018 2019 2020 2021 2022 2023 2024 2025 2026 2027 2028 2029 2030 2031 2032 2033 2034 2035 2036 2037 2038 2039 2040 2041 2042 2043 2044 2045 2046 2047 2048 2049 2050 2051 2052 2053 2054 2055 2056 2057 2058 2059 2060 2061 2062 2063 2064 2065 2066 2067 2068 2069 2070 2071 2072 2073 2074 2075 2076 2077 2078 2079 2080 2081 2082 2083 2084 2085 2086 2087 2088 2089 2090 2091 2092 2093 2094 2095 2096 2097 2098 2099 2100 2101 2102 2103 2104 2105 2106 2107 2108 2109 2110 2111 2112 2113 2114 2115 2116 2117 2118 2119 2120 2121 2122 2123 2124 2125 2126 2127 2128 2129 2130 2131 2132 2133 2134 2135 2136 2137 2138 2139 2140 2141 2142 2143 2144 2145 2146 2147 2148 2149 2150 2151 2152 2153 2154 2155 2156 2157 2158 2159 2160 2161 2162 2163 2164 2165 2166 2167 2168 2169 2170 2171 2172 2173 2174 2175 2176 2177 2178 2179 2180 2181 2182 2183 2184 2185 2186 2187 2188 2189 2190 2191 2192 2193 2194 2195 2196 2197 2198 2199 2200 2201 2202 2203 2204 2205 2206 2207 2208 2209 2210 2211 2212 2213 2214 2215 2216 2217 2218 2219 2220 2221 2222 2223 2224 2225 2226 2227 2228 2229 2230 2231 2232 2233 2234 2235 2236 2237 2238 2239 2240 2241 2242 2243 2244 2245 2246 2247 2248 2249 2250 2251 2252 2253 2254 2255 2256 2257 2258 2259 2260 2261 2262 2263 2264 2265 2266 2267 2268 2269 2270 2271 2272 2273 2274 2275 2276 2277 2278 2279 2280 2281 2282 2283 2284 2285 2286 2287 2288 2289 2290 2291 2292 2293 2294 2295 2296 2297 2298 2299 2300 2301 2302 230

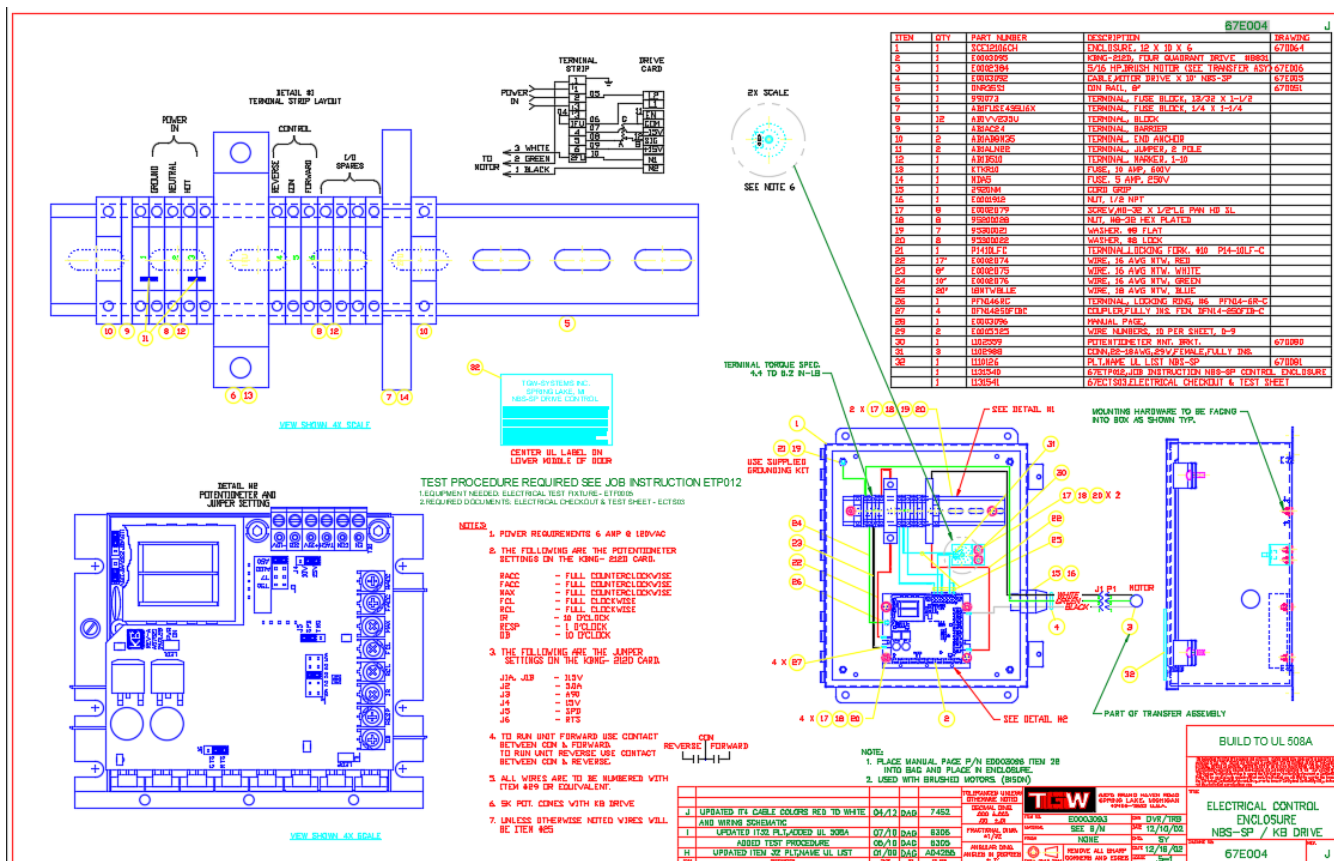

Page 39 of 92





8.4: NBS GEAR MOTOR ACTIVATION

PRIOR to systems activation - Please inspect the gear unit for a vent and **if applicable to the product** remove the rubber sealing plug to activate. The vent is designed to allow excessive pressure to escape. Each gear unit should have a yellow instruction tag as shown below. The tag can be removed after the plug is removed.

Note: The rubber sealing plug is in place for shipping and storage purpose only.

 WARNING	
	In order for the gear motor to release pressure, the vent must be activated by removing the rubber sealing plug PRIOR to gear unit start up.





Please check you gear unit for a vent and if applicable to your product, remove the sealing plug to activate. “<https://www5.nord.com>” Operation Manual for Gear Units (B1000).

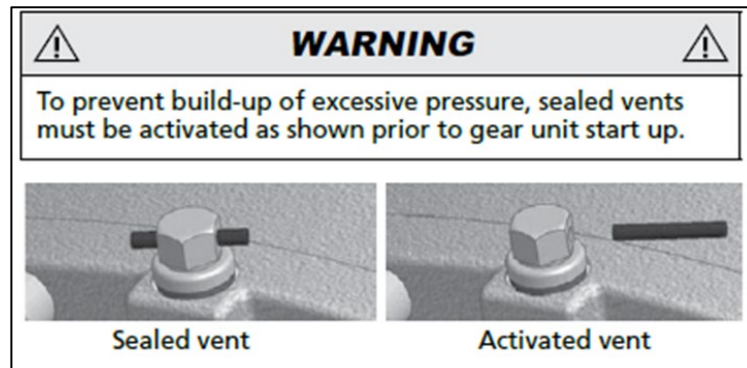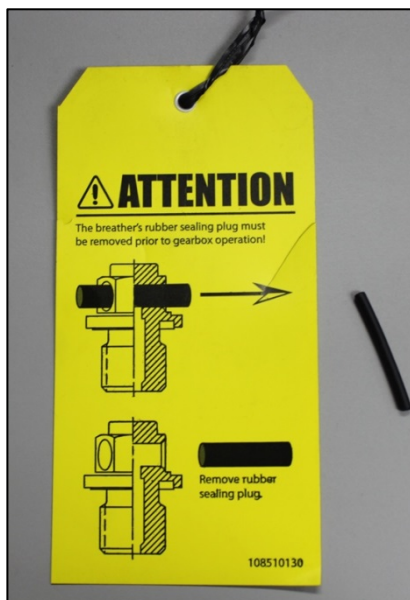

Note:

Yellow tags may be tucked out of sight. Please inspect all motors for a vent and remove sealing plug, if present, to activate.

The following pictures are examples showing where vent plugs may be located depending on the product line and motor position.

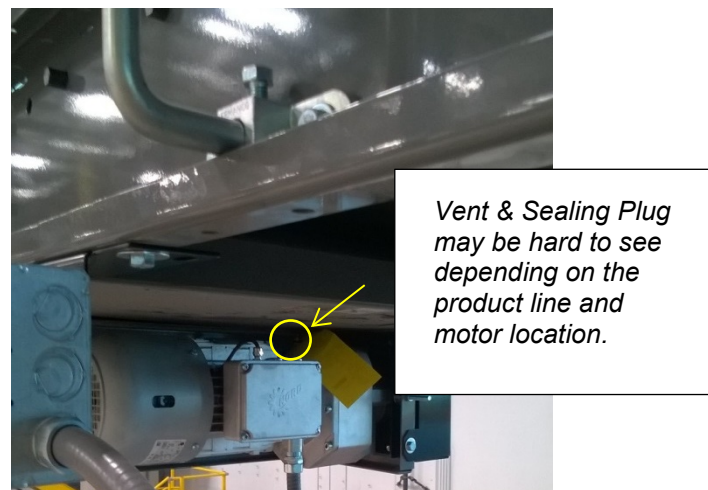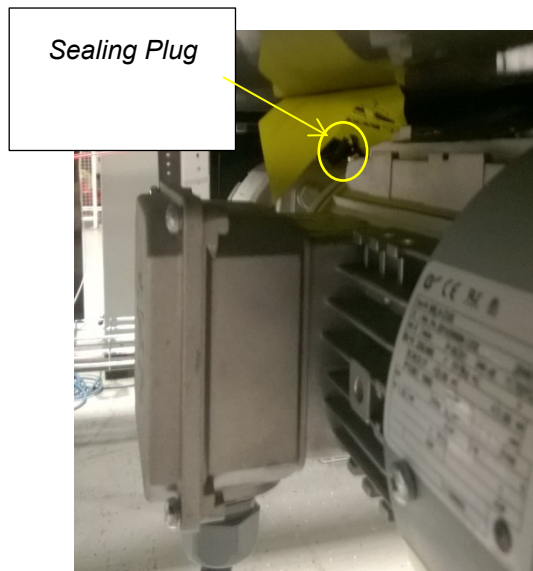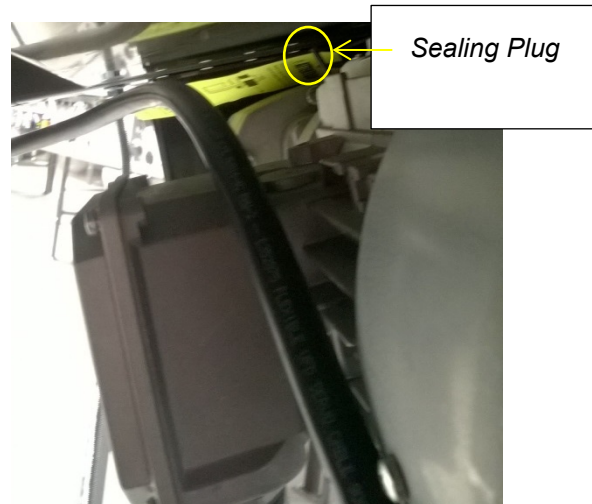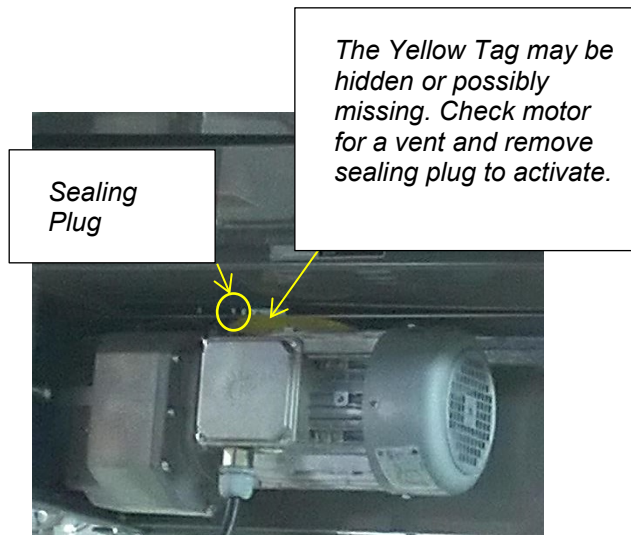

8.5: NBS ELEVATIONS

All top-of-belt (TOB) heights should be installed in accordance with the elevations shown on the drawings. In addition, all sortation devices must be level across both the frame width and length. Leveling of the frames is best done using a rotating laser level along the length of the conveyor and a builder's level across the width.

After the first elevation is established at a critical point, the elevation of all other points shall be relative to this first point. Normal practice is to dimension the layout and measure elevations from the floor at each point of support.

As the conveyor system proceeds onto another floor or into another building or room, a new elevation will be measured from the floor at that point. This new elevation will then become the reference for subsequent elevations.

When installing an overhead system, the first elevation is measured from the floor and becomes the reference elevation point until a change in elevation is shown on the layout. Any new elevation is also measured from the floor and becomes the new reference point. The process is repeated each time an elevation change occurs.

CAUTION

Consult the building architect or a structural engineer regarding ceiling loading or structural limitations of the building if any conveyor is ceiling hung.

8.6: NBS SUPPORTING ARRANGEMENT

Floor Supports

Install bolts used to attach the standhead to the frame so the nut is on the bottom. Standhead bolts should be left finger tight while the conveyor is being assembled and aligned.

Floor supports are ordered by nominal height range, which is the dimension from the floor to top of the support. Conveyor elevations are shown on the layout by top-of-belt elevations. The difference between top of belt (TOB) and top of support is 7-3/8" and 9/58" end pulley and 13 1/16" direct drive bed. This dimension must be subtracted from the TOB height to set support height.

It is important that conveyor frames be installed level. Floor supports will accommodate normal irregularities in the floor surface. Adjustment for elevation in floor supports is accomplished with metal-on-metal bolt clamping force. To achieve the support's stated load rating, it is necessary to tighten the elevation adjustment bolts (3/8" diameter) to 23 ft. /lbs. of torque.

Supports should always be installed in the vertical position, and any variations due to conveyor pitch or floor slope will be compensated for in the pivoting stand-head of the support.



8.7: NBS SUPPORTS & CONNECTIONS

For details on Supports & Connections, see Support & Connections IOM (#1200485) at <https://mhs-conveyor.com/support/iom-manuals/supports-and-connections>

Anchoring

Anchoring in concrete floors is accomplished by drilling into the floor and inserting the suitable anchor bolt. The hole diameter and depth must be in accordance with the anchor bolt manufacturer's instructions, and all applicable codes and requirements.

Anchor intermediate floor supports with two anchor bolts, one through each support foot plate using minimum 3/8" diameter anchor bolts. Stagger anchors from front hole on one side to rear hole on opposite side. For floor supports, over 5' minimum use 1/2" diameter anchor bolts. Anchor bolts for equipment subject to impact loads should be a minimum of 1/2" diameter or as superseded by any other applicable code.


 WARNING	
	<p>Place a bolt through the frame and support immediately with finger tight nut. This will prevent the frame from falling off the support, if bumped, and causing injury.</p>

Bed/Support Connectors


NBS can **ONLY** be supported at bed joints. Install the sortation conveyor (drive bed thru end pulley) on supports. Leave approximately 1/16" gap between low friction rail joints. The conveyor must be level and straight. Adjoining beds are connected using 3/8" thick by 10" nut plate, 3/16" thick by 10" clamping plate and 3/8" hardware. These parts are shipped with other loose parts. Insert 10" nut plate halfway into the formed channel end of each bed.

Mount standhead support with two 3/8-16 x 1" hex head bolts with flat and lock washers. After that mount 10" clamp plate to channel ends with four 3/8-16 x 1" hex head bolts with nut, flat and lock washers (see picture below). It can be seen that a crossmember could be moved into the recessed area of the standhead support bracket if needed.

Maintaining the rigidity and flatness of the conveying surface is the end result of proper support installation.

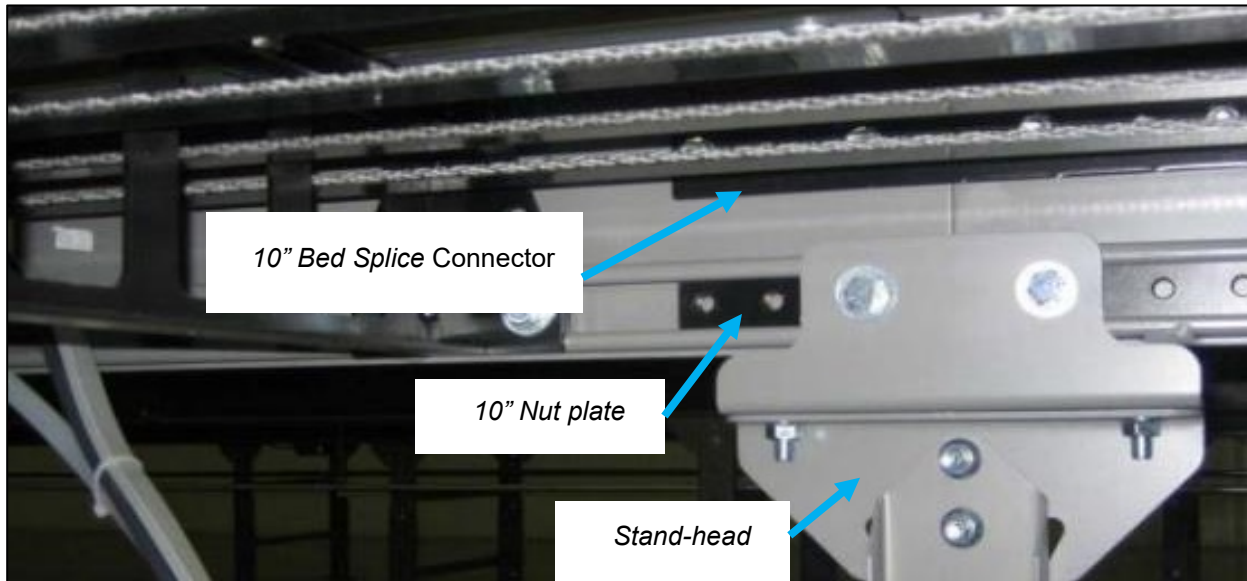

8.8: NBS90 POLYSORT BED CONNECTION KIT

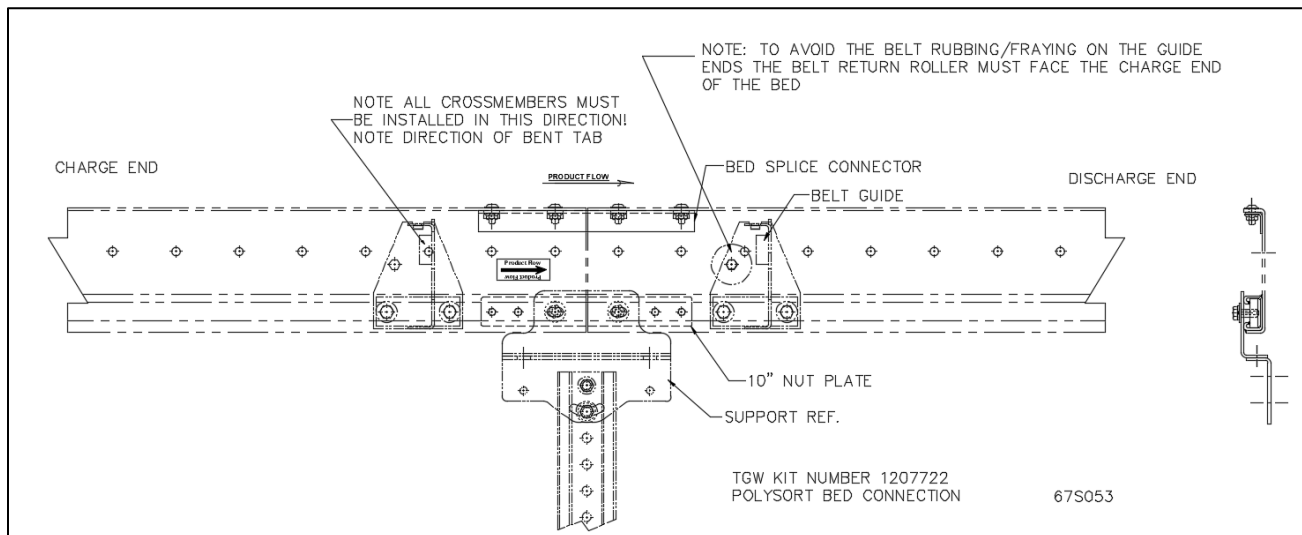


Bed Splice Connection Kit MHS Conveyor # 1207722

CAUTION


- **Note:** To avoid the belt rubbing/fraying on the guide ends the belt return roller must face the charge end of the bed.


8.9: NBS90 POLYSORT COMPONENT ORIENTATION

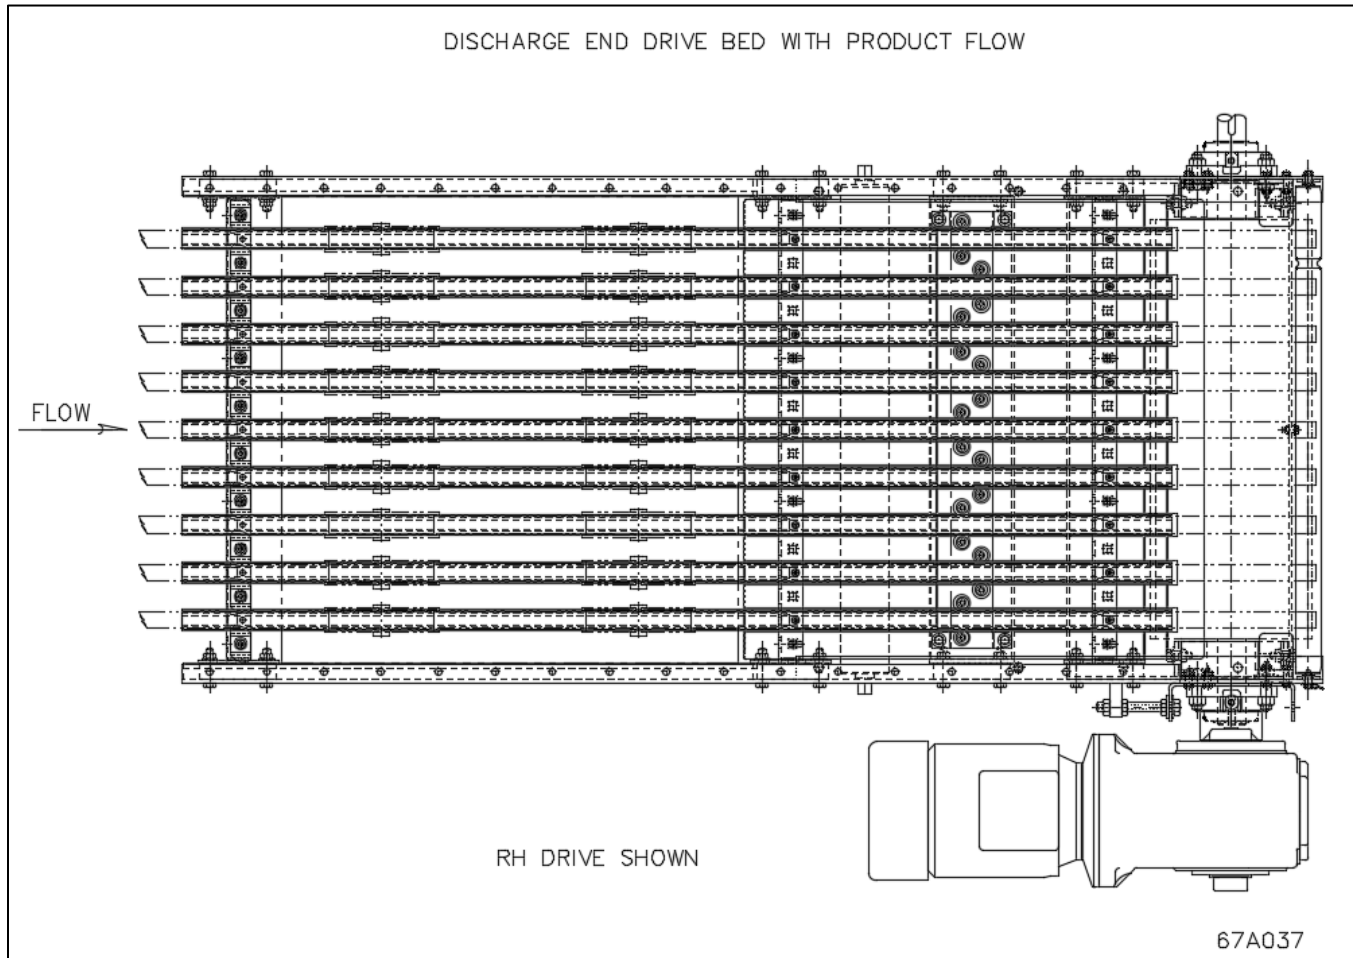

Using your conveyor system layout drawing and the numbers on the I.D. tags on each component, position and orients the conveyor sections. You must know:

- The direction of product flow
- The elevation height
- The drive is positioned at the discharge end
- The end pulley is positioned at the charge end
- Ensure rails are aligned and snag free



WARNING



IMPORTANT!

Do not make alterations to the equipment without consulting with user's representative and MHS Conveyor. Unauthorized modifications to the equipment may impair its function, create a hazardous condition, affect its useful life, and/or void the warranty.

8.10: NBS90 POLYSORT TRANSFER GENERAL LAYOUT

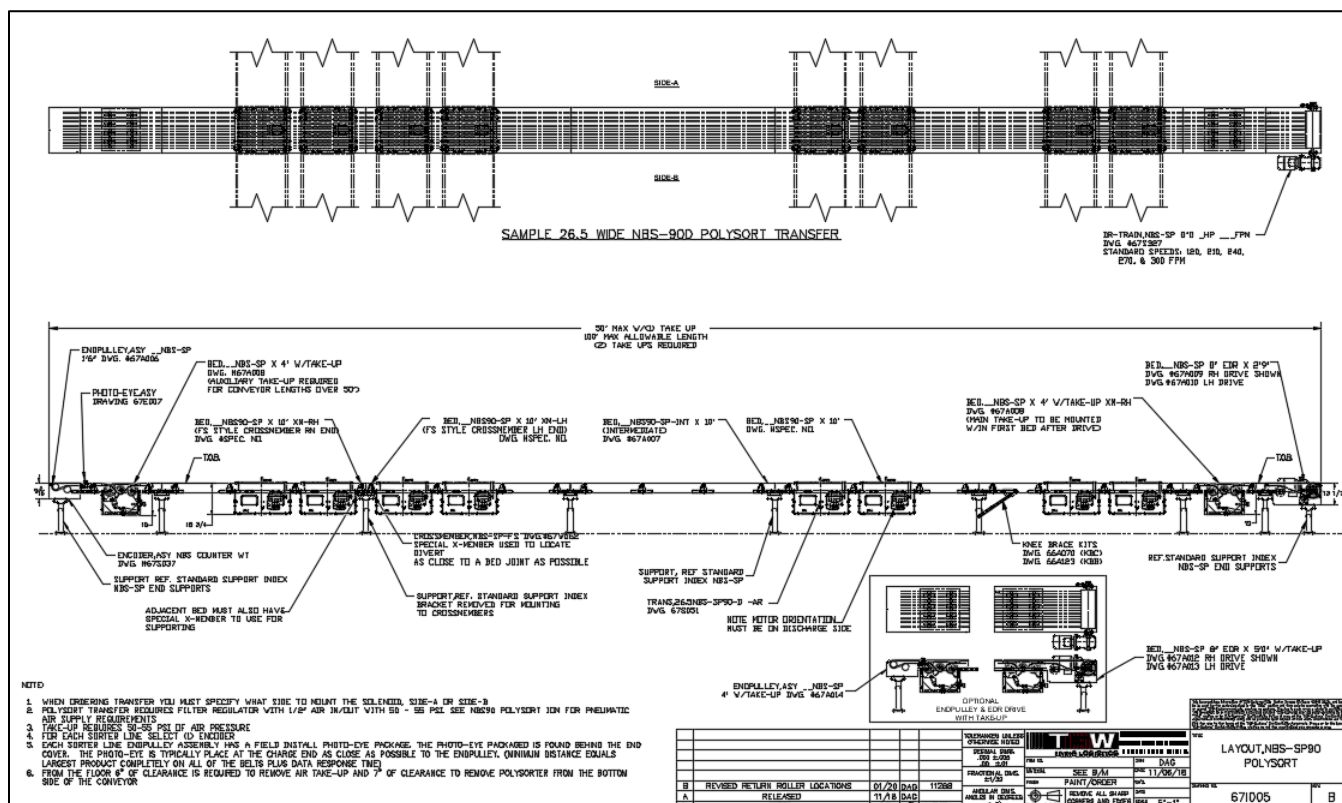

General Layout, 26.5 Wide NBS-90D PolySort Transfer

8.11: NBS90 POLYSORT SENSING SWITCHES


Retroreflective photoeye Ray 10

Adjust the retroreflective type as follows:


- Determine what sizes of target the photoeye must sense.
- Adjust for the worst case, usually smallest item, by loosening photoeye mounting nut and aligning while making sure photoeye has unobstructed view of reflector.
- Move the target in and out of the field of detection to ensure that the photoeye energizes and de-energizes.

Adjust the photoeye type as follows:

- Loosen photoeye switch mounting bolt and adjust photoeye so that the product passes directly in front of the switch face, as close to the switch face as possible without making contact.
- Check that the photoeye energizes and de-energizes as the product passes in front of the eye's face.
- Tighten the mounting bolt.

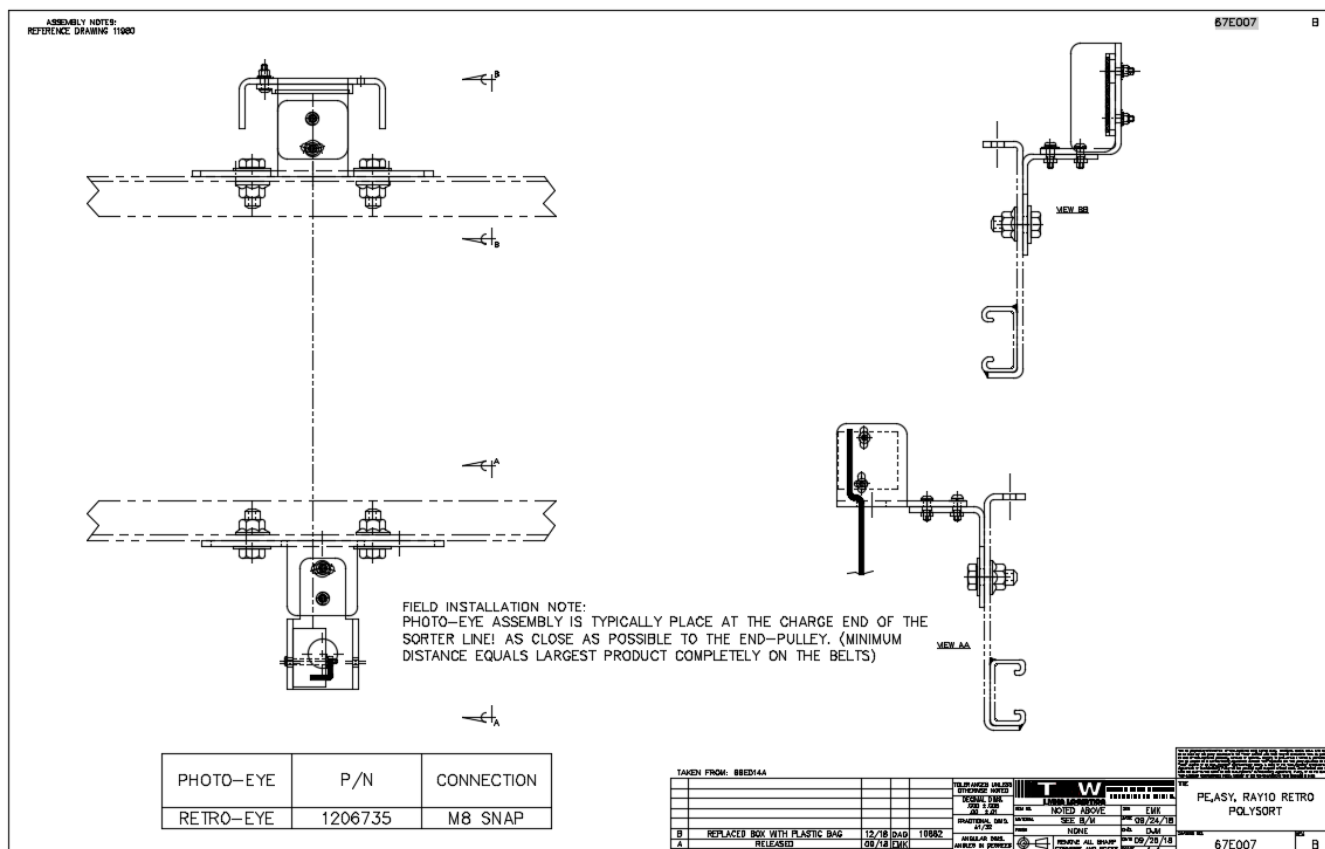

8.12: NBS90 SP SORTER TRANSFER GENERAL LAYOUT

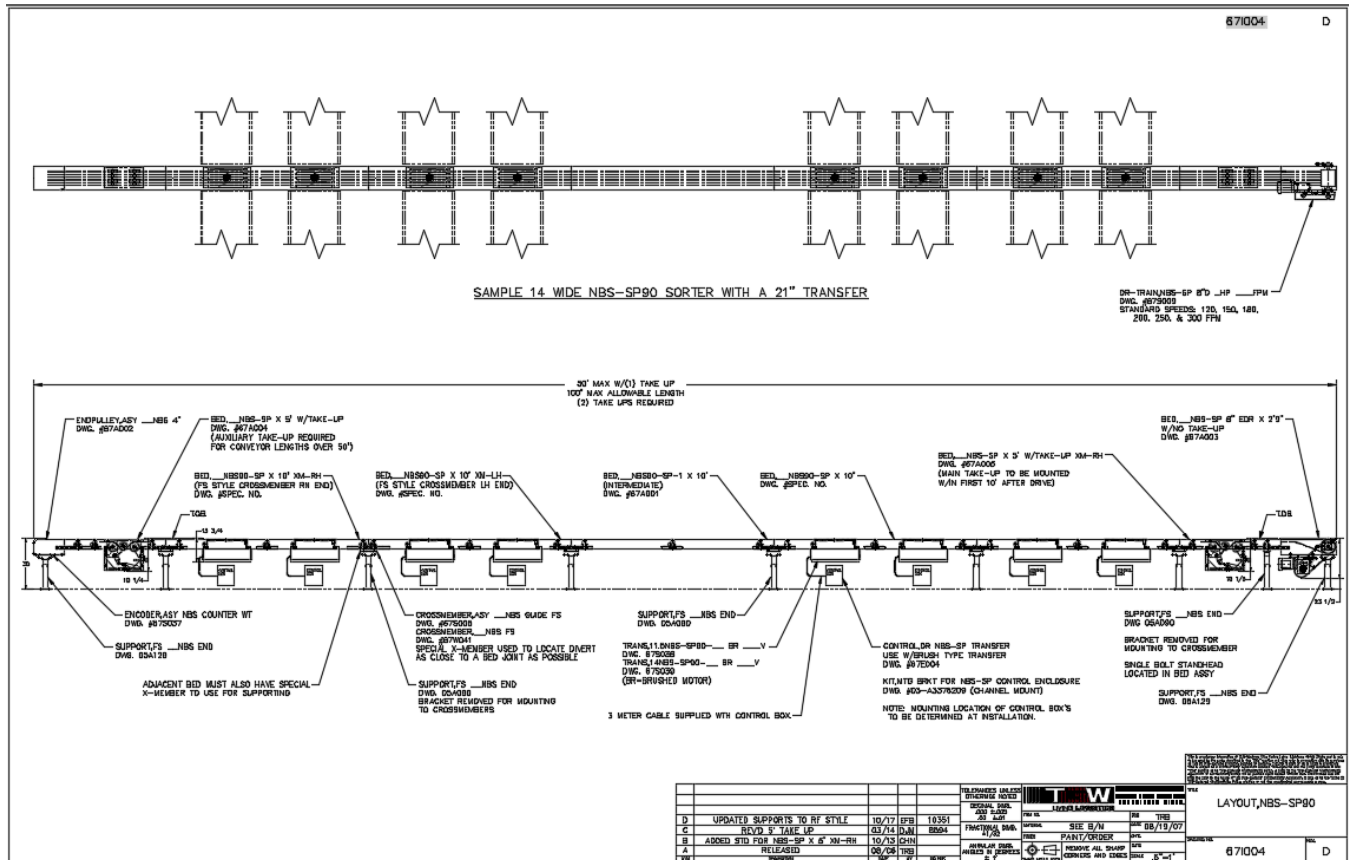


General Layout, 14 Wide NBS-90D SP Transfer

8.13: NBS90 POLYSORT CEILING SUPPORTED

The NBS90 PolySort conveyor is designed to ALWAYS be supported at the bed joints. For ceiling hanging applications, an NBS90 PolySort ceiling hanger kit MUST be used at the bed joints as shown in the diagrams below. The end pulley and drive beds show connection locations for the specific ceiling hanger kit designed for those locations. Along with the ceiling hangers, cross bracing is required for all hangers. This ceiling hanging method provides the lateral conveyor rigidity.




Deviation from this ceiling hanging requirement will void the warranty of the NBS90 PolySort.

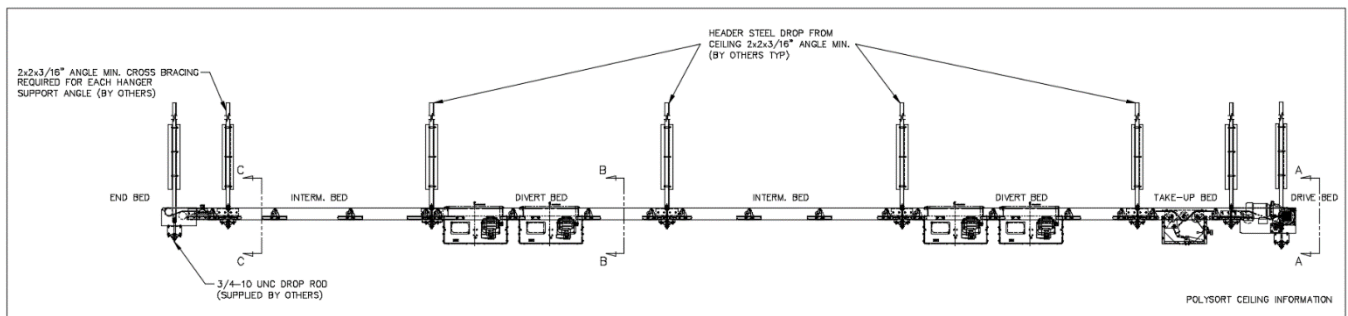



CAUTION

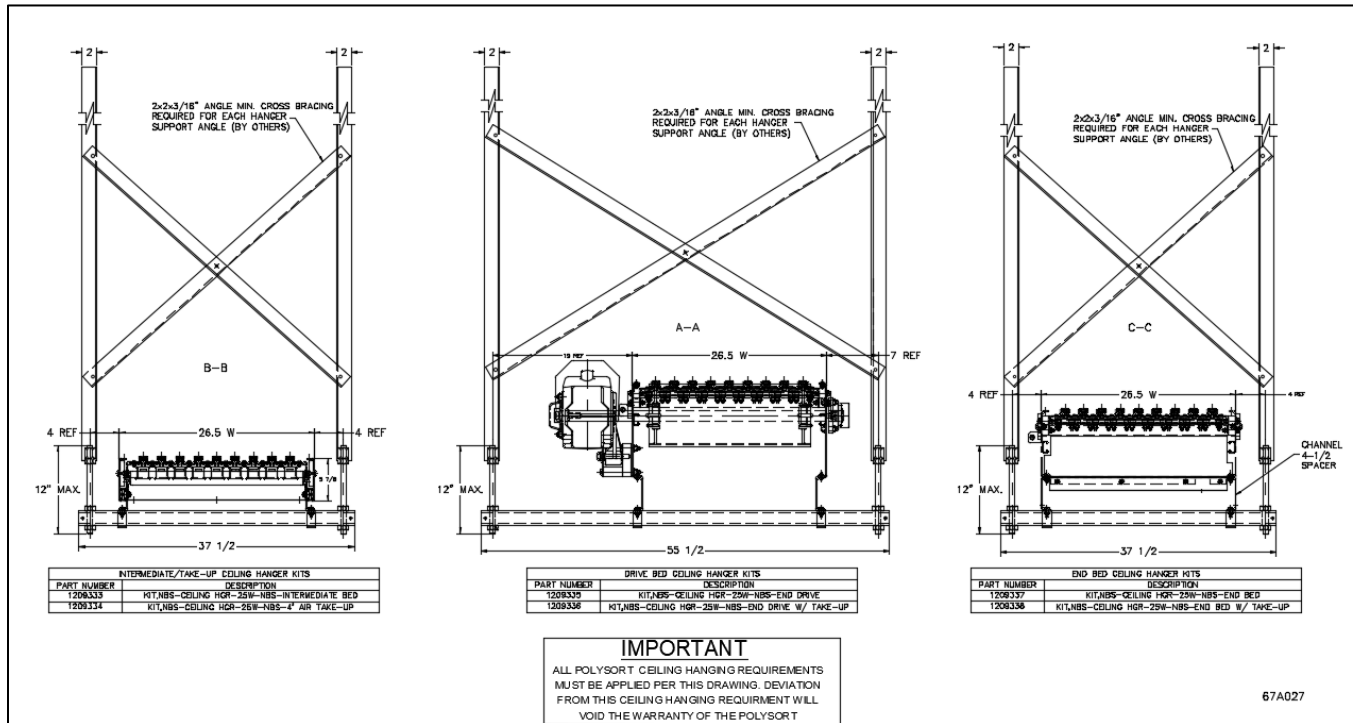- Deviation from this ceiling hanging requirement will void the warranty of the **NBS90 PolySort**.



Ceiling hanger diagrams are a guide to establish a final support design.

Consult structural engineer for actual application.


 WARNING	
	<ul style="list-style-type: none"> Consult structural engineer for actual application.

8.14: NBS ALUMINUM EXTRUSION T-NUT CONNECTORS

The aluminum extrusions that hold the UHMW belt guides are installed at the factory. The triple T-nut connectors are mounted, at the factory, flush with the ends of the aluminum extrusions on the discharge side of all NBS bed assemblies. These triple nut connectors should be extended half-way out of the extrusions before "plugging in" the next bed downstream during installation. After all bed components are installed, leveled and straightened the 5/16-18 hex head bolts used in the triple T-nut connectors should all be loosened, to straighten the aluminum extrusion joints and re-tightened.

Note:

Ensure rails are aligned and snag free.

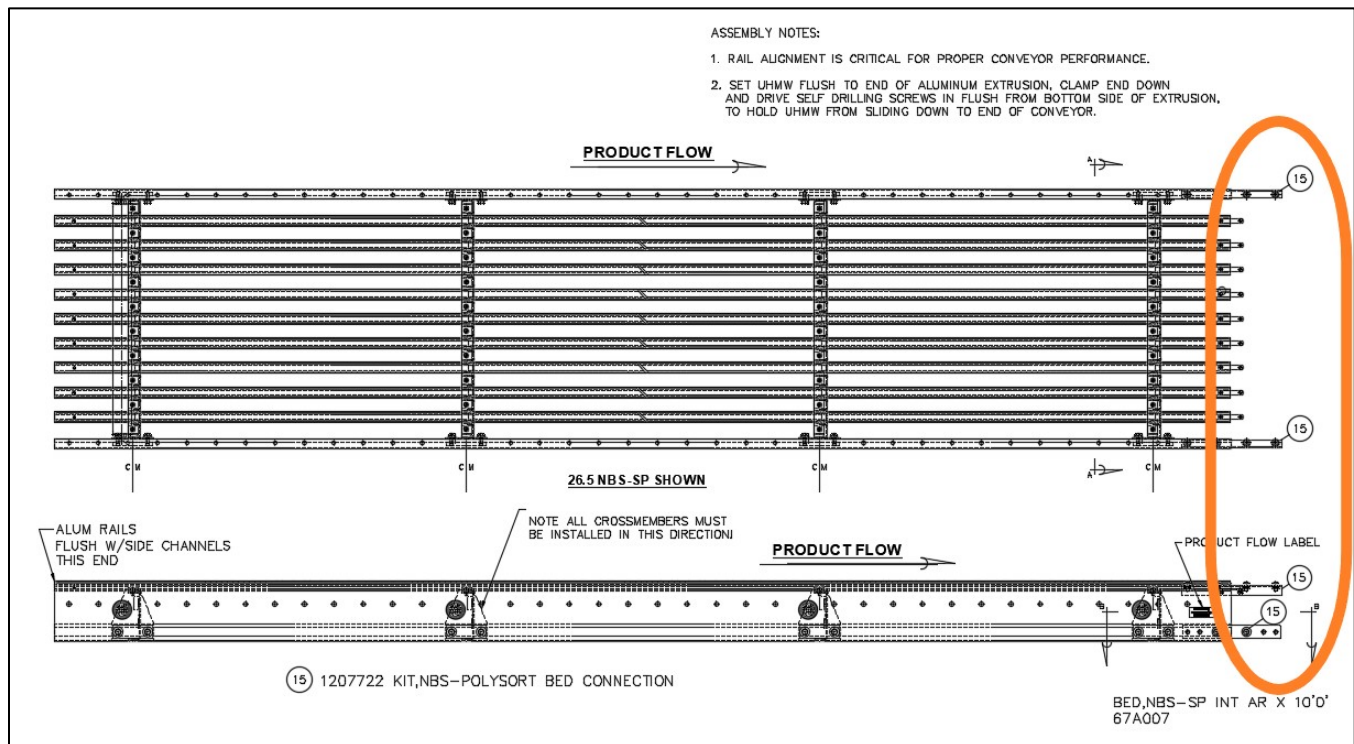

8.15: NBS BELT INSTALLATION

Pre-installation

Belts, as shipped from MHS Conveyor, are cut to length with lacing installed. Rolls of belting should be stored on edge on a pallet. Never leave a belt where it may absorb moisture. Remove any tight shipping banding immediately upon arrival. Lacing pins are taped inside the lacing on each belt.


The NBS90 PolySort conveyor should be completely installed and aligned before belt installation.

Remove the plexiglass side covers from the sides of the auxiliary belt take-up frame, exposing the take-up pulleys. Switch the take-up air switch to the un-tensioned position, raising the take-up pulleys to the minimum take-up position.

Belt Threading

Because NBS uses multiple narrow belts of long length, it will be most efficient to have two people working together during the threading process.

The belting must be uncoiled and laid out flat on the sorter, with the smooth black carrying surface up. The belts must not be allowed to twist along their length as they are installed. Start at the charge end (farthest from the drive) and feed all of the belts through together at the same time. Start the belts down between the gap roller and the end pulley. Guide the belts under the 4" diameter end pulley and up and over the 4" diameter snub pulley, before passing through the belt guide wheels.

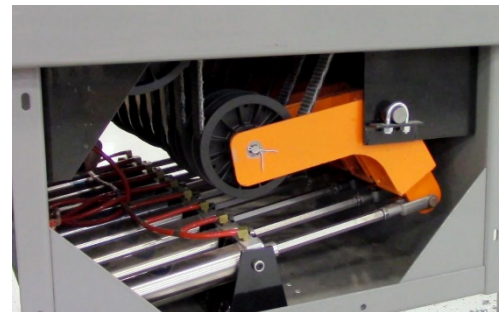

All belts must pass over any return rollers positioned to minimize belt sag and through holes in crossmembers.


The black PVC surface of the belt should be up and the rough surface rides in the UHMW tracks.

Mesh the loops of the lacing on one end of the belt with the loops on the other, so the sides of the belt are even, and install the lacing pin.

Belt Tracking

With the belts tensioned, "bump" the motor to be sure rotation is correct, the belts are running smoothly and maintaining their position. Most NBS90 PolySort conveyors do not require belt tracking. However, each conveyor should be checked at the charge and discharge ends to be sure the belts are floating in a neutral position not crowding the sides of the UHMW guide tracks. If the belts are out of their grooves or riding hard to one side fine adjustments can be made on the driven pulley jackscrew, at the discharge end.

Reinstall the bottom pan on the end pulley assembly and access covers on the auxiliary belt take-up.

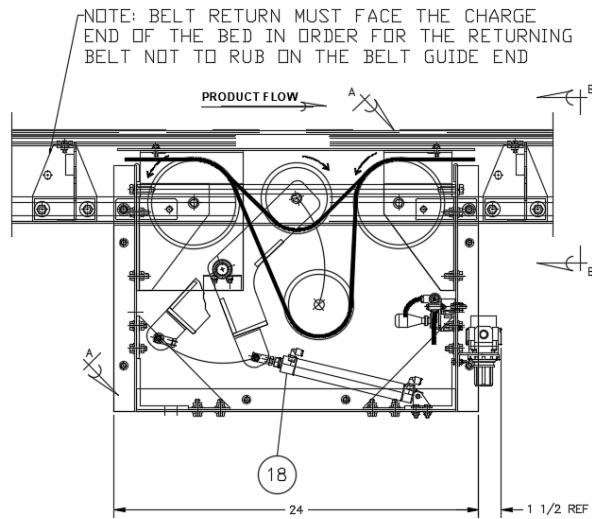

NOTES:

1. EXTRA BELT REQUIRED FOR THE TAKE UP - 3 5/8"
2. TAKE UP IS CAPABLE OF TAKING UP 12 3/4" OF BELT
3. MAXIMUM BELT TENSION IS 200 LBS/INCH OF BELT WIDTH X .9375 " WIDE BELT X 9 BELTS X .75 LACING EFF. = 1266 LBS.
4. TE (EFFECTIVE TENSION) IS $T_1/1.36 = 310$ LBS. T_2 (TAKEUP TENSION) IS .36 TE = 112 LBS. OR 37 LBS. PER BELT.
5. THEORETICAL PRESSURE FOR T_2 OF 37 LBS. IS 82 PSI.

BELT TAKE-UP
SUB-ASY, 6.5 NBS-SP 67S054

CAUTION

As shown above: To avoid the belt rubbing/fraying on the guide ends the belt return roller must face the charge end of the bed.

8.16: NBS BELT SPECIFICATIONS AND LACING

- PVC 200 belt
- Width: 15/16" + /- 1/32"
- Thickness: .203" +/- .015 thick, with a recessed
- Thickness at recess: .125" to .156"
- Lace: Clipper P/N 05265 U2S12 (tote); minimum number of hooks = 5 on one end, 6 on other end.
- Lacing Pin: Nylostainless
- .093 dia. x 7/8" +/- 1/32" long (316 stainless steel w/nylon coating); clipper P/N 02670
- For field repair chamfer belt corners, no more than 1/8".



CAUTION

Only use the specified lacing and pin. Any substitution will result in premature belt failure.


8.16.1: NBS-90 PolySort Belt Replacement

Replacement belts may be ordered by the original "P/N" part number marked on the belt or belt length can be determined by the following information.

- 2'-9' drive bed = 5' 11"-1/4" (71.25")
- 5'0" Drive bed with take-up = 10'8"-7/8" (128.875")
- 1'6" End Pulley = 2'11"-3/8" (35.38")
- 4'0" End Pulley with take-up = 8'3" (99")
- NBS90 PolySort transfers require 0" each
- Take-up = 3-5/8" (3.625")
- All other beds require 2 times their overall length.

NOMINAL WIDTHS (# OF BELTS)

- 26.5BF with 9 belts on 2 1/2" centers

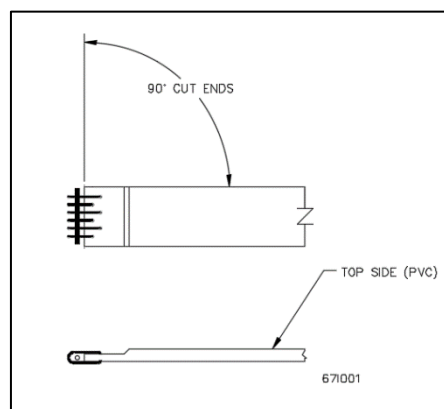

8.16.2: NBS-90 SP Belt Replacement

Replacement belts may be ordered by the original "P/N" part number marked on the belt or belt length can be determined by the following information.

- 2'-9' drive bed = 5' 11"-1/4" (71.25")
- 1'6" End Pulley = 2'11"-3/8" (35.38")
- NBS90 SP transfers require 0" each
- Take-up = 3-5/8" (3.625")
- All other beds require 2 times their overall length.

NOMINAL WIDTHS (# OF BELTS)

- 11.25 NBS SP = 3 belts
- 14 NBS SP = 4 belts

Chapter 9: NBS PNEUMATIC GENERAL GUIDELINES

General

Suggested requirements for NBS sorter and diverts

Every conveyor system is unique, with its own specific requirements. Therefore, the following is a general guide.

MAIN FEEDER: Air velocity through the main feeder piping can be kept smooth with lower losses using large diameter pipe with minimum bends and restrictions. Standard weight black pipe or copper is suitable for plumbing the compressed air overhead to all points of use.

AIR DROPS: MHS Conveyor recommends using 3/4" pipe on air drops for high flow and low pressure loss. The drop is terminated with a drain at the bottom. A tee located prior to the drain branches off to the conveyor. This branch line must contain a lockout/shutoff. A shutoff must also be located in the drop before the branch tee. OSHA Rule 29, CFR1910.147 requires energy sources (air drops) be turned off and capable of being locked or labeled with a warning tag.

Note: NBS pneumatic systems does not require lubrication. Lubrication may affect the valving operation and cause sluggish or erratic operation.

Important: If your air compressor uses synthetic oil, a coalescing filter plus a regular filter of 5 micron is required. Synthetic oils will shrink the seals in pneumatic devices and valving.

CAUTION

All air lines must be thoroughly blown out (of all debris) and the regulator must be set as required before connecting air to the NBS.

9.1: NBS90 POLYSORT PNEUMATIC

Every conveyor system is unique, with its own specific requirements. Therefore, the following is a general guide.

Main Feeder

Air velocity through the main feeder piping can be kept smooth with lower losses using large diameter pipe with minimum bends and restrictions. Standard weight black pipe or copper is suitable for plumbing the compressed air overhead to all points of use.

Air Drops (NBS90 PolySort)

MHS Conveyor recommends using 3/4" pipe on air drops for high flow and low pressure loss. The drop is terminated with a drain at the bottom. A tee located prior to the drain branches off to the conveyor. This branch line must contain a lockout/shutoff. A shutoff must also be located in the drop before the branch tee. OSHA Rule 29, CFR1910.147 requires energy sources (air drops) be turned off and capable of being locked or labeled with a warning tag.

NOTE: The NBS90 PolySort and SP pneumatic system does not require lubrication. Lubrication may affect valve action and cause sluggish or erratic operation.

IMPORTANT! If your air compressor uses synthetic oil, a coalescing filter plus a regular filter of 5 micron is required. Synthetic oils will shrink the seals in pneumatic devices and valves.


CAUTION

- All airlines must be thoroughly blown out (of all debris) and the regulator must be set as required before connecting air to the NBS.

CAUTION

- **NBS90 PolySort** diverters must not be operated above 55 PSI. Exceeding this may damage unit.

9.2: NBS90 POLYSORT AIR SUPPLY REQUIREMENTS

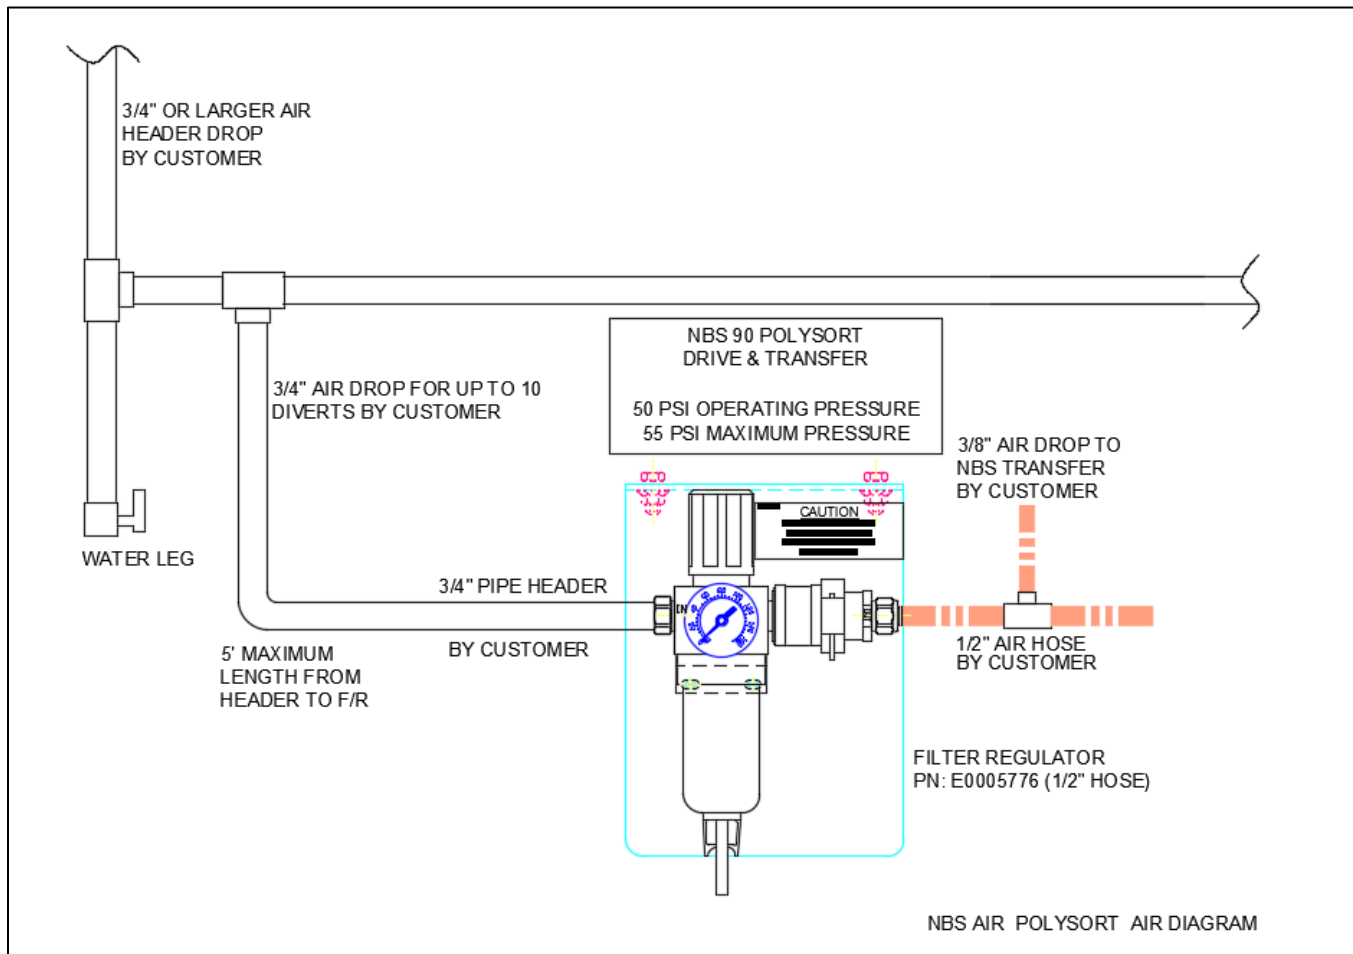

Pneumatic pressure requirements:

- Maximum conveyor length each way from regulator is 80'.
- Locate regulator in center of conveyor, if possible, for maximum efficiency.
- Overhead feeder line pressure to be 100 PSI minimum.
- Low pressure switch should be set at 10 PSI below the operating air pressure for the specific device noted below.
- In high humidity or low temperature, use air dryer.
- Use 5 micron filter.
- Lockout/shutoff valve to be provided by air system installer.

Regulators pressure set to unit requirements:


- Air take-up 80-85 PSI
- 90° PolySort transfer 50-55 PSI

NBS90 PolySort Diverters are actuated by four air bags.

The air consumption per divert is calculated by:

- $.072\text{CF (cubic feet)} \times \text{CPM (cycles per min.)} = \text{SCFM (Standard Cubic Feet / Minute)}$

9.3: NBS90 SP AIR SUPPLY REQUIREMENTS

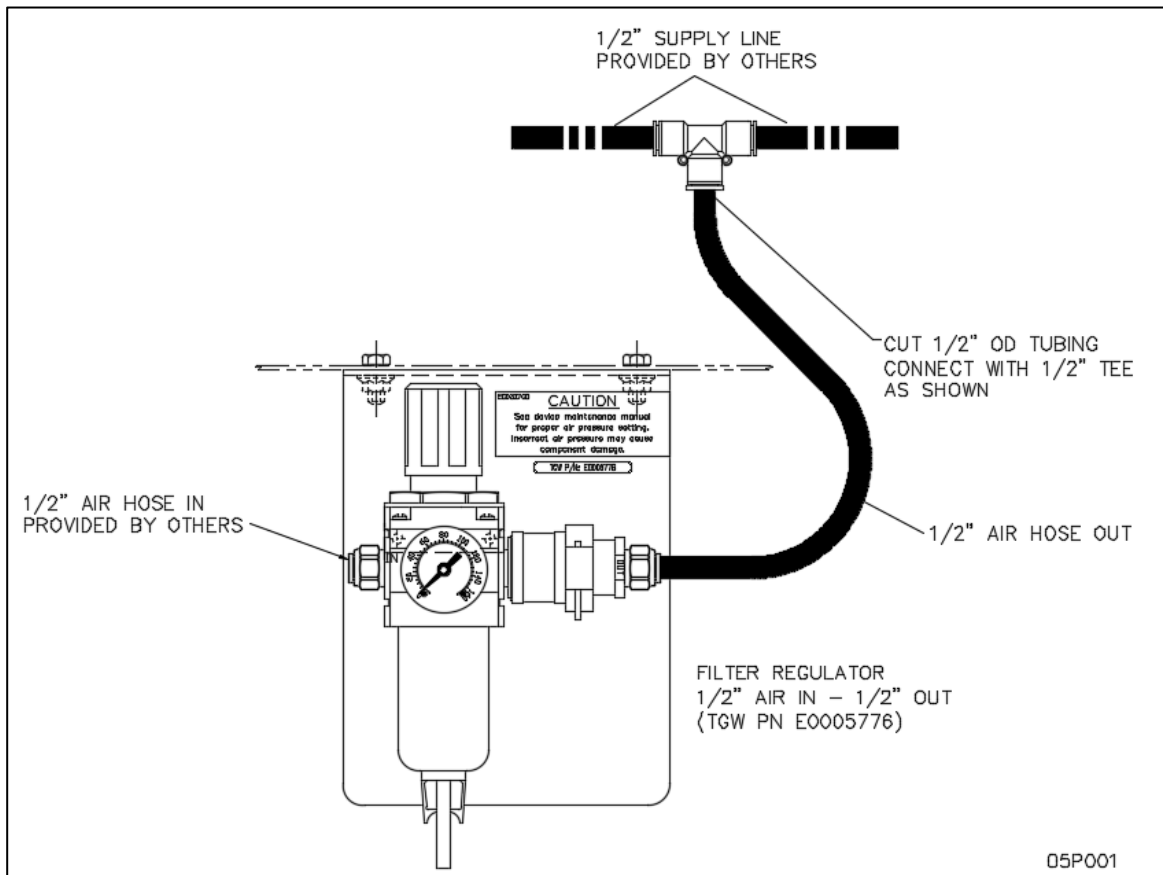

NBS90 SP PNEUMATIC REQUIREMENTS

- Maximum conveyor length each way from regulator is 80'. Locate regulator in center of conveyor, if possible, for maximum efficiency.
- Overhead feeder line pressure to be 100 PSI minimum
- Low pressure switch to be set at 90 PSI
- In high humidity or low temperature, use air dryer
- Use 5 micron filter
- Lockout/shutoff valve to be provided by air system installer
- Regulators pressure set to unit requirements:

NBS90 SP

- Air take-up 50-55 PSI
- 90° transfer 45-50 PSI

NBS90 SP Formulas

NBS 90SP transfers are actuated by a single air cylinder with a 2" bore and 1/2" stroke.

The air consumption per transfer is calculated by:

- $.0092CF \text{ (cubic feet)} \times CPM \text{ (cycles per min.)} = SCFM \text{ (Standard Cubic Feet / Minute)}$

Adding together the air requirements of all transfers connected to one regulator will give total air flow requirements for that NBS air system.

9.4: NBS90 SP & POLYSORT AIR LINE CONNECTIONS

Source Air Connection

Select the best position along the conveyor to connect the source air from a drop line. Ideally, the regulator should be centrally located along the sorter and should not be more than 80' from the furthest diverter/transfer or drive.

Attach the filter/regulator assembly to the bottom flange of the side frame using the mounting bracket supplied with the kit.

The source airline that distributes air to the diverters/transfers should be 1/2" hose that is rated to handle a pulsating 60psi line pressure. MHS Conveyor part number 89000572 TUBING, URETHANE 1/2 OD is available for this purpose.

Cut into the supply line along the sorter bed and install the source airline tee fitting MHS Conveyor part number 89000640. Connect the source air line between this fitting and the filter/regulator output.

The hose size at each diverter/transfer is 3/8 OD and the source airline can be tapped at each location using MHS Conveyor part number 89000640 1/2" tee and 1/2" x 3/8" tube reducer fitting MHS Conveyor part number 1155149.

Low Pressure Air Switch

The installation of an air pressure switch in the NBS air supply circuit, to detect a drop in air pressure below required levels, is recommended. If pressure drops below approximately 40 PSI, the conveyor system should shut off.

It is recommended that this air switch be located either at the furthest end of the source air line away from the regulator or at the pneumatic belt take-up located in or near the drive bed at the discharge end of the sorter.

CAUTION

- Do not use a lubricator. When replacing filter/regulator bowl, lightly lubricate seal with mineral oil. Do not use synthetic oils such as esters or silicones. DO NOT get oil inside filter/regulator bowl.
- The function of the low pressure air switch is to protect the drive pulley and the NBS narrow belts from being damaged from slipping under load in the event of an air pressure disruption. Loss of air pressure may also cause diverter / transfer jams.

9.5: NBS90 SP SOLENOIDS

For the sake of simplicity, only two different solenoids are used to actuate the NBS90-SP transfers, 120VAC or 24VDC.

Both models use spring return, 4-way solenoids with a DIN electrical connector, mounted on the outside, opposite the discharge direction of the diverter/transfer.

The lift mechanism of the NBS90-SP is powered in both directions and has combination needle-valve / exhaust mufflers installed in ports "EA" & "EB" that are used to adjust actuation speeds.

Solenoids are plumbed such that the diverter/transfer is normally in the down position and raises on solenoid activation.

The MHS Conveyor part numbers for replacement solenoids are:

- E0002998 VALVE, SMC 4-WAY 24VDC DIN CONN
- E0002995 VALVE, SMC 4-WAY 110VAC DIN CONN

9.6: NBS AIR REGULATOR LOCK OUT VALVE ON AND OFF POSITION

Slide valve LEFT to shut OFF



Slide valve RIGHT to turn ON



Note:

The air regulator valve label details the on and off positions.

For air pressure regulations please see detailed instruction in this manual.



WARNING



- Do not remove and install sleeve valve to infeed side of regulator. Back feeding through the regulator will cause damage and void the warranty.

9.7: NBS COMMISSIONING OF EQUIPMENT

9.7.1: *General*

Commissioning of the equipment can best be defined as the final adjustments and test of the installed equipment required for its proper operation. The need for commissioning is inherent, since the individual components of equipment are brought together at the installation site to operate as a system.

Mechanical and electrical commissioning are most often carried out simultaneously. Commissioning must simulate the actual operation of the system as closely as possible to demonstrate the ability to perform reliably at the specified rate in the prescribed operational sequence.

During the Commissioning Phase, it is necessary to load the equipment with product to be conveyed, which provides the means of detecting those areas requiring adjustment. Personnel will be required to support operational functions. This may serve as part of operator training and familiarity with the system. During the commissioning activity, special attention should be directed toward personnel safety. No unnecessary risks should be taken that would endanger the safety of any personnel. All personnel must familiarize themselves with all safety features of the system such as emergency stops and motor disconnects.

9.7.2: *Mechanical Static Checkout*

(No power to the conveyor.)

- The belt tension and air pressure must be set to the correct pressure setting, which is dependent on sorter width. Air pressure higher than required can cause belt failure.
- Listen for air leaks after air pressure is turned on.
- Check the plumbing of the solenoids.
- Follow the belt path through the entire conveyor. The belt must be threaded through the drive per the diagram in the Belt Installation section, all of the belts must be captured between the grooved guide pulleys at each diverter location, and no belt should be threaded under a crossmember (belt path labels are attached at each diverter location from the factory).
- Visually inspect the installation. Is the conveyor straight? Is the conveyor reasonably level from side to side? From end-to-end?
- Check guard rail clearance to product.
- Eliminate all catch points.
- Check conveyor elevations.
- All bolts and set screws tight.
- Check product clearance to overhead structures.
- Simulate all operational functions with actual product.
- All guards in place with proper clearance.
- All OSHA required guards in place on walkways, catwalks, ladder-ways, floor openings, etc.
- All labels and warning signs in proper place, unobstructed.

9.7.3: Mechanical Dynamic Checkout

(Power to the conveyor, but no product on it.)

- Turn the motor on. With the belt moving make sure each belt has proper tension.
- Actuate each diverter solenoid manually.
- Check the belt tracking.

 WARNING	
	NBS90 Transfer motors must be controlled to run on demand

Chapter 10: NBS MAINTENANCE & TROUBLESHOOTING

10.1: GENERAL



The key to ensuring the expected return on investment is to protect against premature failure with a well-planned program of preventive maintenance.

Preventive maintenance programs examine what may fail and then formulate action plans which will prevent failure or downtime. This kind of maintenance includes lubrication and replacement or repair of parts before failure but after expected life has been attained.

Preventive maintenance will save expensive downtime and wasted energy. It will increase the life of components. Along with preventive maintenance, there should be a record-keeping system. You must know what problems you have had in the past and when different components were serviced.

A visual and audible inspection should be taken every day. You can see if a chain is loose, oil leaking, sprocket worn; or you can hear a faulty bearing, noisy chain or any other noise that might indicate a problem. When something major goes wrong with some component, records should be kept to see if a pattern to the problem occurs.

All personnel working in close proximity to the conveyor should inform maintenance or their supervisor of any unusual noise.

 WARNING	
	<ul style="list-style-type: none"> Do not perform maintenance on the conveyor until the startup controls are locked out and cannot be turned on by any person other than the one performing the maintenance. If more than, one member of a crew is working on the conveyor, EACH CREW MEMBER MUST HAVE A LOCK ON THE POWER LOCK OUT. The air pressure must be turned off to the work area. All pneumatic devices must be de-energized to prevent accidental cycling of the device. Make sure personnel are clear of all conveyor equipment before restarting the system.

10.2: GEARMOTOR



The drive unit should be checked monthly. Check the gearmotor for leaking seals. Check the gearcase for proper oil level and add the approved oil for your particular unit. Check for overheating, vibrations and dirt buildup.

Each Nord gearmotor is supplied from the factory with the correct grade and quantity of lubricant for the specified mounting position. Under special circumstances such as high or low ambient temperatures, optional oils should be used.

10.3: ROLLERS

All rollers used in NBS equipment have precision, sealed lubed for life bearings and do not require maintenance. Periodically removing the rollers has an added benefit of distributing the wear on the bearing inner race by rotating the axle to a new position. If a defective roller bearing is found, replace the roller.

Do not allow tape, banding, shrink wrap, etc. to build up on roller or pulleys. This can cause rollers to jam and the belt to mistrack. If this is a common occurrence due to the product packaging, clean up on a regular schedule.

 WARNING	
	<p>Use a blunt object to remove rollers from frame like a putty knife and a screwdriver. Using sharp pointed object could slip and cause injury.</p>



10.4: AIR SYSTEM

The best preventive maintenance for any air operated device is clean air. Always be alert for air leaks anywhere in the system and correct promptly. Check all air line filter bowls weekly for accumulated water and drain if necessary. Check for proper PSI settings on air regulators.

 WARNING	
	<p>Check to confirm tools and foreign objects have not been left on or inside the conveyor.</p> <p>Check to confirm all loosened parts have been retightened.</p> <p>Check to confirm all guards have been installed.</p> <p>Prohibit riding on conveyor by anyone.</p> <p>Think before making any adjustments. It may prevent an injury. Remember, all moving components are potentially dangerous.</p> <p>Protect yourself from unexpected starts when working on a stopped unit by locking and tagging the control panel or disconnect switch that supplies power to the unit.</p>

10.5: MOTOR CONTROLS

Inspection (Semi-Yearly)



 WARNING	
	Before servicing or performing any work in the motor control panel, disconnect and lockout the main incoming service. If only the panel disconnect is off, the incoming side will still be hot.

Excessive overheating is indicated by discoloration of components. Most often, these symptoms are a sign of loose connections. If left uncorrected this can eventually cause arcing between components, leading to destruction of the controls. It is normal to find the interior of the control cabinet very warm when it is first opened.

The condition of contacts must be checked on all contactors and starters that show signs of overheating. Make sure that they are free of dust and are not excessively pitted or burned. When badly burned or worn, the contacts must be replaced.

In the course of inspecting contact condition, spring pressure should be checked. As contact surface wears down, spring pressure can be lost because of the overheating. Contact spring resiliency can usually be detected by fingertip pressure.

Check for faulty door gaskets especially when there are excessive deposits of foreign materials. Particular attention should be given to conductive deposits because they can cause flashovers and premature component failure when allowed to collect to any great extent. Either reposition or replace defective gaskets and clean the control cabinet.

 WARNING	
	Avoid touching components until they have had time to cool. Some may still be hot.

Check all overload settings on motor controls. Check for loose wiring and tighten as required.

Cleaning

When cleaning a control cabinet, it is best to use a vacuum cleaner rather than compressed air. A vacuum cleaner removes rather than redistributes dust and dirt. Compressed air can damage and displace relay contacts and springs.

10.6: NBS MAINTENANCE CHECKLIST

End Pulley Assembly

- Examine end pulley assembly. Remove any residue clinging to end pulley, and end pulley snubber.
- Check to see if belt is tracked correctly thru lower belt guide wheels. Examine guide wheels for wear. Replace any wheels that are excessively worn.
- Remove any residue or buildup of fibers between UHMW rails at joints.

Intermediate Bed Assembly

- Remove any residue or buildup of fibers between UHMW rails joints.
- Remove any residue or build up on carrier rollers.

Drive Assembly

- Examine drive pulley for excessive lagging wear.
- Remove any residue built up on drive pulley.
- Check to see if belt is tracked correctly thru lower belt guide wheels. Examine guide wheels for wear. Replace any wheels that are excessively worn.
- Examine the belt guide feeder rollers. Remove any residue built up on rollers.
- Examine individual take up wheels for wear. Clean off any build up on wheels.
- Examine take up snubber pulleys. Clean off any residue built up on pulleys.
- Check chain tension. An over tensioned chain will cause excessive gearbox noise

Transfer Module

- Remove any residue or build up on transfer rollers.
- Check tension of both timing belts. (Drive and jump belts)
- Check height of transfer rollers above the belt top surface. Check the plane passing over the transfer rollers for level and parallelism to belt surfaces. Replace any missing hardware, and tighten any loose hardware.

Encoder

- Remove any residue or buildup on encoder wheels.

10.7: MAINTENANCE SCHEDULE



Periodic maintenance intervals shown may vary with load, speed, hours of daily operation, ambient temperature, humidity, etc. Intervals can be established by fairly frequent maintenance at first, then lengthen the intervals as justified by observation of need based on history. The following is based on 5 days per week, 8 hours per day under normal conditions.

Daily

- Listen to everything for unusual noises or vibration.
- Visually inspect to see that conveyor sections are clear and free of debris.
- Check to see that all safety guards are in place.
- Check any oil leakage.
- Check any unusual noises or vibration.
- Check for loose bolts or parts.
- Check air filter bowls for accumulated water.
- Listen for air leaks.

Weekly

- Inspect bearings, gear reducers and motors for excessive noise or heat.
- Clean breather cap on gear motor (if used).
- Check operation of all electrical controls.
- Inspect motor mounting bolts.
- Check for proper PSI on air regulators.

 WARNING	
	<p>Prohibit riding on conveyor by anyone.</p> <p>Think before making any adjustments. It may prevent an injury. Remember, all moving components are potentially dangerous.</p> <p>Protect yourself from unexpected starts when working on a stopped unit by locking and tagging the control panel or disconnect switch that supplies power to the unit.</p>

Monthly



- Check air filters for cleanliness.
- Clean chains and sprockets and lubricate with SAE 30 weight oil or equivalent. (Check chain tension and tightness of all adjusting screws.)
- Check drive unit for leaking seals and oil level in gearcase (if applicable), unusual noises, vibration and stress cracks.

Semi-Yearly

- If dry sounding, lubricate unsealed bearings in rollers with light oil. Check free spin of rollers.
- Drain and flush gearcase after each 2,500 hours of normal operation or at least every 6 months (if applicable).
- Grease motor shaft bearings.
- Inspect and clean motor control centers.
- Grease regreasable bearings.

Yearly

- Change oil in gearboxes.
- Inspect tightness of all nuts and bolts on units, adjust if necessary and tighten.
- Check for plumb and level. Shims have been known to vibrate out from under supports in isolated incidents.
- Touch up paint that has been chipped. Unpainted surfaces will rust.
- Inspect for stress/fatigue cracks in frame and supports.

 WARNING	
	<p>Check to confirm tools and foreign objects have not been left on or inside the conveyor.</p> <p>Check to confirm all loosened parts have been tightened.</p> <p>Check to confirm all guards have been installed.</p>

10.8: NBS TROUBLESHOOTING GUIDE

	<u>Problem</u>	<u>Possible Cause</u>	<u>Remedy</u>
1.	Belts rolling out of guide tracks	Conveyor not installed straight	Straighten conveyor
		Conveyor not installed level	Inspect conveyor to insure there are not low/high spots at the divert points. Re-level conveyor as necessary
		Air pressure for the belt take-up is set too low	Set air pressure to the proper PSI. Reference IOM manual
		Divert is not rising up to proper height	Verify air pressure setting.
		Divert is not rising up to proper height	Verify the number of diverts per air drop. Consult IOM Manual to verify that number of diverts per air drop does not exceed MHS Conveyor recommendations.
		Divert spur isn't set to the proper height	Inspect and adjust height of divert spur as needed.
2.	Divert Tub engaging at wrong time	PLC programming	Inspect timing of logic with encoder to ensure data is correct.
		Solenoid wired incorrectly	Inspect wiring, and adjust accordingly.
		Clogged solenoid	Inspect solenoid valve to ensure no water is present
3.	Belt Failure	Routing of belt	Inspect belt routing to ensure proper installation. Refer to IOM Manual for additional information.
		Belting rails not aligned properly	Check rail alignment at joints to ensure proper alignment.
		Incorrect belt tension	Inspect air pressure within belt take-up to ensure proper setting

	<u>Problem</u>	<u>Possible Cause</u>	<u>Remedy</u>
4.	Product not diverting correctly	Discharge conveyor unit not in proper location	Based upon product being handled on NBS discharge conveyor location is variable; refer to IOM Manual for further assistance.
		Height of discharge conveyor not correct	Inspect discharge conveyor, and adjust accordingly.
5.	Loud humming noise	Belts installed incorrectly	Inspect belt installing to ensure proper side is making contact with the rail.

10.9: NBS REPAIR PROCEDURES

Gearmotors



NBS drive units use Gearmotors which are properly filled at the factory with sufficient lubrication for more details contact the specified gearmotor manufacture details.

Disassembly/assembly procedure as follows:

- Remove necessary guards to access maintenance areas.
- Disconnect any electrical connection.
- Remove Gearmotor.
- Perform required maintenance.
- Reverse procedures for assembly.
- After all fasteners are tight, double check chain tension and sprocket alignment.
- Replace all guards.

Solenoid Valves

In order to minimize downtime, it is normally not feasible to repair malfunctioning electrical or valve components while leaving the conveyor unusable. Spare components should be kept in stock for emergency replacement. If feasible, the part may be repaired later to replace maintenance stock. Items which cannot be readily repaired or are questionable should be replaced. Components under warranty should not be repaired except in an emergency.

 WARNING	
	Before removing a valve or other pneumatic component, shut off and exhaust the entire pneumatic circuit and shut off and lockout electrical supply.

Chapter 11: PARTS IDENTIFICATION

11.1: REPLACEMENT PARTS IDENTIFICATION

This section is used to identify parts that may require replacement during the life of the conveyor. Parts which specifically pertain to MHS Conveyor are included with illustrations.

A "Recommended Spare Parts List" is published for all conveyor orders of \$20,000 or more. This spare parts list is sent to the purchaser approximately (2) weeks after the order is received. It includes part numbers, description, pricing and recommended quantities to be kept on hand for maintenance.

If you are unable to locate this document, another may be obtained by contacting the MHS Conveyor Lifetime Services at 231-798-4547.

11.2: SPARE PARTS PRIORITY LEVEL EXPLANATIONS

Level #1

Failure of a priority level #1 spare part ("A" level part) may cause major disruption of system performance.

Priority level 1 spare parts must be on-hand, and available to be replaced in the event of a component failure that could shut down a critical function of a conveyor system.

Priority level 1 spare parts include motors, gear reducers, gearmotor, motorized rollers, air solenoid valves, and related components. The majorities of these parts are purchased from MHS Conveyor vendors and carry their own warranties through these vendors. For more warranty information, see MHS Conveyor Equipment Warranty.

Level #2

Failure of a priority level #2 spare parts ("B" level part) usually is gradual and should not cause a major system disruption.

Priority level 2 spare parts are parts required for smooth system operation and preventative or regular mechanical maintenance.


Priority level 2 spare parts include roller chain, sprockets, belt pulleys, rollers, air cylinders, and other related parts whose failure should not stop a conveyor system suddenly. These parts tend to wear out gradually and are not known to fail suddenly.

Level #3

Priority level #3 parts ("C" level part) rarely fails and are easily obtainable.

Priority level 3 spare parts are parts that rarely fail or maybe optionally used by the customer.


11.3: NBS90 POLYSORT INTERMEDIATE BED AR W/AIR TAKE-UP 4'0"

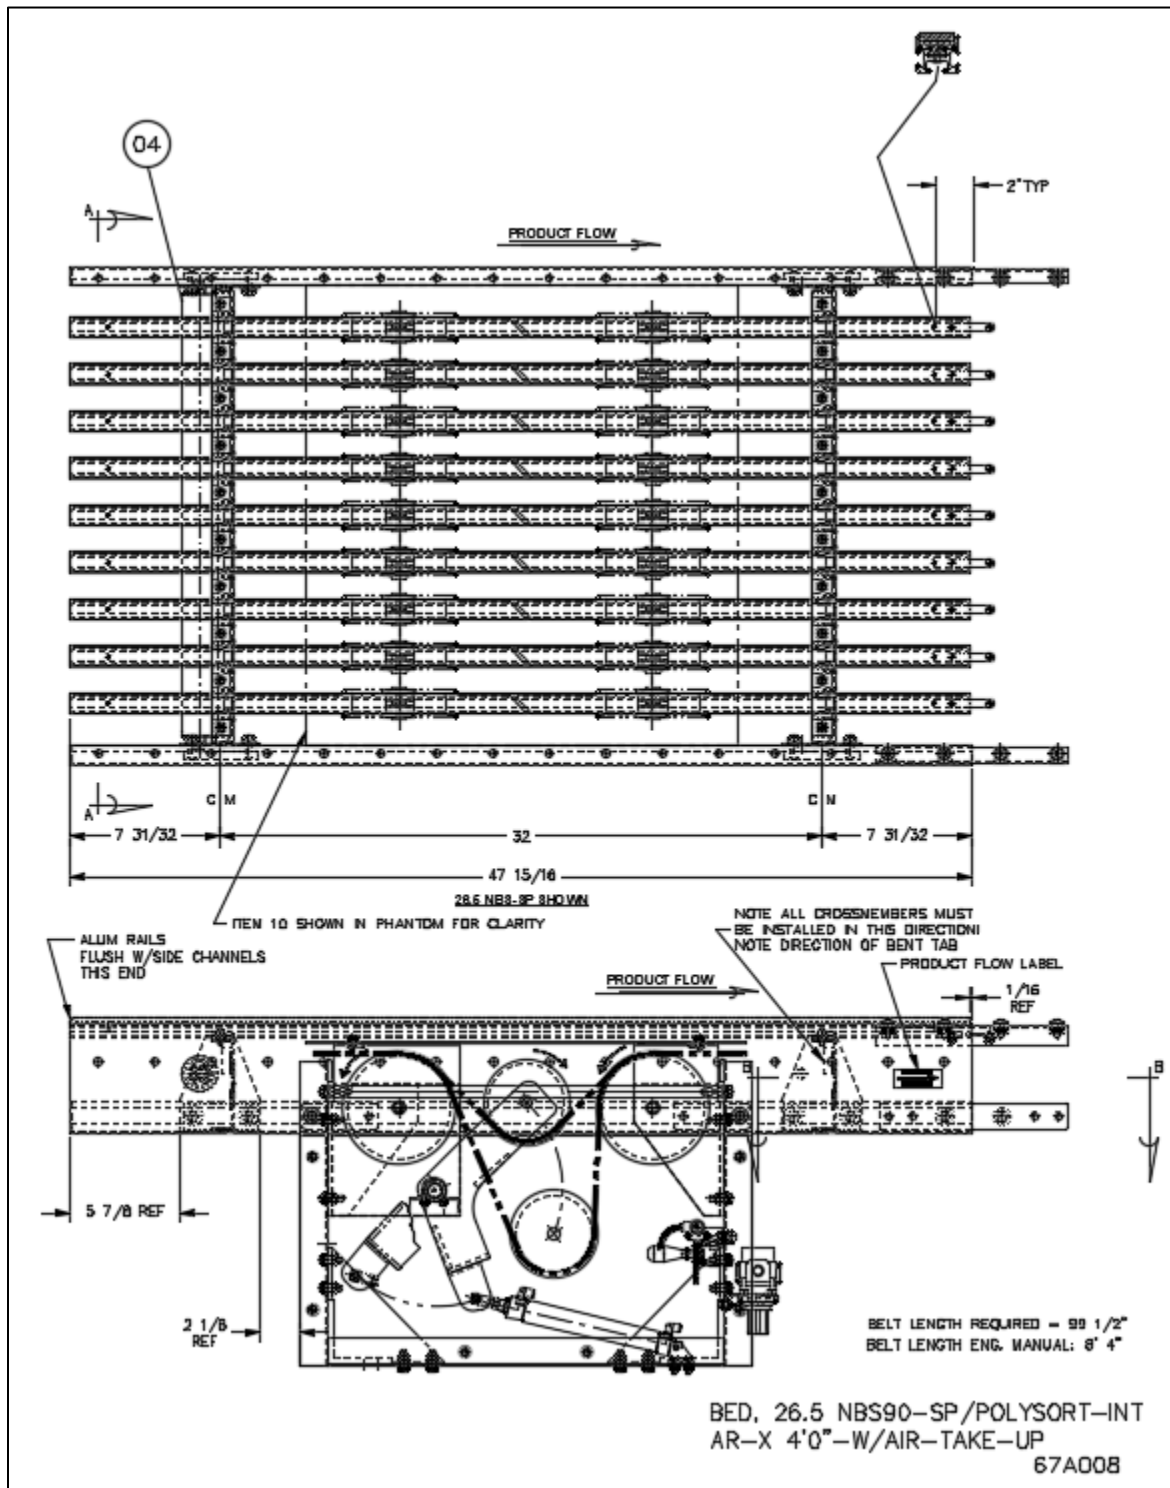

11.3.1: Replacement Parts – NBS90 PolySort Intermediate Bed AR W/Air Take-up 4'0"

NBS90 PolySort Belt Take-up		
BED,NBS SP-26.5W-TAKEUP-AR-4'0"-AIR OP		26.5W
Balloon	Description	Item #
04	ROLLER,RET 26.5NBS-SP 1.9PRBG	1202217
BELT TAKE-UP SUB ASY 26.5NBS-SP		----
01	WHEEL,IDLER PULLEY 5.5" DIA	1214526
02	WHEEL,IDLER PULLEY 4" DIA	1214527
18	CYL,AIR BIMBA 097-DP	1213259
26	TUBING,3/8"POLYU-95DURO 1/4"ID	E0001392
27	TUBING,1/4"POLYU-95DURO.160ID	E0001391
50	VALVE,CLIPPARD MMV-L4QD 4 WAY	1115797
51	REGULATOR,SMC	1133882
REF DWG# 67A008 & 67S054		


11.4: NBS90 POLYSORT STANDARD END DRIVE AR

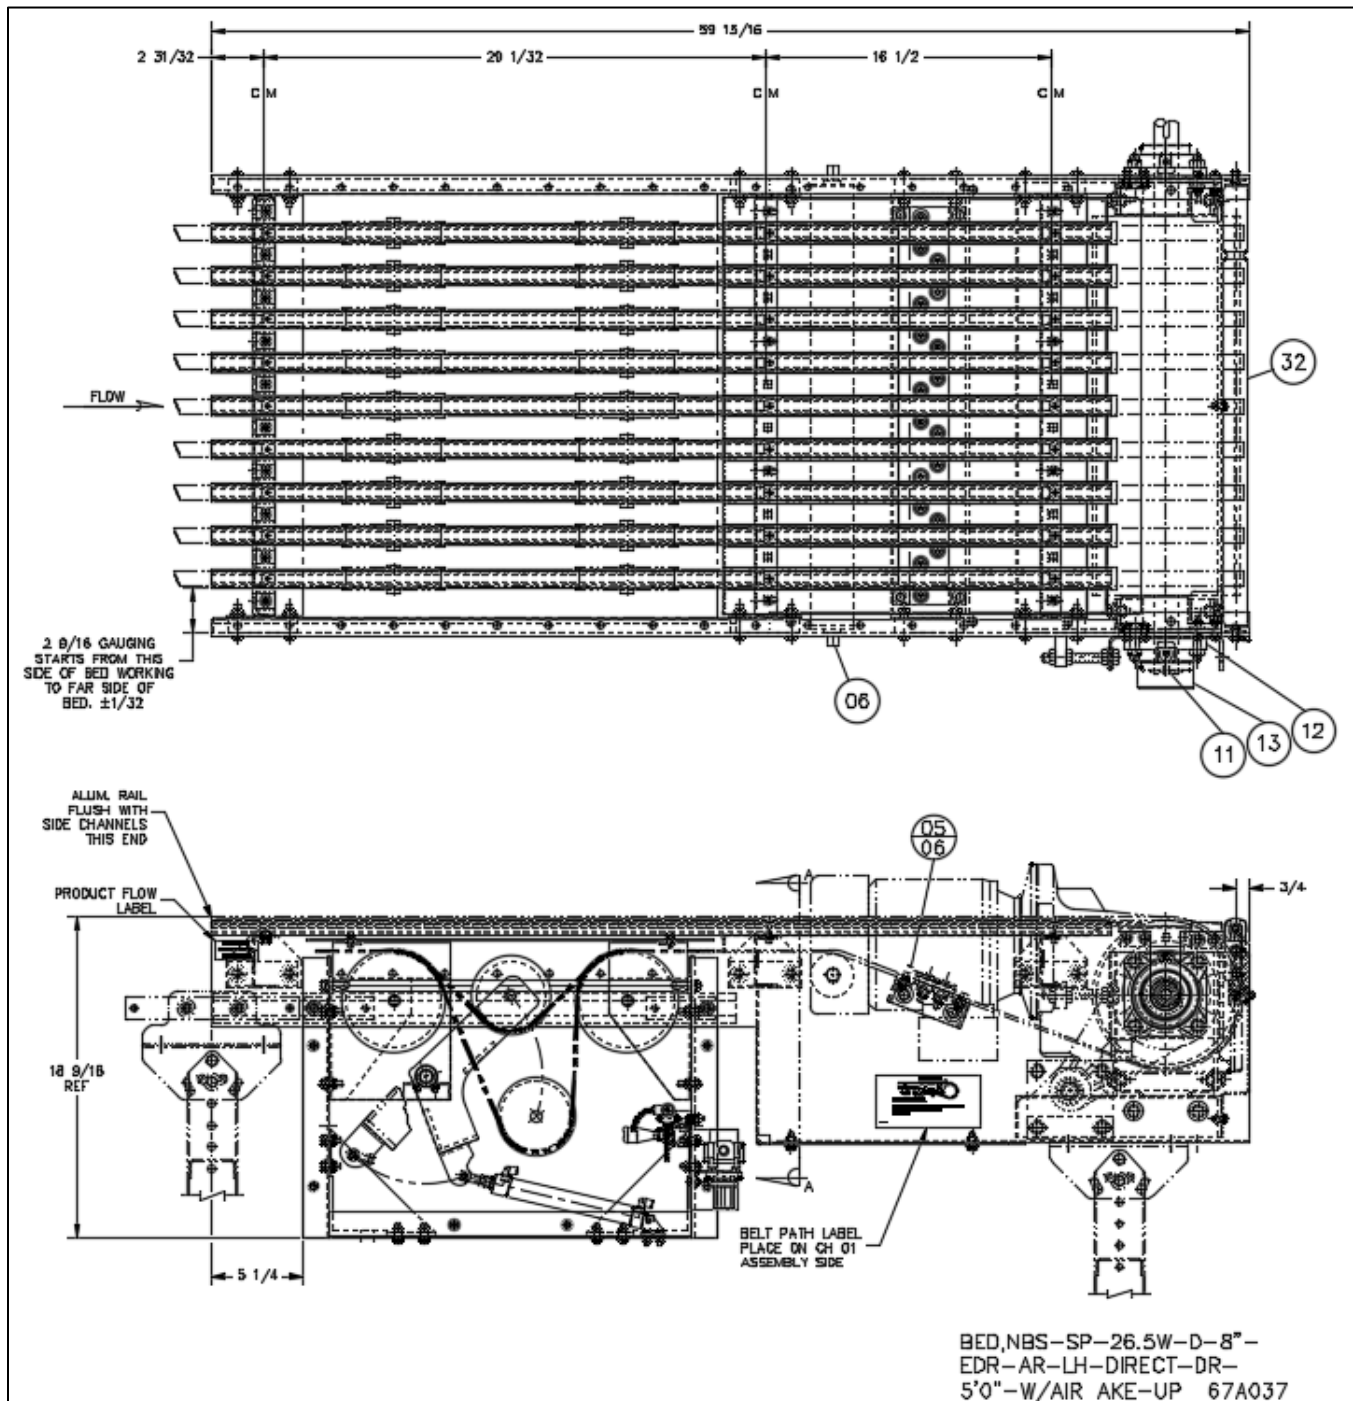

11.4.1: Replacement Parts – NBS PolySort Standard End Drive-AR

DRIVE BED, NBS90 POLYSORT STANDARD END DRIVE		
BED,NBS SP-26.5W-D-8"-EDR-AR, LH-5'0"-DIRECT-W/AIR TAKEUP		26.5W
Balloon	Description	Item #
05/06	BRG, R6 ZZ C3	90050111
06	PULLEY,26.5NBS-SP 2.5 DIA	1212889
11	PULLEY,8"DIA DR 26.5NBS-SP	1205794
12	BRG,FLG 4BOLT X 1-7/16"	1114091
13	COVER,BRG END EC-207-Y,SNAP ON STYLE	1114092
32	ROLLER,DR GAP 26.5NBS-SP	1202590
BELT TAKE-UP SUB ASY 26.5NBS-SP		----
01	WHEEL,IDLER PULLEY 5.5" DIA	1214526
02	WHEEL,IDLER PULLEY 4" DIA	1214527
18	CYL,AIR BIMBA 097-DP	1213259
26	TUBING,3/8"POLYU-95DURO 1/4"ID	E0001392
27	TUBING,1/4"POLYU-95DURO.160ID	E0001391
50	VALVE,CLIPPARD MMV-L4QD 4 WAY	1115797
51	REGULATOR,SMC	1133882
REF DWG# 67A037 & 67S054		


11.5: NBS90 POLYSORT BELT TAKE-UP

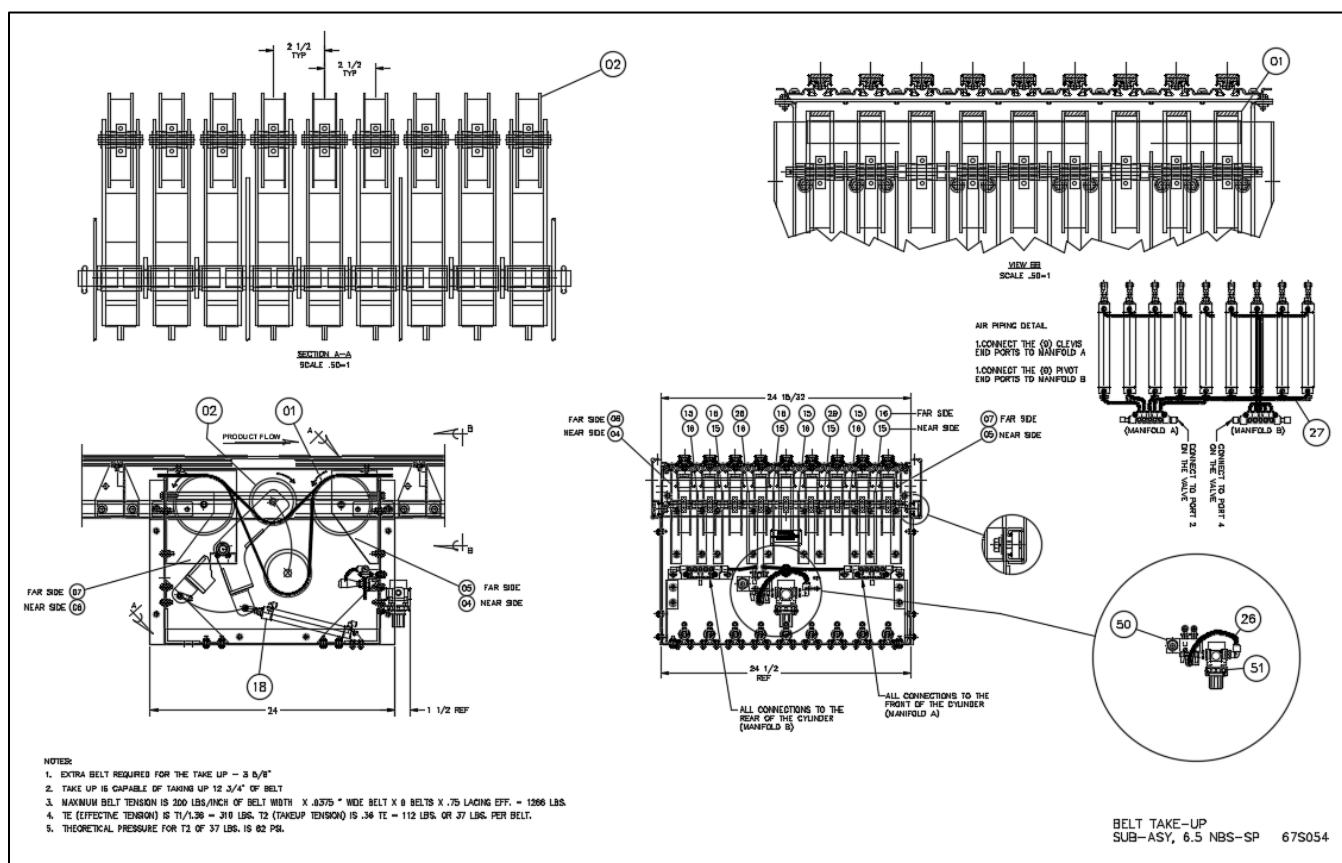

11.5.1: Replacement Parts – NBS90 PolySort Belt Take-up

TAKE-UP, 26.5 PolySort ASY		
Balloon	Description	Item #
01	WHEEL, IDLER PULLEY 5.5" DIA	1214526
02	WHEEL, IDLER PULLEY 4" DIA	1214527
18	CYL, AIR BIMBA 097-DP	1213259
26	TUBING, 3/8" POLYU-95DURO 1/4" ID	E0001392
27	TUBING, 1/4" POLYU-95DURO.160ID	E0001391
50	VALVE, CLIPPARD MMV-L4QD 4 WAY	1115797
51	REGULATOR, SMC	1133882
Ref Dwg# 67S054		


11.6: NBS90 POLYSORT TRANSFER ASSEMBLY

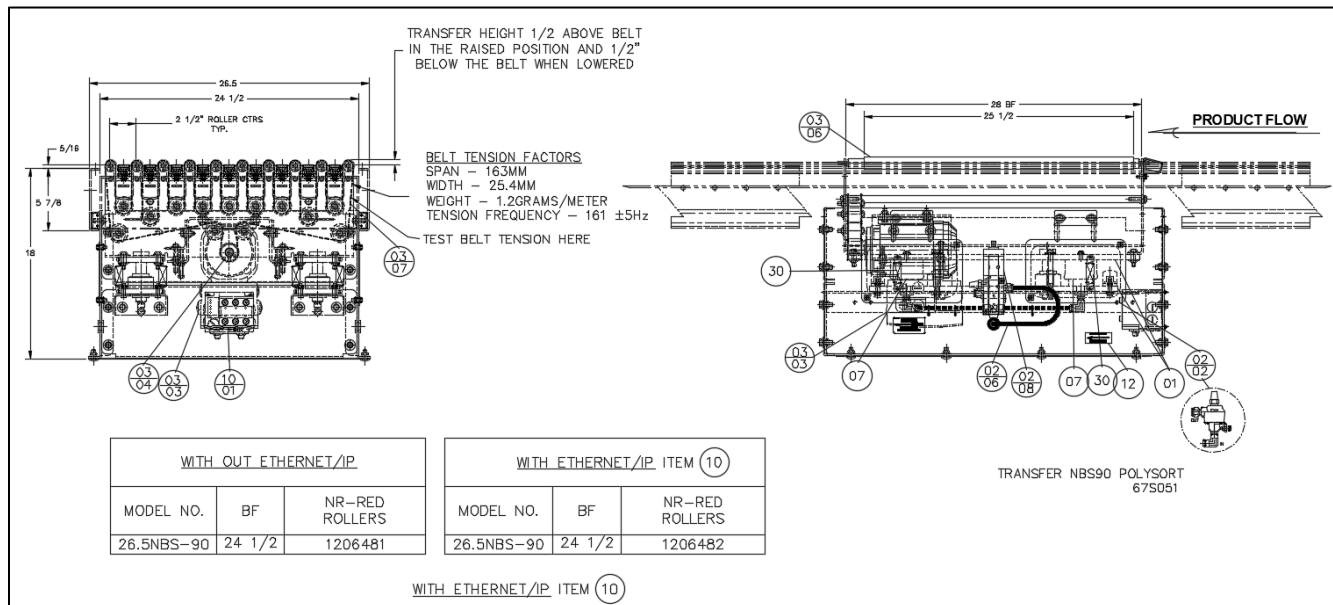

11.6.1: Replacement Parts - NBS90 PolySort Transfer Assembly

NBS90 PolySort Transfer		
TRANS,NBS-90D-26.5-POLYSORT-__VDC WITH OR WITHOUT ETHERNET		26.5W
Balloon	Description	Item #
01	LIFTTABLE,NBS-90 POLYSORT	1206338
07	AIRBAG,FIRESTONE #W02-358-3000	90000025
30	SPRING,EXT 3/4OD X 2"LG .072W	1213570
02/02	VALVE,QUICK EXHAUST #QE3	89000034
02/06	TUBING,3/8"POLYU-95DURO 1/4"ID	E0001392
02/08	VALVE,SMC 3WAY 24VDC 2.2CV,W/FITTINGS NBS-SP90 POLYSORT	1206332
03/03	MTR,EURO MOVIMOT 0.75HP 460V,PRESET F1=4.5T1=0 DIPS SET OFF	1203208
03/04	SHEAVE,DRIVE NBS-SP POLY SORT,304SS	1206407
03/06	ROLLER,NBS-SP90-25.5 28BF,NR-RED COATED	1206310
03/07	BELT,HABASIT 1"WIDE X 150.50",#S-10/15 ENDLESS	1202961
10/01	MOD, MOVIMOT,ETHERNET/IP,W/ MFZ21D CONNECTOR BOX	1204731
		REF DWG# 67S051


11.7: NBS90 POLYSORT END PULLEY AR 1'6"

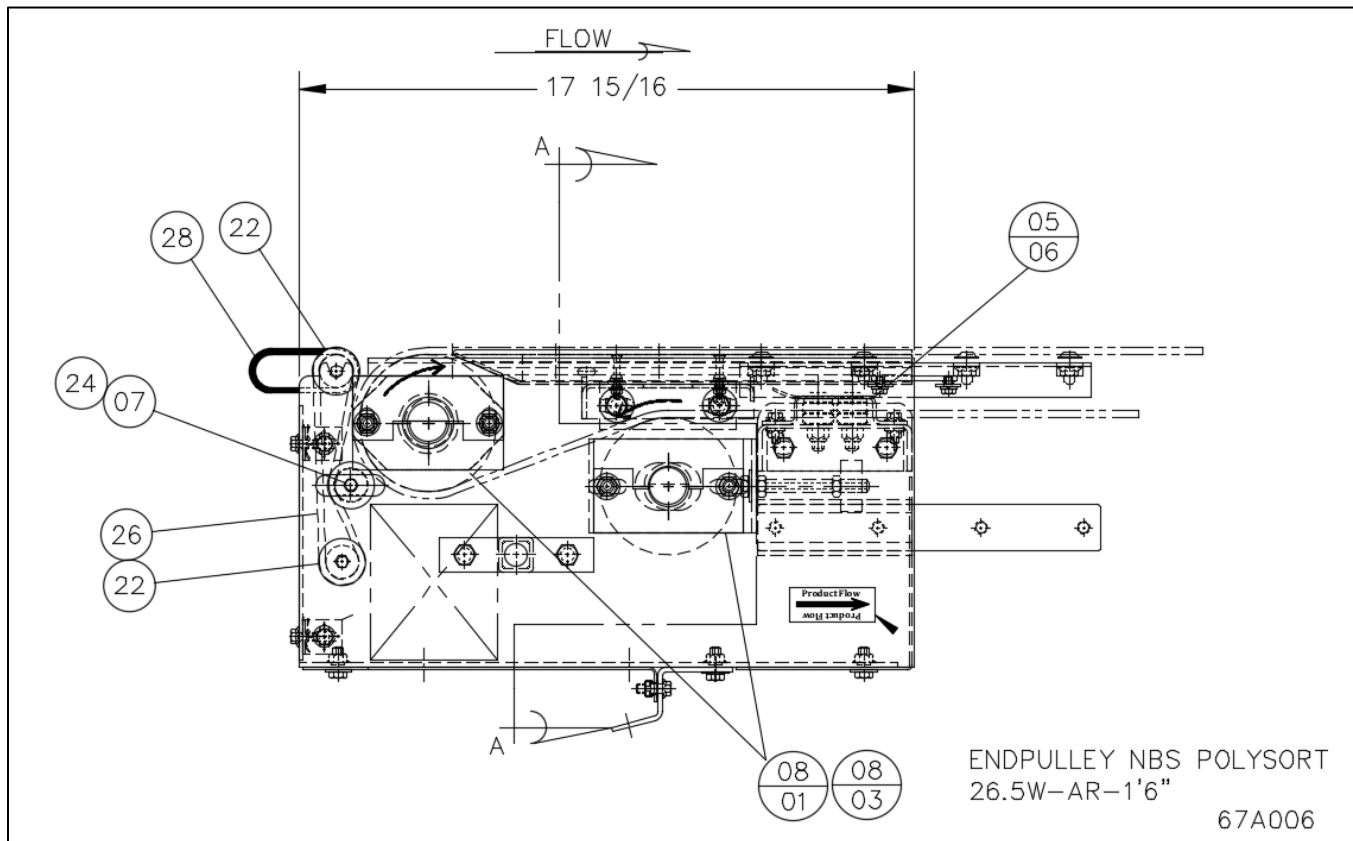

11.7.1: Replacement Parts – NBS90 PolySort End Pulley AR 1'6"

NBS PolySort End Pulley Aluminum Rail (AR) 1'6"		
END PULLEY, NBS-SP 26.5W AR 1'6"		
Balloon	Description	Width & Item
----	PHOTOEYE, RETO RAY10-PZ5EBL	1203440
07	ROLLER, SLIDE 11/32 HEX NBS-SP	E0002716
22	ROLLER, SLV 26.5NBS-SP E-PULL	1202529
24	ROLLER, IDLER 26.5NBS-SP 4" END	1202530
26	ORING, 83A 3/16 X 12-1/2"	90530019
28	ORING, 83A 5/32 X 6-1/4" ST TRANS	E0001299
05/06	BRG, R6 ZZ C3	90050111
08/01	PULLEY, 4" DIA 26.5NBS-SP	1204198
08/03	COLLAR, ECCENTRIC LOCK 1-3/16" B	90140052
Ref Dwg# 67A006		


11.8: NBS90 POLYSORT ENCODER ASSEMBLY

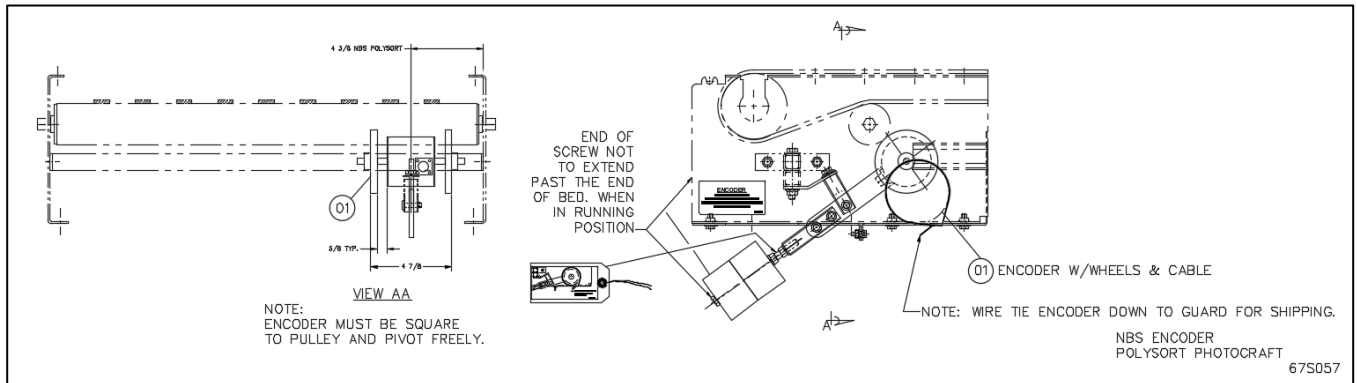

11.8.1: Replacement Parts – NBS90 PolySort Encoder Assembly

Encoder, NBS SP-Photocraft, PolySort		
ENCODER,NBS POLYSORT		
Balloon	Description	Item #
01	ENCODER,NBS SP-PHOTOGRAPH-POLYSORT	1215409
REF DWG# 67S057		


11.9: NBS90-SP INTERMEDIATE BED W/AIR TAKE-UP 5'0"

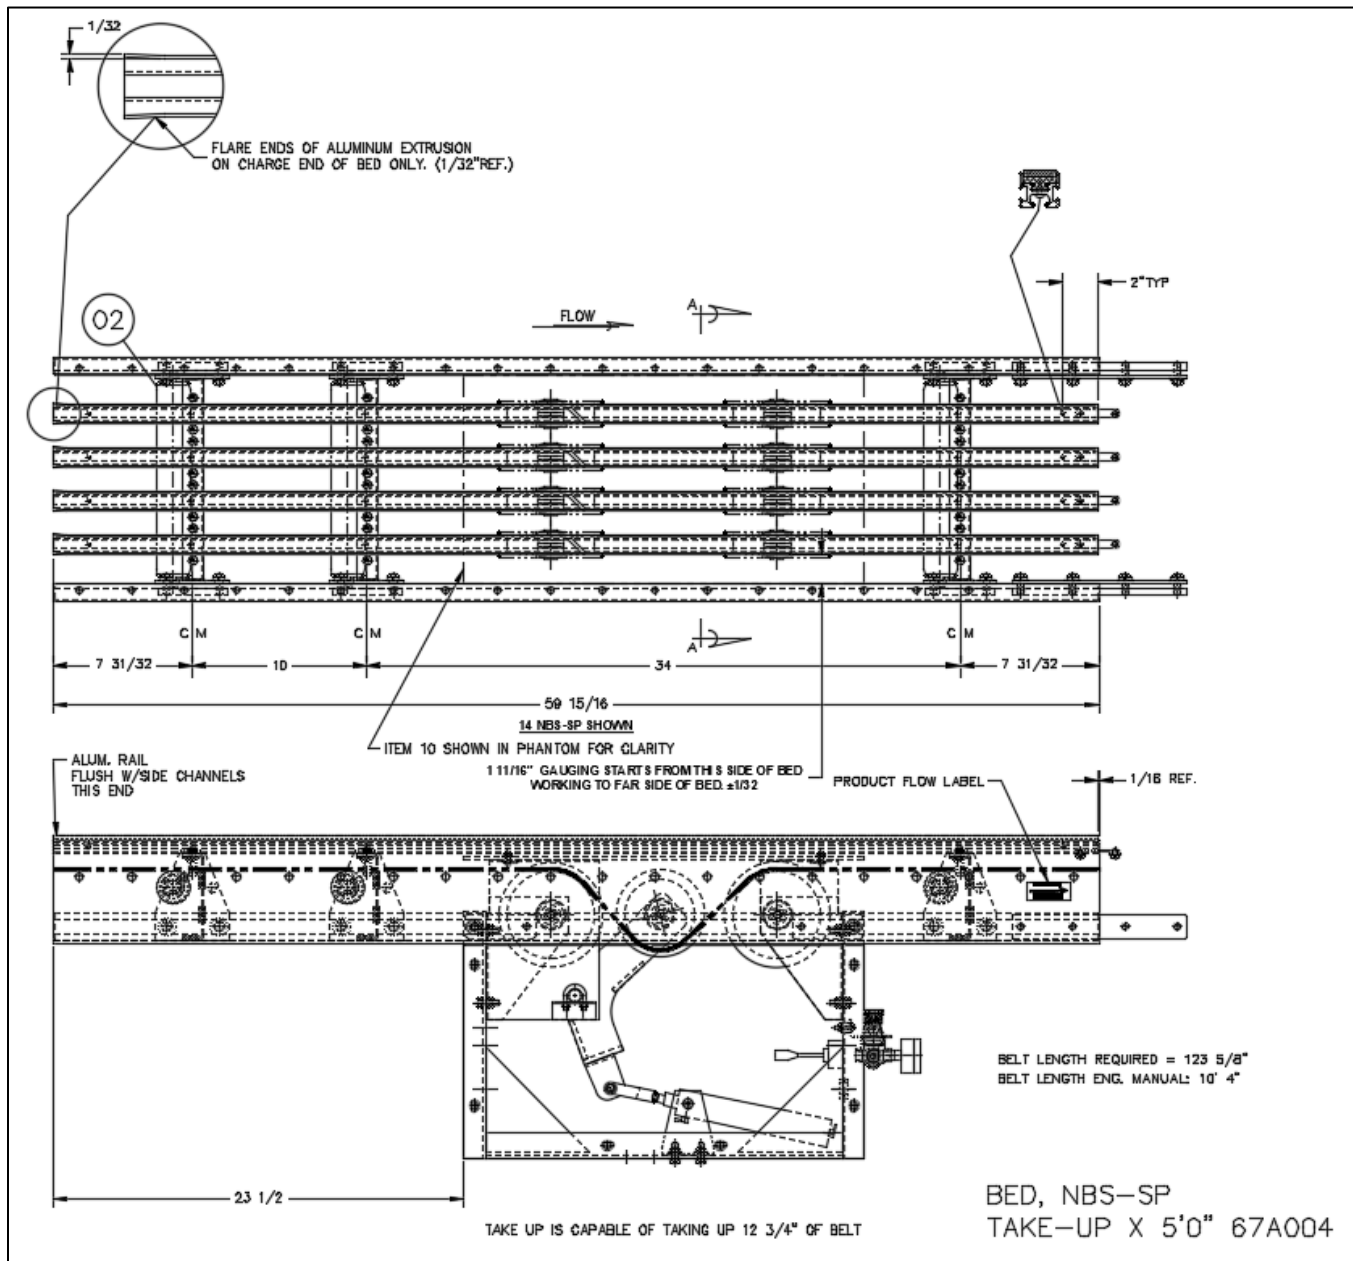

11.9.1: Replacement Parts – NBS90-SP Intermediate Bed AR W/Air Take-up 5'0"

NBS90-SP Belt Take-up			
BED,NBS SP-__W-TAKEUP-AR-5'0"-AIR OP		11.5W	14W
Balloon	Description	Item #	Item #
02	ROLLER,RET __NBS-SP 1.9PRBG	E0002784	E0002785
TAKEUP,___.NBS-SP ASY		----	----
01	WHEEL,ASY NBS-SP TAKE-UP 6"OD	E0002784	E0002784
02	WHEEL,ASY NBS-SP TAKE-UP 5"OD	E0002785	E0002785
18	CYL,BIMBA BFT-176-DNR	E0002793	E0002793
AIR,REGULATOR ASY NBS-SP TAKE-UP		----	----
25/01	REGULATOR,1/4"NPT PORTS	E0002964	E0002964
25/02	GAUGE, PARKER K4520N14160	89000133	89000133
25/07	VALVE, 4 WAY HAND LEVER	E0002795	E0002795
27	TUBING,1/4"POLYU-95DURO.160ID	E0001391	E0001391
REF DWG# 67A004 & 67S004			


11.10: NBS90-SP STANDARD END DRIVE AR-RIGHT HAND ONLY

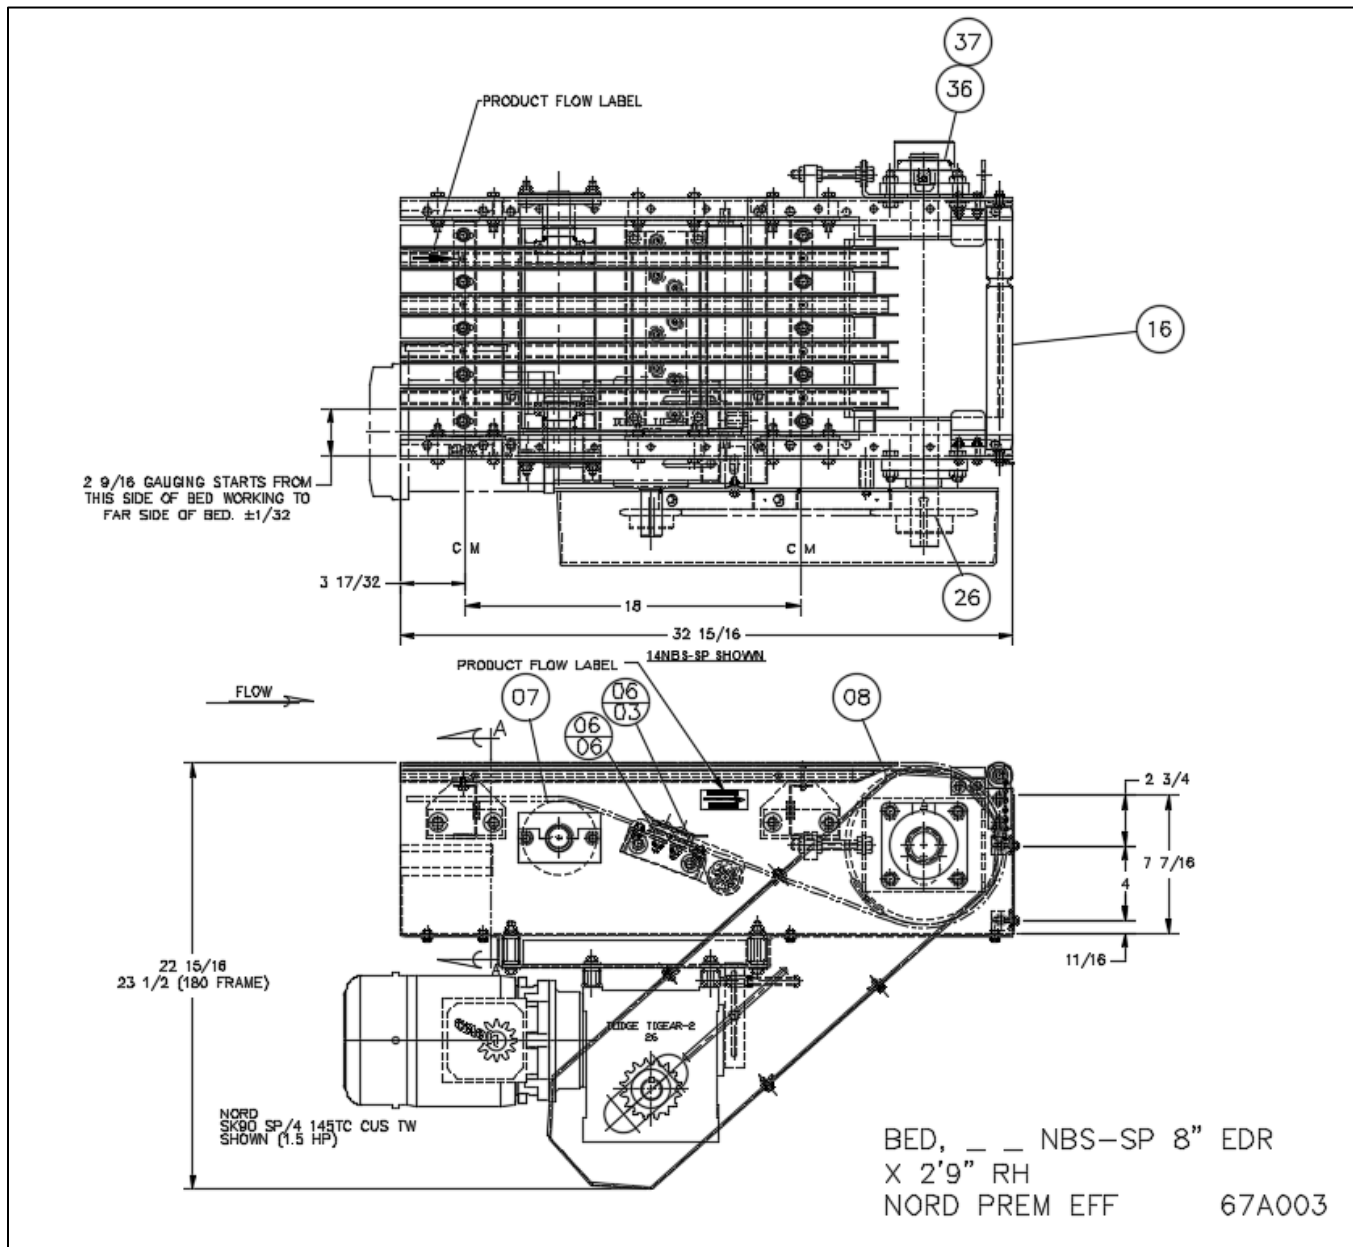

11.10.1: Replacement Parts – NBS-SP Standard End Drive AR-Right Hand Only

DRIVE BED, NBS-SP STANDARD END DRIVE AR-RIGHT HAND ONLY			
BED,NBS SP-__W-D-8"STD-EDR-AR-RH-2'9"		11.5W	14W
Balloon	Description	Item #	
08	PULLEY,8"DIA DR 11.5NBS-SP	E0002551	E0002552
16	ROLLER,DR GAP 11.5NBS-SP	E0002820	E0002821
26	BRG,FLG 4BOLT X 1-7/16"B	90050211	90050211
36	BRG,FLG 4BOLT X 1-7/16"	1114091	1114091
GUIDE,BELT __.NBS-SP ASY		----	----
06/03	ROLLER,RET __.NBS-SP 1.9PRBG	E0002714	E0002715
06/06	BRG, R6 ZZ C3	90050111	90050115
PULLEY,ASY 4"DIA __.NBS-SP		----	----
07	PULLEY,4"DIA __.NBS-SP	E0002762	E0002763
---	COLLAR,ECCENTRIC LOCK 1-3/16"B	90140052	90140052
Ref Dwg# 67A003			


11.11: NBS90- SP BELT TAKE-UP

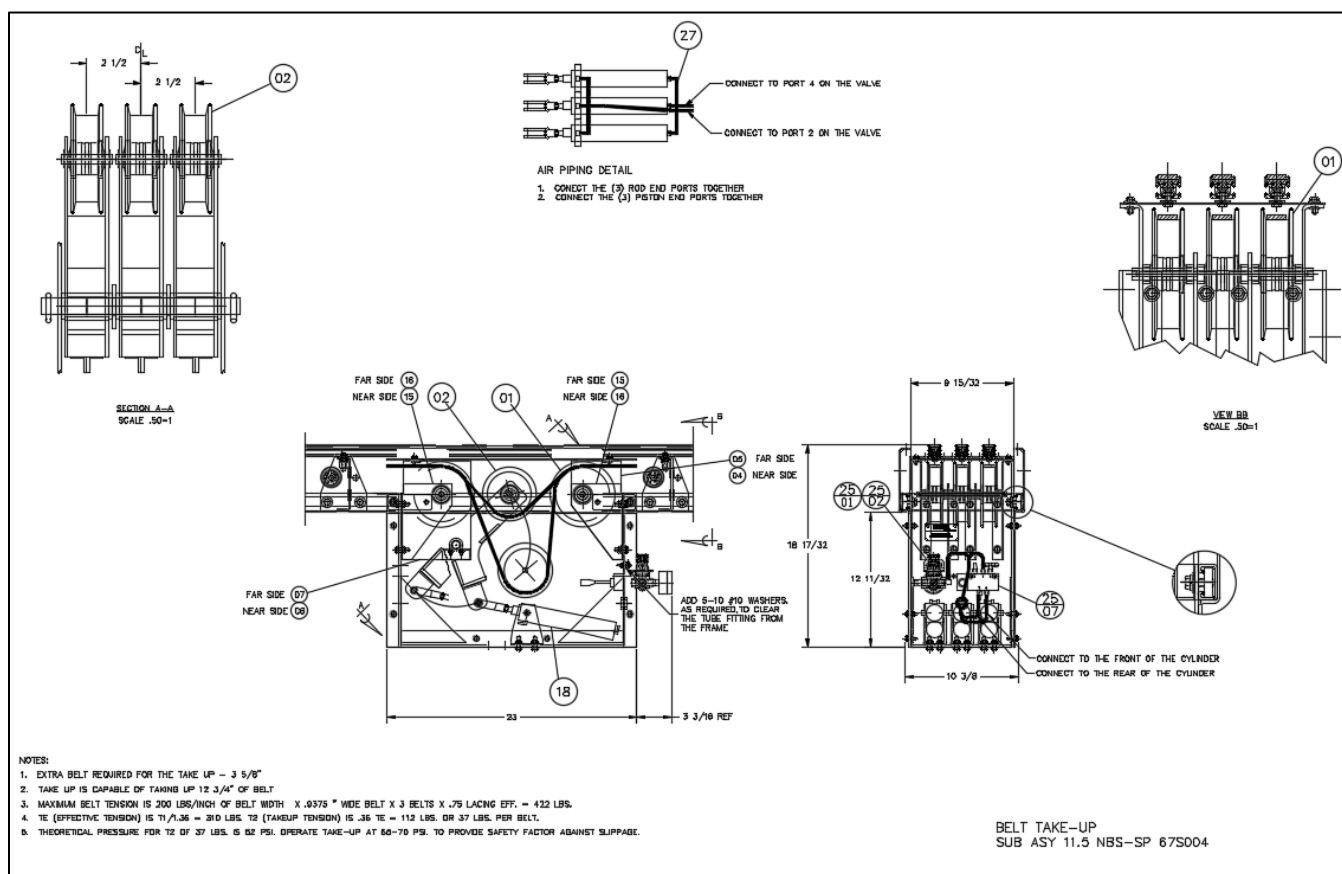

11.11.1: Replacement Parts – NBS90-SP Belt Take-up

TAKE-UP, NBS-SP		
Balloon	Description	Item #
TAKEUP, _ _ _ NBS-SP ASY		----
01	WHEEL,ASY NBS-SP TAKE-UP 6"OD	E0002784
02	WHEEL,ASY NBS-SP TAKE-UP 5"OD	E0002785
18	CYL,BIMBA BFT-176-DNR	E0002793
AIR,REGULATOR ASY NBS-SP TAKE-UP		----
25/01	REGULATOR,1/4"NPT PORTS	E0002964
25/02	GAUGE, PARKER K4520N14160	89000133
25/07	VALVE, 4 WAY HAND LEVER	E0002795
27	TUBING,1/4"POLYU-95DURO.160ID	E0001391
Ref Dwg# 67S004		

11.12: NBS90 SP TRANSFER ASSEMBLY DIAGRAM

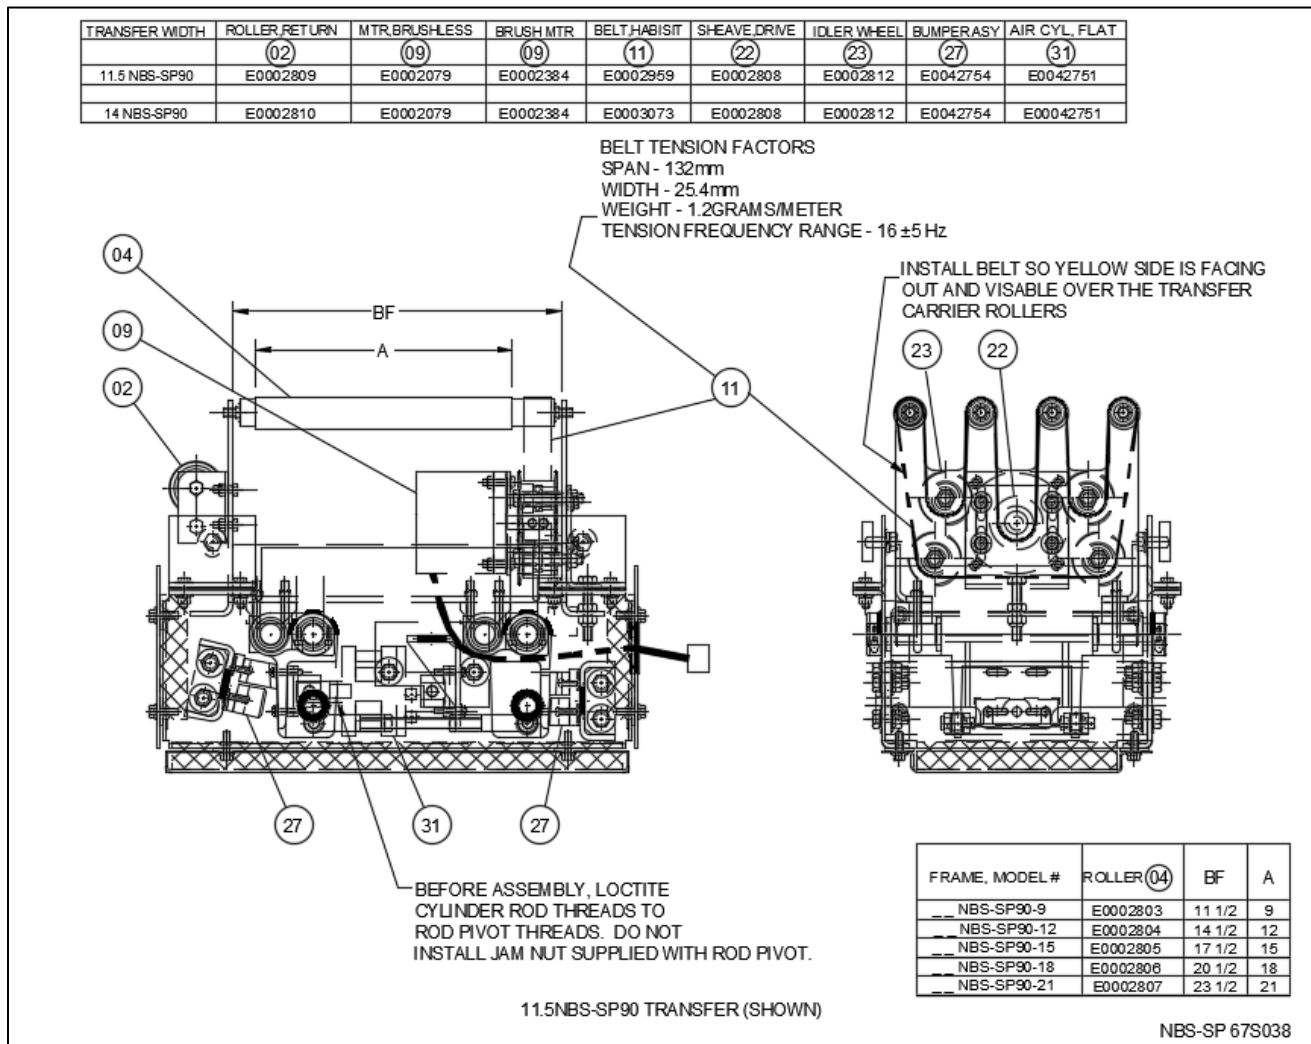


11.12.1: Replacement Parts NBS90 SP Transfer Assembly

NBS90-SP Transfer			
TRANS, NBS SP-90D-__ W-21L-AR __ VDC		11.5W	14W
Balloon	Description	Item #	Item #
31	CYL, FLAT-1 1" STROKE 2" BORE	1110956	1110956
----	TUBING, 1/4" POLYU-95DURO.160ID	E0005539	E0005539
----	TUBING, 1/4" POLYU-95DURO.160ID	E0001391	E0001391
02	ROLLER, RETURN NBS-SP, 1.9PRBG	E0002809	E0002810
04	ROLLER, NBS-SP90-21 23.5BF, BLACK CPE/EPDM FOAM SLEEVE	E0002807	E0002807
04	ROLLER, NBS-SP90-21 23.5BF, W/POLYURETHANE SLEEVE	E0002807	1102522
09	MTR, 90VDC 5/16HP 1700 RPM,	E0002384	E0002384
11	BELT, HABASIT	E0002959	E0003073
22	SHEAVE, DRIVE NBS-SP90 TRANS	E0003090	E0003090
01	VALVE, SMC 4WAY 110VAC DIN CONN (USED W/120VAC)	E0038770	E0038770
01	VALVE, SMC 4WAY 24VDC W/FITT, NBS-SP90 (USED W/24VDC)	E0042755	E0042755

REF DWG# 67S038 & 67S039


11.13: NBS90 SP END PULLEY ASSEMBLY

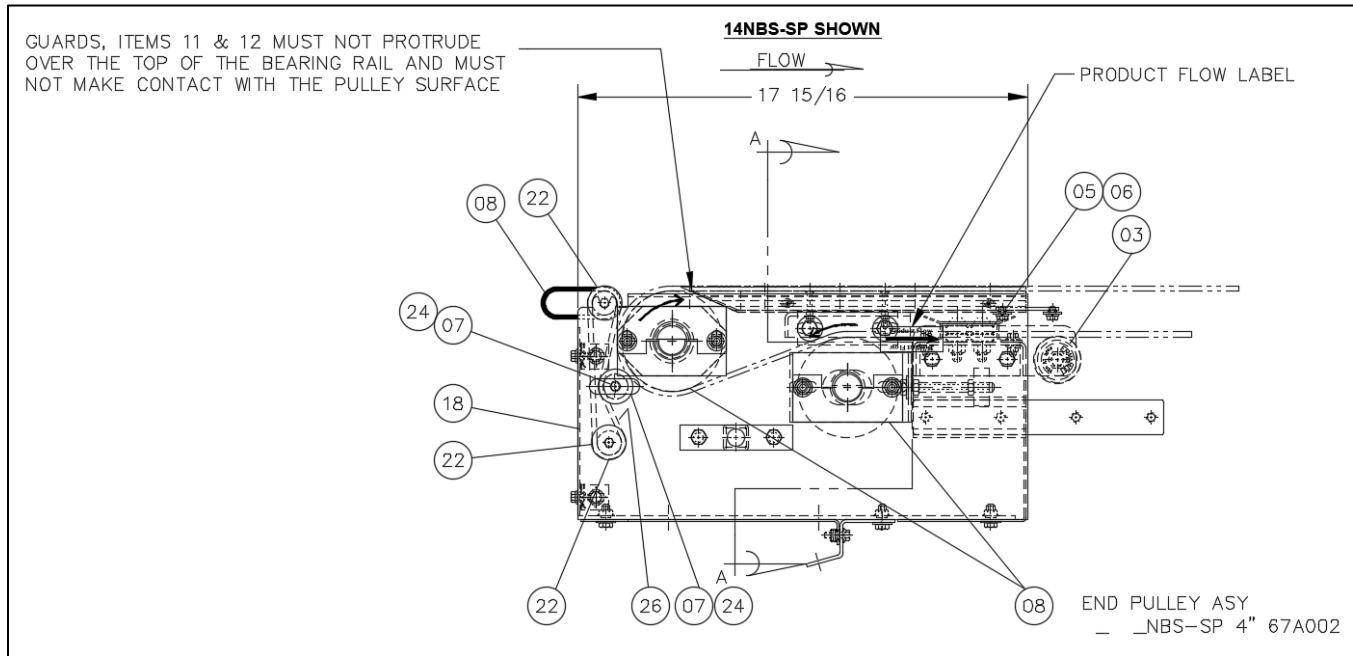

11.13.1: Replacement Parts – NBS90 SP & PolySort End Pulley Assembly

NBS90 SP & PolySort End Pulley Assembly			
	WIDTH	11.5NBS-SP	14NBS-SP
Balloon	Description	Item	Item
03	ROLLER,RET _ _ _ NBS-SP 1.9PRBG	E0002714	E0002715
06	BRG, R6 ZZ C3	90050111	90050111
07	ROLLER,SLIDE 11/32HEX NBS-SP	E0002716	E0002716
08	PULLEY,4"DIA _ _ _ NBS-SP	E0002762	E0002763
08	COLLAR,ECCENTRIC LOCK 1-3/16"B	90140052	90140052
11	PULLEY,26.5NBS-SP 2.5 DIA	----	-----
22	ROLLER,SLV _ _ _ NBS-SP E-PULL	E0002816	E0002817
---	PHOTOEYE,RETO RAY10-PZ5EBL	----	-----
24	ROLLER,IDLER _ _ _ NBS-SP 4"END	E0002818	E0002819
26	ORING,83A 3/16 X 12-1/2"	90530019	90530019
28	ORING,83A 5/32 X6-1/4"ST TRANS	E0001299	E0001299
TAKEUP,26.5NBS-SP ASY (REF DWG 67S054)		----	-----
01	WHEEL,ASY NBS-SP TAKE-UP 6"OD	----	-----
02	WHEEL,ASY NBS-SP TAKE-UP 5"OD	----	-----
18	CYL,BIMBA BFT-176-DNR	----	-----
26	TUBING,3/8"POLYU-95DURO 1/4"ID	----	-----
27	TUBING,1/4"POLYU-95DURO.160ID	----	-----
50	VALVE,CLIPPARD MMV-L4QD 4 WAY	----	-----
51	REGULATOR,SMC	----	-----
Ref Dwg# 67A002 & 67A030 & 67A031 (67S054)			

11.14: NBS90 SP ENCODER ASSEMBLY

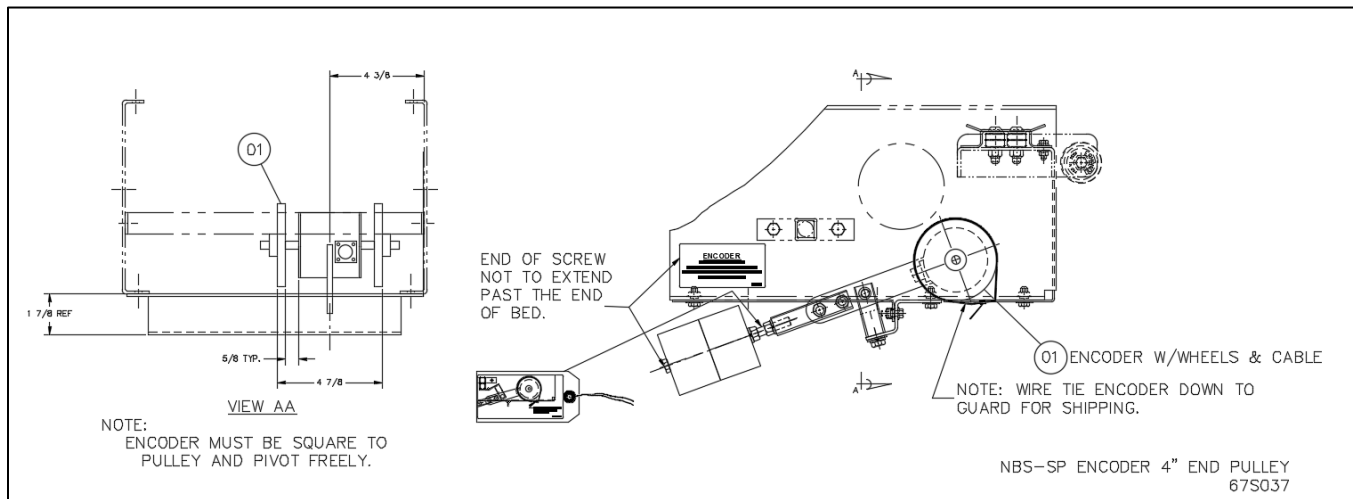

11.14.1: Replacement Parts – NBS90 SP Encoder Assembly

Encoder with Cable & Connectors		
ENCODER,NBS SP-PHOTOGRAPH		
Balloon	Description	Item #
01	ENCODER,PROG,EXT-SHAFT,WHEELS,8-30VOLTS W/(2)# MW-1-B WHEELS	E0006585
REF DWG# 67S037		

GENERAL INFORMATION

Website Link:

mhs-conveyor.com

MHS Conveyor INFORMATION

Mission

MHS Conveyor, located in Norton Shores, Michigan, is a leading deliverer of “smart” material handling systems, technologies, products, and services, creating solutions for material flow applications. As a global supplier of conveyor systems and equipment since 1964, MHS Conveyor provides sorters, conveyors, and accessories to satisfy a broad spectrum of accumulation, transportation, and sortation applications.



MHS Conveyor
1300 E. Mount Garfield Road
Norton Shores MI 49441-6097 USA
231.798.4547
Email: us-info@mhs-conveyor.com
Web Site : mhs-conveyor.com



Regional sales offices and authorized Business Partners located throughout the United States and Canada. Licensees and Business Partners in Europe, South America, and Southeast Asia.